Graco Standard Warranty

Graco warrants all equipment manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale by an authorized Graco distributor to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This Warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If the inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the cost of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach or warranty must be brought within (2) years of the date of sale.

Graco makes no warranty, and disclaims all implied warranties of merchantability and fitness for a particular purpose in connection with accessories, equipment, materials or components sold but not manufactured by Graco. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.) are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avior convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés à la suite de ou en rapport, directement ou indirectement, avec les procedures concernées.

Graco Phone Number

TO PLACE AN ORDER, contact your Graco distributor, or call this number to identify the distributor closest to you: 1-800-367-4023 Toll Free

All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.

Sales Office: Minneapolis, Detroit

Foreign Office: Belgium, Korea, Hong Kong, Japan GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

www.graco.com
PRINTED IN USA 310295 December 1998 Revised April 1999

309918

GRACO PROFESSIONAL ROTARY SPRAY SYSTEM

WARNING: Read Before Operating Machinel
ALWAYS WEAR PROTECTIVE EYE WEAR
KEEP CLEAR OF ROTATING NOZZLES
NEVER LOCK TRIGGER GUN OPEN WITH ANY DEVICE
DRAIN WATER IN COLD WEATHER TO AVOID FREEZING
Tampering with any part of this machine will void all warranties

Instructions for Operation

- 1. Connect to Pressure Washer
- Turn water on and open valve. Open trigger gun for flow of water through nozzles. Nozzles must have flowing spray. If not, remove tips and clean; reassemble, making sure that groove of nozzle is parallel to spray bar. Use pipe dope when installing nozzles.
- 3. Start Pressure Washer. The Rotary Cleaner is ready for operation.
- 4. Walk slowly behind the Rotary Cleaner, cleaning as you go. If striping occurs, slow down your pace.
- Check "weep holes" on top of swivel periodically. Water will seep slowly; if water shoots out, stop and replace seals. Swivel assembly can be rebuilt with Seal Kit 244830.
- 6. For maximum effectiveness keep spray tips clean. If the machine vibrates, stop and clean spray tips.

CAUTION: Striking any raised obstacle during operation will damage machine. If contact does occur and results in vibration when operating machine, STOP and replace spray bar. Continued operation could result in serious injury or damage to machine.

DO NOT LET MACHINE REMAIN STATIONARY ON SOFT SURFACES, SUCH AS WOOD.


Operating Parameters: 2,000 to 4,000 PSI 212° F Max Temp

SI Hot or Cold Water Dimensions: 77" x 19" x 12"

2500 Max RPM


Operating Weight: 24 lbs

Graco Parts List 116562

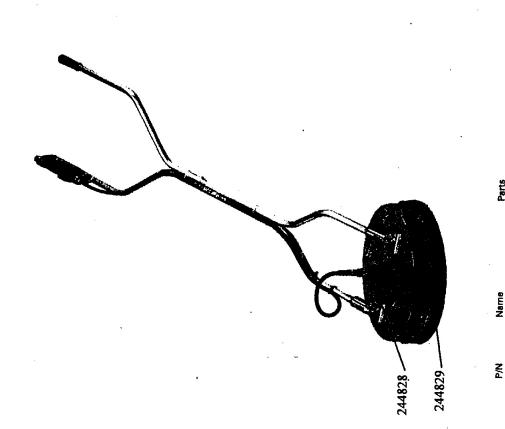

		brush, clips & rivets
Name Parts	244828 Kit, Swivel Assembly	244829 Kit, Brush
P/N	244828	244829

Swivel Assembly Parts List

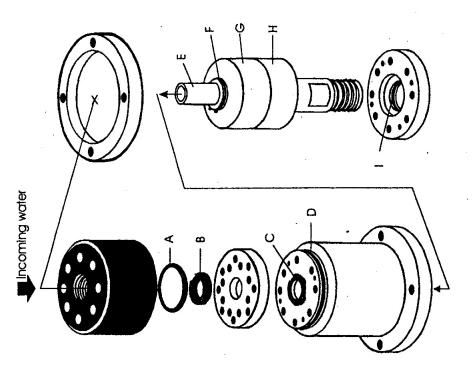

P/N	Name .	Parts
4830	244830 Kit, Seal	A- Static O-ring B- Main Seal
		C- Seconary Seal D- Static O-ring
		I- Quad seal
14831	244831 Kit, Shaft	n
14832	244832 Kit, Bearing	G&H-Bearings, F-Snap rings
14833	244833 Kit, Spray Bar	spray bar and tips