

8900 Proportioner

309790 rev.K

Configured product offering for dispensing fixed or variable ratio of two fluids.


2500 psi (17 MPa, 170 bar) Maximum Working Pressure



Important Safety Instructions

Read all warnings and instructions in this manual.
Save these instructions.

See page 8 for pump model numbers, ratios and working pressures.

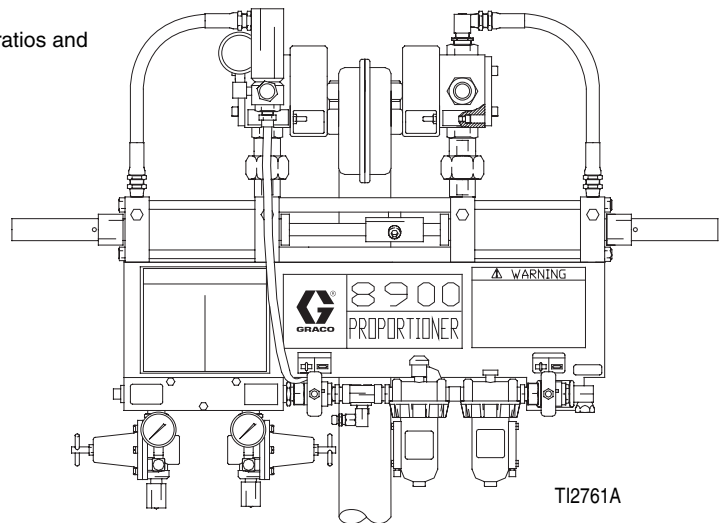

Fixed-ratio proportioner shown

PROVEN QUALITY. LEADING TECHNOLOGY.

Contents

| | | | |
|--|-----------|--|-----------|
| Manual Conventions | 3 | Disassemble Fluid Valve | 48 |
| Theory of Operation | 5 | Parts | 50 |
| Use | 5 | 8900 Proportioner, Fixed Ratio | 50 |
| Major Components | 5 | 8900 Proportioner, Variable Ratio | 52 |
| Ratio Proportioning | 5 | Cylinder Assemblies | 54 |
| System Components and Operation Overview | 5 | Limit Valve | 55 |
| Models | 8 | Air Control | 56 |
| Installation | 10 | 4-Way Valve | 58 |
| Typical Installation | 10 | Pump Feed Module Selection for Component A or Component B | 60 |
| Location | 10 | 20:1 President on 5 Gallon Ram | 60 |
| Ground | 12 | 34:1 Senator on 5 Gallon Ram | 62 |
| Flush | 13 | 23:1 Monark on 5 Gallon Ram | 64 |
| Setup | 15 | 20:1 President on 55 Gallon Ram | 66 |
| Set the Ratio (variable ratio models only) | 15 | 34:1 Senator on 55 Gallon Ram | 68 |
| Output Charts/Ratio Settings | 16 | 31:1 Bulldog on 55 Gallon Ram | 69 |
| Before You Load Material | 19 | 20:1 Senator on 55 Gallon Drum | 70 |
| Load Component A | 20 | 9:1 DynaMite on 1 Gallon Can Ram | 71 |
| Prime Pump A | 21 | 10 Gallon Press Tank with 15:1 Booster | 72 |
| Load Component B | 22 | 10:1 President 5 Gallon Pail Cover | 73 |
| Prime with Component B | 25 | Mix Kit Selection | 74 |
| Fill the 8900 Proportioner with Material | 25 | Cartridge Fill Medium Viscosity Wide Ratio | 74 |
| Operation | 28 | Cartridge Fill High Viscosity Wide Ratio | 76 |
| Pressure Relief Procedure | 28 | Brush Grade High Viscosity Wide Ratio | 78 |
| Dispense Mixed Material | 29 | 2K UltraLite 20 ft Automatic | 80 |
| Changing Component A Drum | 31 | 2K UltraLite 20 ft Hand Gun | 81 |
| Changing Component B Pail | 32 | 2K UltraLite 15 ft Hand Gun Wide Ratio Moisture Lock | 82 |
| Filling Component B Pressure Tank | 33 | High Volume Static Mix Manifold | 83 |
| Daily Procedures | 35 | High Volume Static Mix Kit with Pump Pilots | 84 |
| Troubleshooting | 38 | Stanchion | 85 |
| 8900 Proportioner Operating Pressures | 38 | Boom Assembly | 86 |
| Air Supply Troubleshooting Chart | 39 | Technical Data | 87 |
| Pump Troubleshooting Overview | 40 | Graco Standard Warranty | 88 |
| Troubleshooting Guide: Feed pumps | 41 | Graco Information | 88 |
| Troubleshooting Guide: 8900 Proportioner | 42 | | |
| Troubleshooting Guide: Manifold/Mixer | 43 | | |
| Preventive Maintenance | 44 | | |
| Service and Repair | 45 | | |
| Repair the Cylinder (Fixed Ratio) | 45 | | |
| Replace Air Valve | 47 | | |

Manual Conventions

Warning

WARNING



A warning alerts you to the possibility of serious injury or death if you do not follow the instructions.

Symbols, such as fire and explosion (shown), alert you to a specific hazard and direct you to read the indicated hazard warnings (pages 3-4) for detailed information.

Caution

CAUTION

A caution alerts you to the possibility of damage to or destruction of equipment if you do not follow instructions.

Note



A note indicates additional helpful information.

Warning



Skin Injection Hazard

Spray from the gun, hose leaks, or ruptured components can inject fluid through skin and cause extremely serious injury, including need for amputation. Fluid splashed in the eyes or on skin can cause serious injury.

- Fluid injected into skin might look like just a cut, but it is a serious injury. **Get immediate surgical treatment.**
- Do not point the gun at anyone or any part of the body.
- Do not put hand or fingers over the spray tip/nozzle.
- Do not stop or deflect leaks with hand, body, glove or rag.
- Do not “blow back” fluid; this is not an air spray system.
- Always have tip guard and trigger guard on the gun when spraying.
- Check gun diffuser weekly. Refer to gun manual.
- Check trigger safety operation before spraying. Lock trigger safety when you stop spraying.
- Follow the **Pressure Relief Procedure**, page 28, if the spray tip/nozzle clogs and before cleaning, checking or servicing the equipment.
- Tighten fluid connections before operating equipment.
- Check hoses, tubes, and couplings daily. Replace worn or damaged parts immediately. Do not repair high pressure couplings; replace the entire hose.
- Fluid hoses must have spring guards on both ends to help protect them from rupture caused by kinks or bends near the couplings.



Toxic Fluid Hazard

Hazardous fluids or toxic fumes can cause serious injury or death if splashed in the eyes or on skin, swallowed, or inhaled.

- Know specific hazards of the fluid. Read fluid manufacturer’s warnings.
- Wear appropriate protective clothing, gloves, eyewear, and respirator.



Warning



Equipment Misuse Hazard

Equipment misuse can cause equipment to rupture, malfunction, or start unexpectedly and cause serious injury.



- This equipment is for professional use only.
- Read manuals, tags, and labels before operating equipment.
- Use equipment only for its intended purpose. If you are uncertain, call your Graco distributor.
- Do not alter or modify equipment. Use only genuine Graco parts and accessories.
- Check equipment daily. Repair or replace worn or damaged parts immediately.
- Do not exceed maximum working pressure of lowest rated system component.
- Use fluids and solvents that are compatible with equipment wetted parts. See **Technical Data** section of all equipment manuals. Read fluid and solvent manufacturer's warnings.
- Route hoses away from traffic areas, sharp edges, moving parts, and hot surfaces. Do not expose Graco hoses to temperatures above 180°F (82°C) or below -40°F (-40°C).
- Do not kink or overbend hoses or use hoses to pull equipment.
- Comply with all applicable local, state, and national fire, electrical, and other safety regulations.
- Do not use excessive drum separation air pressure as the drum could rupture. Make sure the drum is not damaged and the ram plate is free to exit the drum before applying air pressure.



Fire and Explosion Hazard

Improper grounding, poor ventilation, open flames or sparks can cause a hazardous condition and result in fire or explosion and serious injury.

- Ground the equipment and object being sprayed. See **Grounding**, page 12.
- If you experience static sparking or electric shock, **stop operation immediately**. Identify and correct the problem.
- Provide fresh air ventilation to avoid building up flammable fumes.
- Keep the spray area free of debris, including solvent, rags, and gasoline.
- Extinguish all sources of flames in the spray area, including pilot lights and cigarettes.
- Do not turn on or off any light switch or plug or unplug electrical equipment in the spray area while operating or if fumes are present.
- Do not operate a gasoline engine in the spray area.
- Keep a fire extinguisher in the work area.



Moving Parts Hazard

Moving parts, such as priming piston and wiper plate, can pinch or amputate fingers. Keep clear of moving parts when starting or operating equipment and when equipment is pressurized.

- Keep hands and fingers away from the priming piston.
- Keep hands away from the ram wiper plate and pail lip.
- Before servicing, follow the **Pressure Relief Procedure**, page 28, to avoid equipment startup.

Theory of Operation

Use

The 8900 Proportioner is used with two component materials where one or both components is high viscosity. This is typically found in the sealant and adhesive industry, where special requirements for loading and pumping necessitate the use of the 8900 proportioning system.

Major Components

The major components of the 8900 Proportioner system include the:

- Component A or major volume metering cylinder
- Component B or minor volume metering cylinder
- Component A or major volume feed supply
- Component B or minor volume feed supply

Ratio Proportioning

The A and B cylinders are positive displacement metering cylinders. Positive displacement cylinders displace a defined volume of fluid for a given stroke length.

On fixed ratio units, the volumetric ratio is the ratio of the area of the component A displacement cylinder to the area of the component B displacement cylinder. At a 1:1 ratio, the displacement cylinders are the same size. On higher ratio units the component A cylinder is usually the larger of the two. The ratio of the components is the difference in effective area between the cylinders.

On variable ratio units, the component B cylinder has an adjustable stroke length. The component A cylinder has a fixed stroke length. By setting the stroke adjustment to different points on the connecting linkage, you can change the stroke length of the B cylinder, which changes the mix ratio. You can calculate the material mix ratio from the ratio of the cylinder displacement volume.

Note that the mix ratio of the 8900 Proportioner is achieved by volumetric ratio of component A to component B and not by weight. These two ratios are often different depending on material properties.

System Components and Operation Overview

Feed Systems - Feed Pumps

Load the Feed Pumps and Proportioner

The A and B feed pumps/cylinders must completely fill (prime) on both strokes to ensure accurate material displacement.

With high viscosity materials, it is difficult for material to flow into the pump. Individual feed pumps are used to supply these materials under pressure to the 8900 Proportioner. When air is trapped in the feed system due to improper loading, a condition called cavitation occurs.

If cavitation occurs, part of the downstroke will be used to fill the vacuum before any material is actually displaced. Since the total stroke length is used to calculate mix ratio, this may result in an off-ratio condition.

To prevent cavitation with higher viscosity materials, both cylinders are pressure fed. The A pump is pressurized by a pneumatic ram supply unit applying a downward force on a 55-gallon plate fitted into the drum. A shovel action pump fluid inlet further aids in pump priming. Component B is delivered to the B pump by pressure fed 5- or 55-gallon supply modules, depending on the volumetric ratio of the material.

Pneumatic ram assisted feed pumps may not be required for lower viscosity materials.

Feed Systems - Alternative Feed Supplies

Header or other feed systems may be used to supply A and B materials to the 8900 Proportioner. Generally these feed systems are provided by others and are not addressed in this manual. This manual applies only to the Graco Configured 8900 Proportioner system.

Pump Fluids to the Mixer

Fluid is pumped through the proportioner to a mix chamber or to a 2-component dispense gun, where component A and component B are first introduced before being mixed with a static mixer.

A fluid injector nozzle/check valve injects component B into component A at the mix chamber. When enough pressure builds up, the check valve opens and component B flows into the mix chamber. This means that during flow conditions with two positive displacement cylinders linked together, the pressures at the mix point are equal.

Any pressure differences noted on the gauges while running, reflect differences in the pressure lost by each fluid getting from the gauge to the mix point. These pressure drops are caused by hoses and fittings in conjunction with material viscosity.

Mix the Fluids

Both components leave the mix chamber and enter a static mixer where they are mixed to a homogeneous blend. The mixer consists of a series of left and right-hand spiral elements. This is true for both mix chamber and 2-component mix gun.

When the components are pumped through the mixer, they are progressively divided and recombined. Static mixers used on the 8900 Proportioner system include the tri-core mixer, flexible hose mixer, or disposable mixer.

Ratio Checks

On the variable ratio model, a ratio check station option verifies the volumetric mix ratio of the two components. It is located at the outlet blocks. With all outbound fluid valves closed, each component flows through individual ball valves opened by a common handle into containers.

Volumetric mix ratio can be calculated from the weight of each component or by direct measurement. Ratio checks are performed with the back pressures set to actual operating pressures to simulate the normal back pressures created by the mix chamber and gun.

Dispense Valve

An *extrusion flow gun* is commonly used as the application device. It has a final or clean up mixer installed in the handle. Various extrusion nozzles are available for caulking or sealing applications.

Some 8900 Proportioners use a *2K disposable mixer element dispense valve* instead of the flow gun.



The 8900 Proportioner can be used in automatic assembly lines with the addition of a logic interface.



A series of horizontal lines for writing, starting from the top line and extending down to the bottom line, providing a template for text entry.

Models



Refer to form 684041 for selection information.

| Model | Description | |
|--------|--|---------------|
| 890-D | Power Valved Passive Proportioner | |
| Code A | Proportioner Selection ("A" Cyl. / "B" Cyl.) | Module Number |
| 1 | 1:1 Fixed (1000/1000) | 570371 |
| 2 | 2:1 Fixed (1000/500) | 570372 |
| 3 | 2.5:1 Fixed (250/100) | 570373 |
| 4 | 4:1 Fixed (1000/250) | 570374 |
| 5 | 5:1 Fixed (500/100) | 570375 |
| 6 | 10:1 Fixed (1000/100) | 570376 |
| 7 | 9:1 Fixed (1000/111) | 246557 |
| A | 1:1 to 4:1 Variable (500/500) | 570377 |
| B | 2:1 to 8:1 Variable (500/250) | 570378 |
| D | 5:1 to 20:1 Variable (500/100) | 570380 |
| Code B | Pump Feed Module Selection for Component A | Module Number |
| A | 20:1 President on 5 Gallon Ram | 965571 |
| B | 34:1 Senator on 5 Gallon Ram | 965597 |
| C | 23:1 Monark on 5 Gallon Ram | 570142 |
| D | 20:1 President on 55 Gallon Ram | 570114 |
| E | 34:1 Senator on 55 Gallon Ram | 965572 |
| F | 31:1 Bulldog on 55 Gallon Ram | 570141 |
| G | 20:1 Senator on 55 Gallon Drum | 570309 |
| H | 9:1 DynaMite 1 Gallon Can Ram | 570249 |
| J | 10 Gallon Press Tank with 15:1 Booster | 570037 |
| K | 10:1 President 5 Gallon Pail Cover | 570264 |
| N | None | |
| Code C | Pump Feed Module Selection for Component B | Module Number |
| A | 20:1 President on 5 Gallon Ram | 965571 |
| B | 34:1 Senator on 5 Gallon Ram | 965597 |
| C | 23:1 Monark on 5 Gallon Ram | 570142 |
| D | 20:1 President on 55 Gallon Ram | 570114 |
| E | 34:1 Senator on 55 Gallon Ram | 965572 |
| F | 31:1 Bulldog on 55 Gallon Ram | 570141 |
| G | 20:1 Senator on 55 Gallon Drum | 570309 |
| H | 9:1 DynaMite 1 Gallon Can Ram | 570249 |
| J | 10 Gallon Press Tank with 15:1 Booster | 570037 |
| K | 10:1 President 5 Gallon Pail Cover | 570264 |
| N | None | |

| Code D | Mix Kit Selection | Module Number |
|---------------|--|----------------------|
| 1 | Cart Fill Medium Viscosity Wide Ratio | 570248 |
| 2 | Cart Fill High Viscosity Wide Ratio | 570318 |
| 3 | Brush Grade High Viscosity Wide Ratio | 570358 |
| 4 | 2K UltraLite 20 ft Automatic Wide Ratio | 570144 |
| 5 | 2K UltraLite 20 ft Automatic Close Ratio | 570362 |
| 6 | 2K UltraLite 20 ft Hand Gun Wide Ratio | 570363 |
| 7 | 2K UltraLite 20 ft Hand Gun Close Ratio | 570091 |
| 8 | High Volume Static Mix Manifold | 570391 |
| 9 | High Volume Static Mix Kit with Pump Pilots | 570263 |
| 10 | 2K UltraLite 15 ft Hand Gun Wide Ratio Moisture Lock | 246588 |
| N | None | |
| Code E | Mounting Type Selection | Module Number |
| 1 | Stanchion | 570071 |
| 2 | Boom Assembly | 246589 |
| N | None (mount on 3 in. 55 gallon ram) | |

Installation

Typical Installation

Figures 1-3 are only guides for selecting and installing system components and accessories. Contact your Graco distributor for assistance in designing a system to suit your needs.

Location

Position the feed modules so the pump and ram are easily accessible. Ensure that there is sufficient overhead clearance when the ram is fully raised. Refer to the ram manual for clearance dimensions.

Check that the ram base is level in all directions. If necessary, level the base using metal shims. Secure the base to the floor using 1/2 in. (13 mm) anchors that are long enough to prevent the ram from tipping.

Using the holes in the ram base as a guide, drill four holes for 1/2 in. (13 mm) anchors.

Key: Figs. 1 and 2

- | | | | |
|---|---|---|--|
| A | System Air Shutoff Valve (bleed-type) | L | Component A and Component B Feed Pump Air Motor Lubricator |
| B | Main Air Filter | M | Component B Ram Plate with Vent Stick or Valve |
| C | Component B Ram Directional Valve | N | Component A Ram Plate with Drum Vent Valve |
| D | Component B Ram Air Pressure Regulator | O | Component A Pump Air Regulator |
| E | Component B Air Supply Valve (bleed-type) | P | Component A Ram Directional Valve |
| F | Component B Air Supply Regulator | Q | 2K Ultra Lite Gun with Disposable Mixers |
| G | Component A Air Supply Valve | R | Component A Ram Air Pressure Regulator |
| H | Component B Outlet Pressure Gauge | S | Accessory/Gun Air Supply Valve |
| J | Component B Feed Pressure Gauge | | |
| K | Component A Feed Pressure Gauge | | |

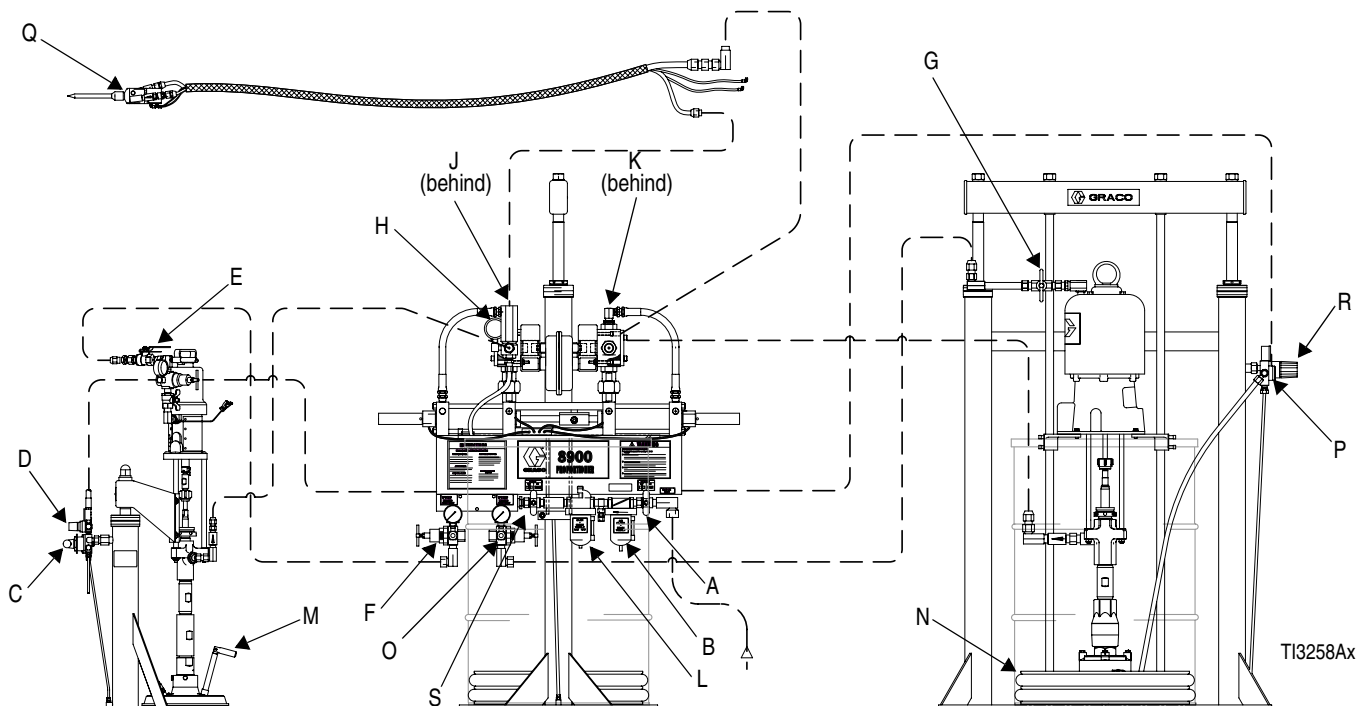


FIG. 1:

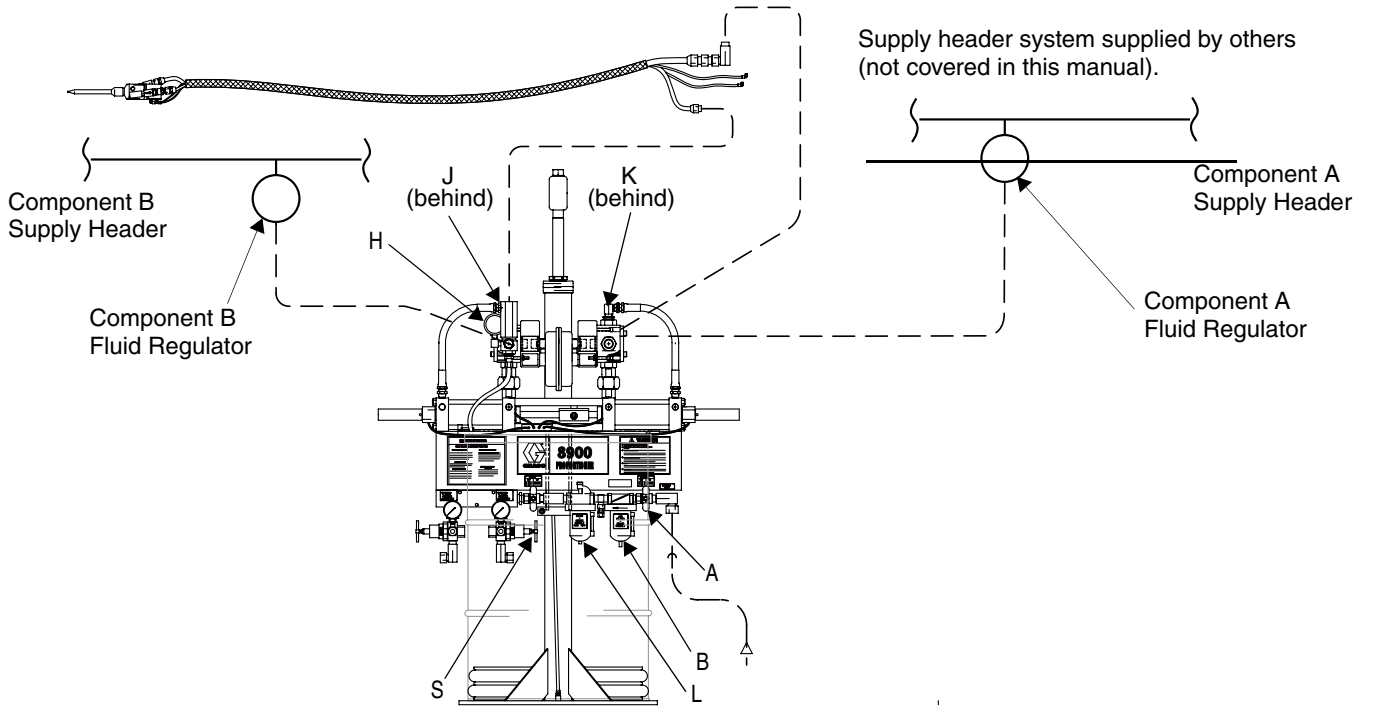


FIG. 2:

Key:FIG. 3

- | | |
|------------------------------|----------------------|
| Q 2K Gun | X Air Trigger Pilot |
| V Disposable Mixer Element | Y Component B Supply |
| W Component B Injector Valve | Z Component A Supply |

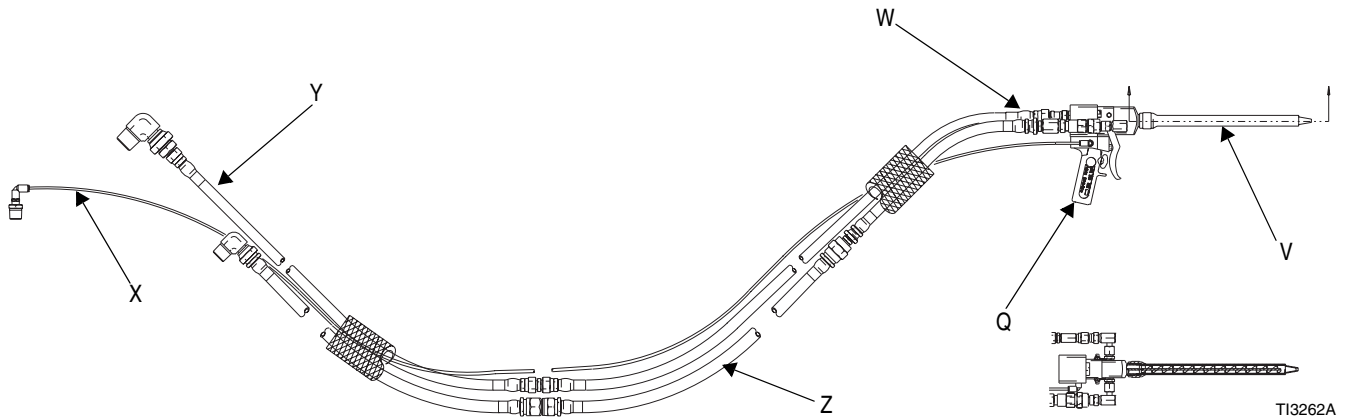


FIG. 3

Ground

WARNING

The system must be properly grounded. Read warnings, page 4. Follow the instructions below.

Pump: use the ground wire and clamp (supplied). There are two styles of ground connections on pump air motors.

If you have the ground screw (a) shown in FIG. 4 (King air motor only), order part no. 222011 ground wire, ring terminal, and clamp assembly (b). To install 222011, remove the ground screw (a) and insert it through the eye of ring terminal (c), then tighten ground screw back into air motor as shown in FIG. 4. Connect the other end of the wire to a true earth ground.

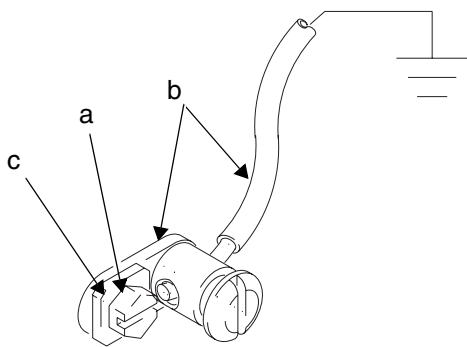


FIG. 4: Ground Screw (King air motors only)

If you have the ground screw (d) shown in FIG. 5, loosen the grounding lug locknut (g) and washer (f). Insert one end of the ground wire (e) into the slot in lug (d) and tighten the locknut securely. Connect the other end of the wire to a true earth ground. Order 237569 ground wire and clamp assembly.

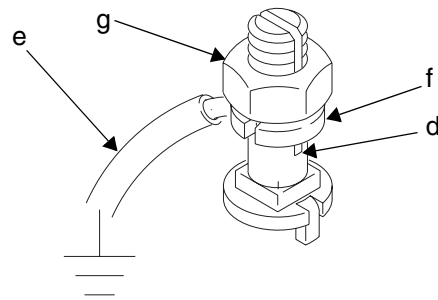


FIG. 5 Ground Screw

Air and fluid hoses: use only electrically conductive hoses with a maximum of 500 ft (150 m) combined hose length to ensure grounding continuity. Check the electrical resistance of your air and fluid hoses. If the total resistance to ground exceeds 29 megohms, replace the hose immediately.

Air compressor: follow manufacturer's recommendations.

Spray gun/dispense valve: ground through connection to a properly grounded fluid hose and pump.





Fluid supply container: follow your local code.

Substrate: follow your local code.

Solvent pails used when flushing: follow your local code. Use only conductive, metal pails, placed on a grounded surface. Do not place the pail on a nonconductive surface, such as paper or cardboard, which interrupts grounding continuity.

To maintain grounding continuity when flushing or relieving pressure: hold a metal part of the gun/dispense valve firmly to the side of a grounded metal pail, then trigger the gun/valve.

Flush


| |
|---|
|  WARNING |
|    |
| Read warnings, pages 3-4. Follow Ground instructions, page 12. |

- The equipment was tested with light, soluble oil. Flush the system before loading material to avoid contamination.
- Flush at the lowest pressure possible and check connectors for leaks.

To flush the system:

1. On the ram-mounted component A supply units, you must remove the drum ram plate to immerse the A pump in a solvent pail. To remove the plate:
 - a. Disconnect the blow-off air line from the ram plate.
 - b. Disconnect the tie rod nuts from the ram cross beam.
 - c. Remove seal plates between the pump and ram.
 - d. Loosen ram tie rods from plate and remove plate.
 - e. If a pail ram is used with the component B supply, remove the pail plate by loosening the 2 set screws.


- f. Position the solvent pail so the pump inlet is in the solvent.


 Use solvent that is compatible with the equipment wetted parts and the material you will dispense.

- g. Support the ram(s) so that the pump inlet and piston will not hit the base plate or pail bottom.
- h. Make sure both component A and component B outlet hoses are open.

2. Flush the system and all hoses by very slowly opening the motor control valves until 30 psi (207 kPa, 2.1 bar) is shown on the component A outlet pressure gauge.

Flush for 1-2 minutes, then close the motor control valves.


| |
|--|
|  CAUTION |
| To avoid damaging the pump, open the motor control valves very slowly to prevent a pump runaway condition. |

 It is normal for the air valve to exhaust air when it is partially open.

3. Check connectors for leaks and tighten them if necessary.
4. Remove the solvent pail(s) from the pump inlets.
5. Operate the pump(s) at low pressure to remove excess solvent.
6. Reinstall the drum or pail ram plates.

Setup

WARNING



Read warnings, pages 3-4, before operating equipment.

Set the Ratio (variable ratio models only)

Adjust ratio

The ratio of this unit is produced partially by the difference in the area of the metering cylinders and partially by the position of the adjustable fulcrum point in the Uni-bar linkage assembly. With the fulcrum point in the center, each meter cylinder strokes 3 in. (10.16 cm). In the center position, the dispense ratio is the same as the meter cylinder ratio.

The linkage is adjustable depending on the location of the fulcrum point. The linkage must be adjusted for each material application so the combined linkage and meter cylinder ratio equals the desired material mix ratio by volume. The ratio may be checked by weight, but the machine meters by volume and that ratio must be known before proceeding.

The initial linkage adjustment point can be calculated by inserting known values into the formula on page 36. The result is the distance in inches from the center of the fulcrum point to the center of the component B meter cylinder. For convenience, measure the distance between the grease fitting on the top of the fulcrum and the center of the component B cylinder meter rod.

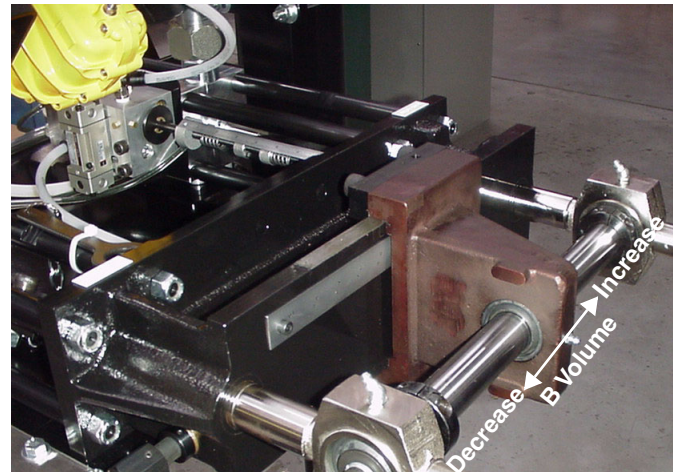


FIG. 6


Set Scale

Refer to the 8900 Proportioner Output Charts on the following pages to set the scale. Make final adjustments after the material is loaded. See instructions on page 34 for detailed ratio check instructions.

Output Charts/Ratio Settings


8900 Proportioner, 1:1 - 4:1 Variable Ratio

| Mix Ratio by Volume | Scale Setting | Minor Stroke |
|---------------------|---------------|--------------|
| 1 | 5.63 | 3.00 |
| 1.5 | 7.13 | 2.00 |
| 2 | 8.13 | 1.50 |
| 2.5 | 8.85 | 1.20 |
| 3 | 9.38 | 1.00 |
| 3.5 | 9.80 | 0.86 |
| 4 | 10.13 | 0.75 |

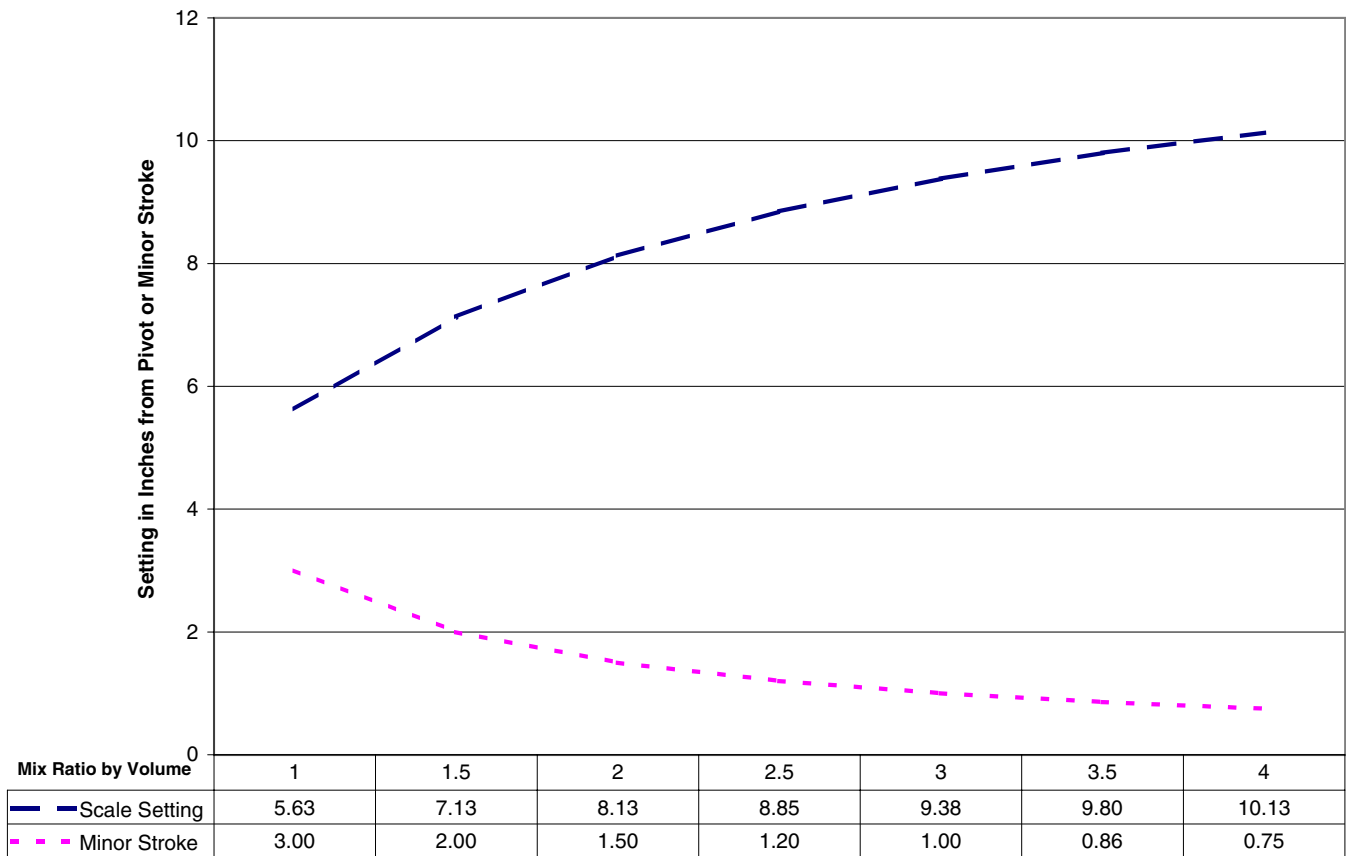


8900 Proportioner, 2:1 - 8:1 Variable Ratio

| Mix Ratio by Volume | Scale Setting | Minor Stroke |
|---------------------|---------------|--------------|
| 2 | 5.63 | 3.00 |
| 3 | 7.13 | 2.00 |
| 4 | 8.13 | 1.50 |
| 5 | 8.85 | 1.20 |
| 6 | 9.38 | 1.00 |
| 7 | 9.80 | 0.86 |
| 8 | 10.13 | 0.75 |

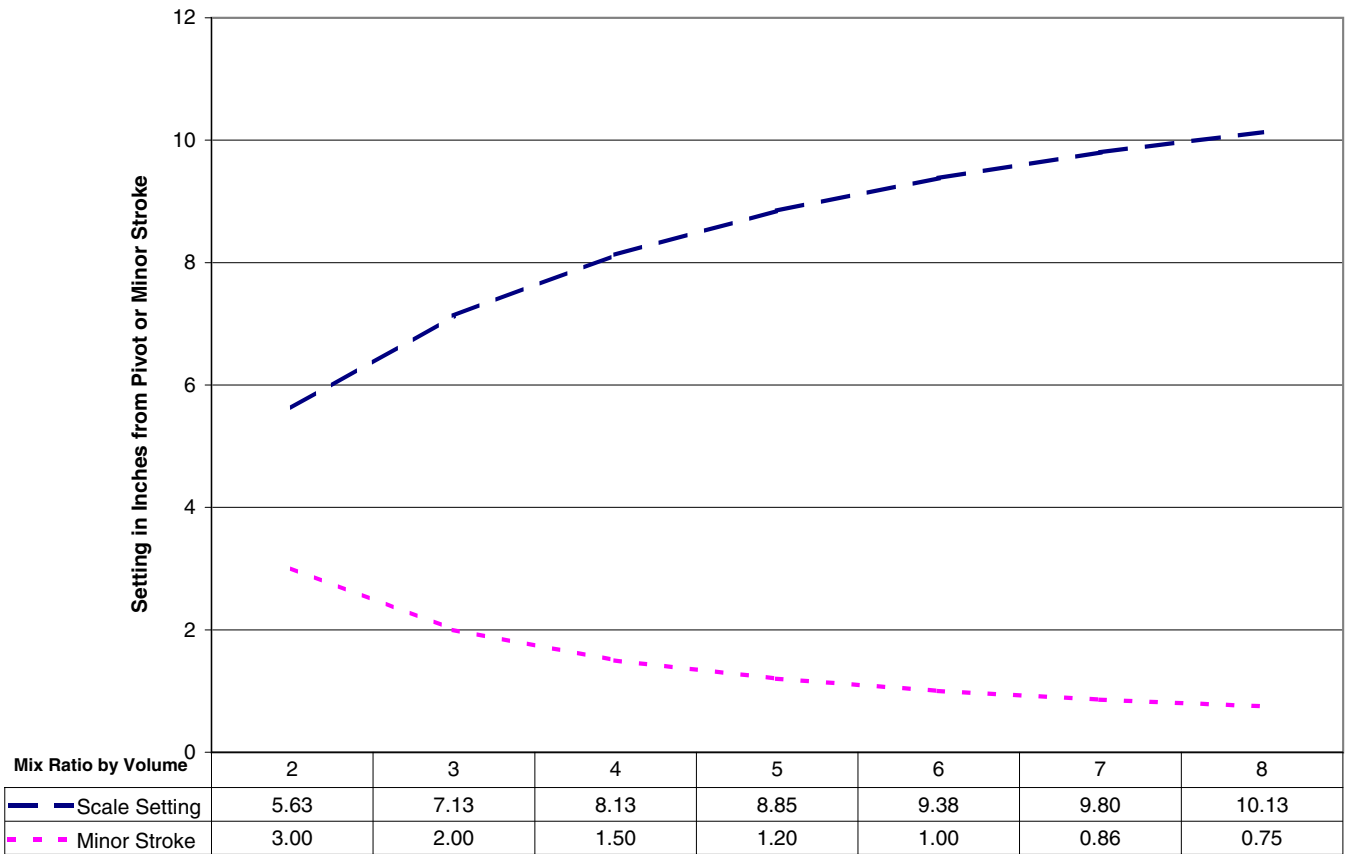


8900 Proportioner, 5:1 - 20:1 Variable Ratio

| Mix Ratio by Volume | Scale Setting | Minor Stroke |
|---------------------|---------------|--------------|
| 5 | 5.63 | 3.00 |
| 7 | 7.13 | 2.00 |
| 10 | 8.13 | 1.50 |
| 12 | 8.85 | 1.20 |
| 15 | 9.38 | 1.00 |
| 17 | 9.80 | 0.86 |
| 20 | 10.13 | 0.75 |

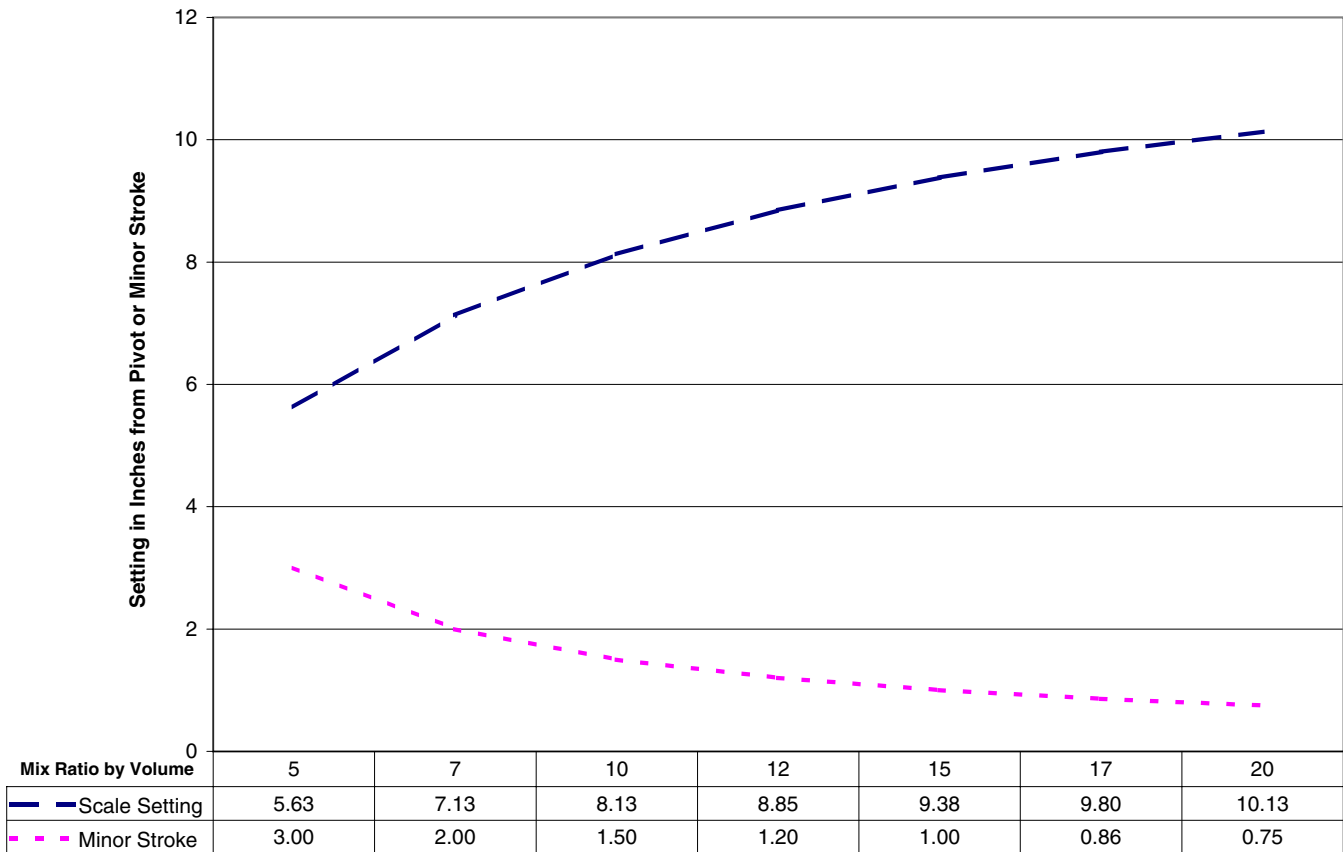


Before You Load Material

1. Check fluid and air lines and tighten if necessary.
2. Make sure there is a minimum overhead clearance of 110 in. (279 cm) for 55 gallon supply.
3. Fill air line lubricator for the 8900 Proportioner module with SAE 10 W non-detergent oil (not included).
4. Fill the pump A and B wet cups 2/3 full with Graco T.S.L. fluid (throat seal lubricant) or lubricant compatible with material being pumped.

 ISO pump oil is used with moisture sensitive component B.

5. Close (turn fully counterclockwise) all air regulators.

6. Connect the 3/4 in. (19 mm) ID x 10 ft (3.05 m) air hose (provided) to your air supply.

 Do not use a restrictive quick-disconnect. The air supply pressure must be consistently above the pressure you set on the main air motor regulator.

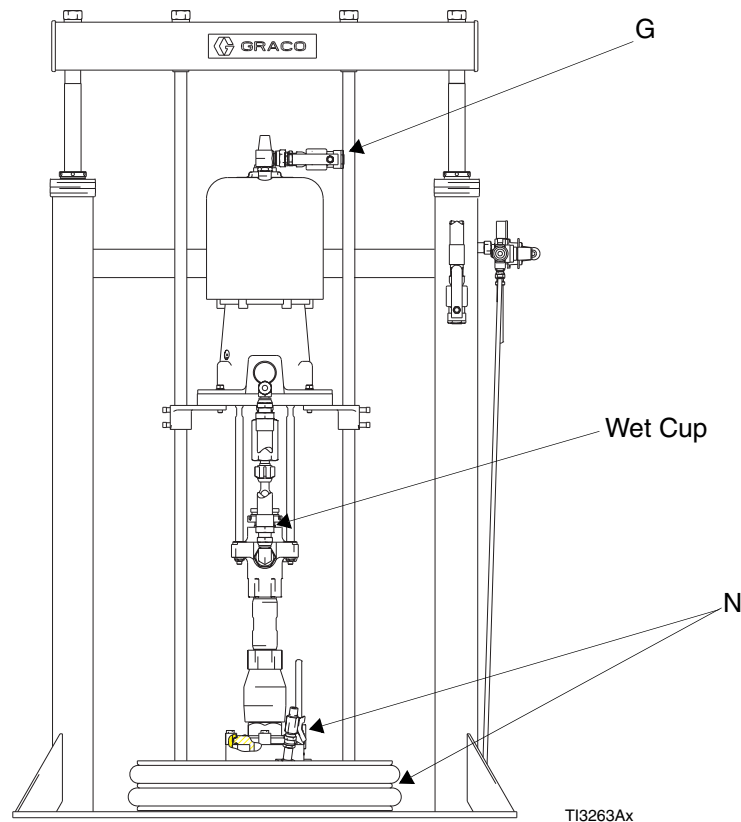


FIG. 7

Load Component A

1. Make sure all air regulators on proportioner module are fully closed.
2. Open the main air supply shutoff valve (A), FIG. 8.
3. Place the ram lever (P-FIG. 10) in the UP position.

CAUTION
As the ram rises, make sure hoses do not catch on any components. If a hose catches, immediately stop the ram (move lever to NEUTRAL position) and correct the problem. Lower the ram if necessary to redirect hoses.

4. Slowly turn the ram air regulator (R) clockwise until the ram begins rising.



FIG. 8

5. When ram is fully raised, apply a thin coating of lubricant to the ram plate drum seals.
6. Open the material container. Remove any packing materials, and inspect for material contamination. If the container has a plastic liner, pull it tightly over the sides of the container, and secure the liner in place with tape wrapped below the top drum rim.
7. Position the drum so it rests evenly between the centering guides and is fully backed into the stops located near the back of the ram base plate.
8. Open the drum vent valve (W), FIG. 9.

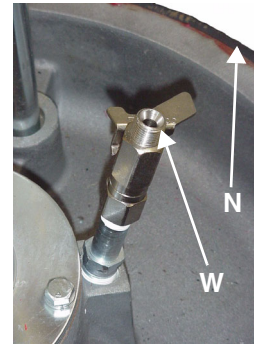


FIG. 9

WARNING
When lowering the ram, keep hands and body away from the ram plate and material drum. Read warnings, page 4.

9. With hands away from the pail and wiper plate (N), set the ram lever (P-FIG. 10) to NEUTRAL (horizontal position). Let the ram lower until the wiper plate rests on the pail lip.
10. Lower the ram plate into the drum (move ram lever to DOWN position).

CAUTION
Do not lower ram if a drum is not in place. Doing so can damage drum centering guides.

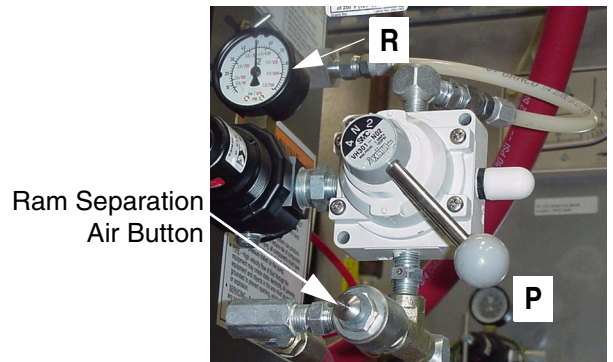


FIG. 10

11. After the ram plate seals contact the drum, adjust the ram air regulator (R) to about 30-50 psi (207-345 kPa, 2.1-3.4 bar).
12. When the ram stops and material fills the bleed port (or air stops bleeding out), close the drum vent valve (W), FIG. 9.
13. Supply unit is now ready to fill lines to proportioner.

Prime Pump A

1. Place a waste container under the pump bleed valve located behind the displacement pump outlet, FIG. 11. Using an adjustable wrench, open the bleed valve counterclockwise 1/3-1/2 turn.

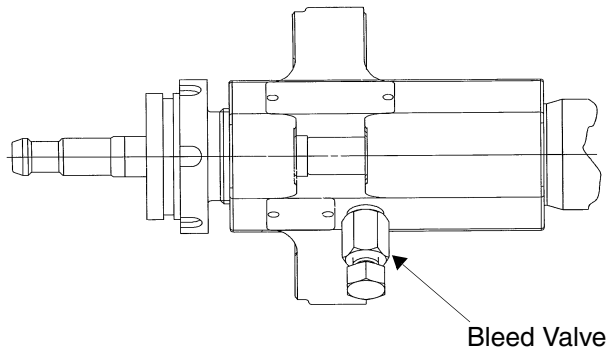



FIG. 11

2. Slowly open the component A air motor shutoff valve (G), FIG. 7. Make sure the pump begins to cycle and material flows from the bleed valve after several cycles of the pump, FIG. 11.

 If the pump does not cycle, close the air shutoff valve (G), adjust the air motor regulator (O-FIG. 8) up 5 psi (34 kPa, 0.3 bar) and repeat step 2. Never adjust the regulator by more than 5 psi (34 kPa, 0.3 bar) increments.

3. Operate the pump until it moves smoothly in both directions with no air popping or erratic movement, then close the air motor shutoff valve (G).
4. Close the bleed valve, FIG. 11.

Load Component B

Follow the procedure for the type of supply equipment being used.

Pneumatic Pail Ram and Piston Pump

1. Close all air regulators and air valves.
2. Set the pail ram air regulator (D) to 40 psi (0.28 MPa, 2.8 bar), FIG. 12.
3. Push the ram directional lever (C) to the UP position and let the ram rise to its full height.
4. When ram is fully raised, apply a thin coating of lubricant to the ram plate drum seals.
5. Remove the component B pail cover. If the material has separated, carefully stir it with a metal or plastic rod until it is mixed. Do not use wood to stir as it can splinter and contaminate the material. Do not mix air into the material.
6. Set the pail on the ram base. Slide it back toward the ram tube and supports and center it under the wiper plate. To prevent air from being trapped under the wiper plate, scoop fluid from the center of the pail to the sides to make the surface concave.




WARNING



When operating the pump or raising or lowering the ram, keep hands away from the wiper plate, fluid container lip, and pump intake. Read warnings, page 4.

7. With hands away from the pail and wiper plate, set the ram lever (C) to NEUTRAL (horizontal position). Let the ram lower until the wiper plate rests on the pail lip.
8. Ensure the pail is aligned with the wiper plate.
9. Push the ram directional lever (C) DOWN and increase ram air pressure until plate completely engages into the pail.
10. Slowly unscrew the vent stick until you hear air escaping. When air is evacuated, set the ram lever (C) to NEUTRAL and lower ram pressure to 20-30 psi (138-207 kPa, 1.4-2.1 bar).
11. Unscrew the vent stick and put the ram lever (M) in the DOWN position, keeping the vent stick over the vent port.
12. Slowly increase down pressure until material seeps from vent port, then quickly refasten vent stick.

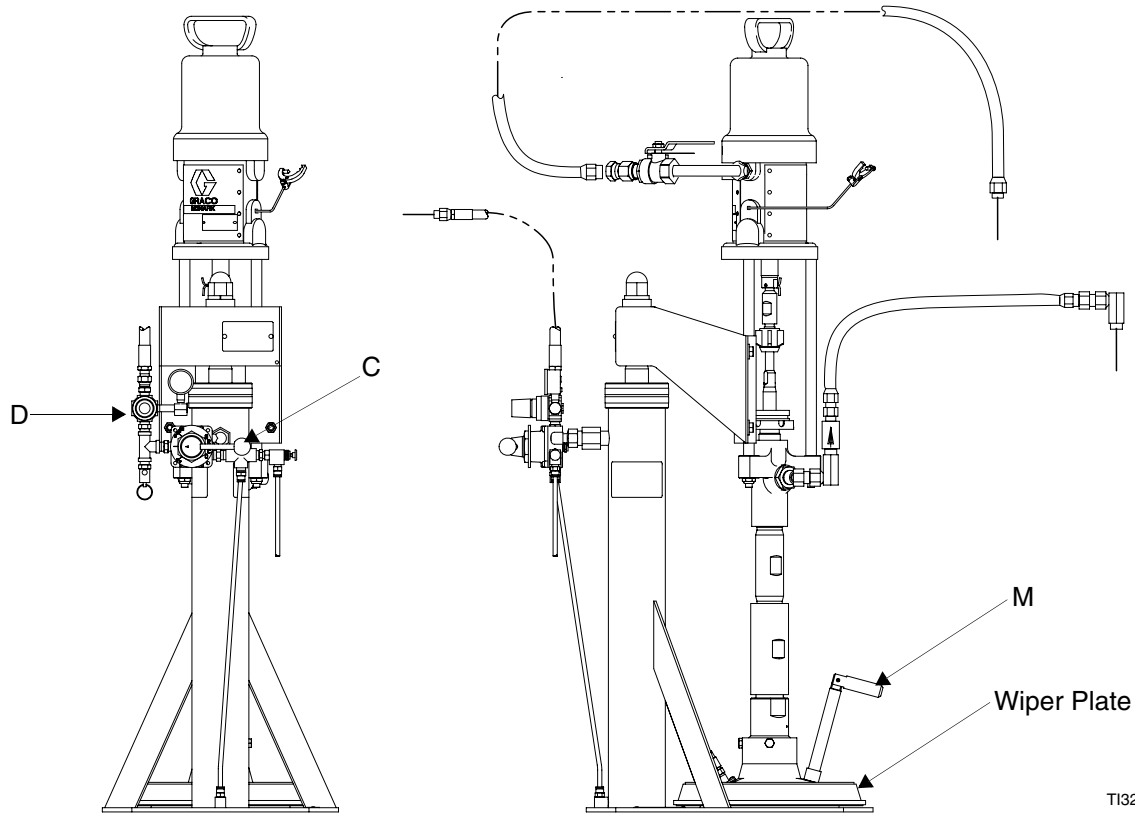

T13260B

FIG. 12

Pressure Tank with 15:1 Booster

1. Relieve tank pressure before opening.
2. Remove the pressure tank lid and any items shipped inside the tank. Make sure the tank is clean, or use the liner supplied.
3. Be sure the desiccant air dryer is mounted in the component B tank air supply of the proportioner air control module. See FIG. 28, page 33.
4. Gently roll an unopened pail of component B on the floor for several revolutions to mix it.
5. Open the pail outlet and carefully pour component B into the tank.
6. Immediately close the tank by tightening the T-handles (GG) evenly, FIG. 13.

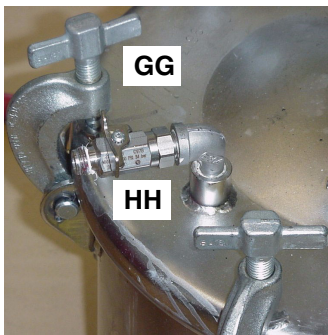


FIG. 13

7. Pressurize the tank with dried air by opening the component B air shutoff valve (S) and the pressure tank air shutoff valve (T), FIGures 14 and 15.

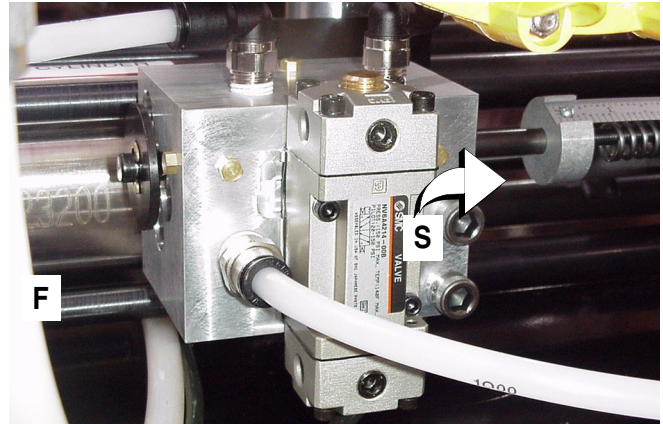


FIG. 14

8. Set the component B tank air regulator (U) to approximately 40 psi (276 kPa, 2.8 bar).
9. Check to ensure the air valve (E) to booster pump is turned off and material supply ball valve (KK) is closed.
10. Set feed pump regulator (F) on proportioner assembly to approximately 40 psi (276 kPa, 2.8 bar).
11. The unit is ready to feed material to proportioner.

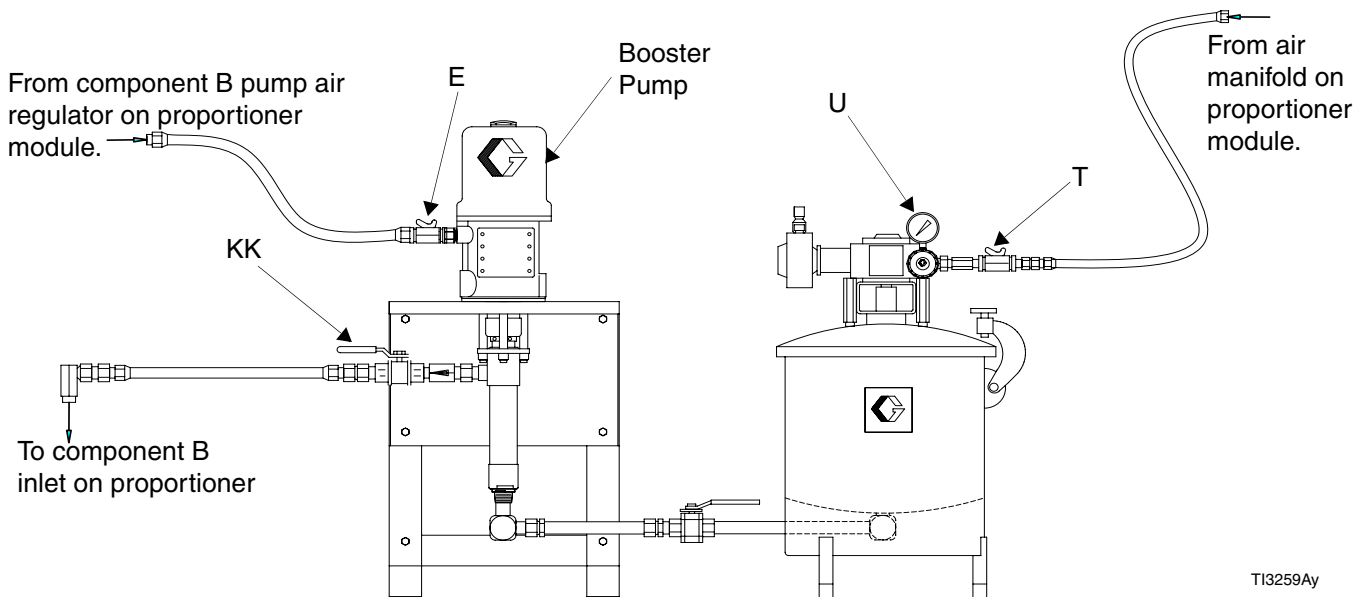


FIG. 15

T13259Ay

Prime with Component B

1. Place a waste container under the pump bleed valve located behind the displacement pump outlet, FIG. 16. Using an adjustable wrench, open the bleed valve counterclockwise 1/3-1/2 turn.

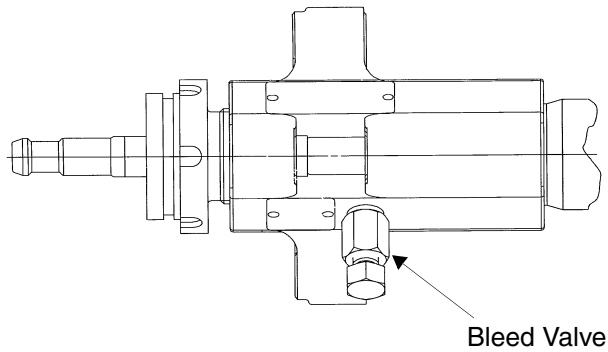



FIG. 16


2. Slowly open the component B air motor shutoff valve (E), FIG. 15. Make sure the pump begins to cycle and material flows from the bleed valve after several cycles of the pump, FIG. 16.

 If the pump does not cycle, close the air shutoff valve (E), adjust the air motor regulator (F-FIG. 17) up 5 psi (34 kPa, 0.3 bar) and repeat step 2. Never adjust the regulator by more than 5 psi (34 kPa, 0.3 bar) increments.

3. Operate the pump until it moves smoothly in both directions with no air popping or erratic movement, then close the air motor shutoff valve (E), FIG. 15.
4. Close the bleed valve, FIG. 16.

Fill the 8900 Proportioner with Material

1. Place a material waste container under dispense gun (Q) and open gun. FIG. 1, page 10.
2. Open the main ball valve (A-FIG. 17) on the proportioner assembly. This air valve supplies air to the proportioner control valving and to the feed pump assemblies. All other air shut-off valves on the manifold and feed pump assemblies should be off.
3. Open the feed pump main air valve (S). This allows the air supply to feed pump assemblies.
4. Adjust the component B supply pump air regulator (F) to allow smooth pumping action. Continue until component B flows from the dispense gun into the waste container.

 The minor or component B side of material is filled first to minimize waste during initial startup.

5. Adjust the component A air regulator (O) to allow smooth pumping action.
6. Pump until component A and component B flow from the gun into the waste container. When the material is bubble-free, all air has been purged from the system.
7. Turn off air supply valve (S).
8. Close dispense gun.
9. The 8900 Proportioner is now filled with components A and B and ready for operation.

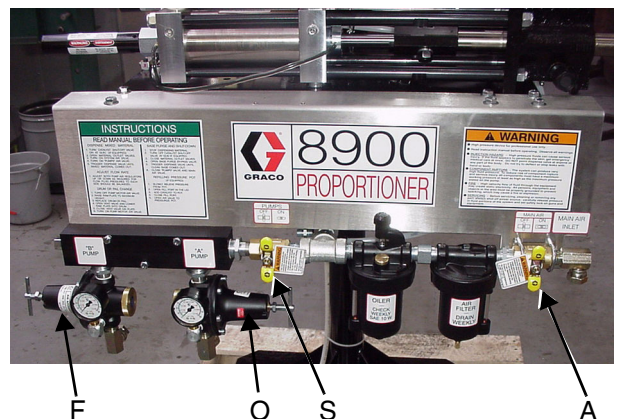


FIG. 17

2K UltraLite Disposable Mixer Gun Models

Follow steps 10-12.

10. Fit the hose to the gun. Trigger the gun into a waste container.
11. Open the component B feed air shutoff valve (E-FIG. 15). Component B will feed through the metering cylinder to the mix gun.
12. When bubble free material is dispensed, stop triggering the gun.

All Models



The system is now ready to dispense mixed material.



CAUTION

The materials will cure after mixing. Purge the mixer, hose, and gun with clean material before the material begins to cure.




A series of horizontal lines for writing, starting from the first line below the pencil icon and continuing down the page.

Operation

Pressure Relief Procedure

WARNING



Read warnings, page 3, and follow the **Pressure Relief Procedure** whenever you:

- are instructed to relieve pressure
- stop dispensing
- check or service any of the equipment
- install or clean the nozzle.

1. Purge mixed material if necessary. See page 30.
2. Close the main air shutoff valve (A), FIG. 18.

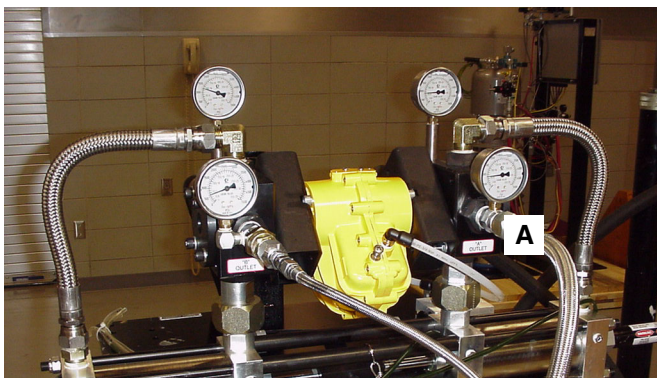


FIG. 18

3. If a component B pressure tank is used, open its vent (refer to page 24).
4. Hold a metal part of the gun firmly to the side of a grounded metal pail, and trigger the gun to relieve pressure.
5. For both component A and component B, open the respective pump bleed valves, having a waste container ready to catch the drainage, FIG. 19.

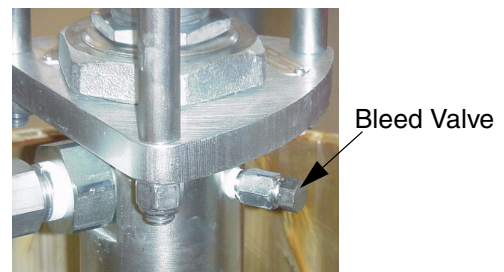


FIG. 19

6. Manually activate the limit valve (item 26 on page 50), to cause the 4-way valve to shift, fully relieving pressure within the proportioner.
7. *If you suspect that the nozzle or hose is completely clogged, or that pressure has not been fully relieved after following the steps above, very slowly loosen the tip retaining nut or hose end coupling and relieve pressure gradually, then loosen it completely, and clear the nozzle or hose.*

Dispense Mixed Material

| |
|---|
| <p>⚠ CAUTION</p> <p>Make sure the component B relief valve is operational and free from blockage at all times. See manual 308547. If the relief valve fails, the overpressure rupture disc opens and component B is diverted to a waste container mounted on the ram base plate.</p> |
|---|

8900 Proportioner with Static Mix Chamber Kits

1. Load the material. See page 20.
2. On the variable ratio machine, set ratio (see page 15). On the fixed ratio machine, proceed to step 3.
3. Open the pump A and pump B air shutoff valve (S), FIG. 20.

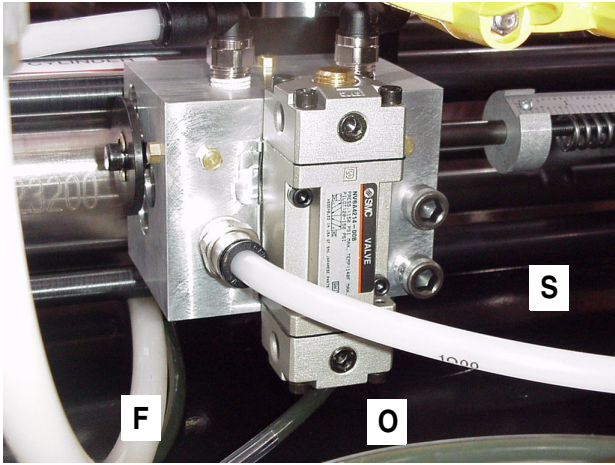


FIG. 20

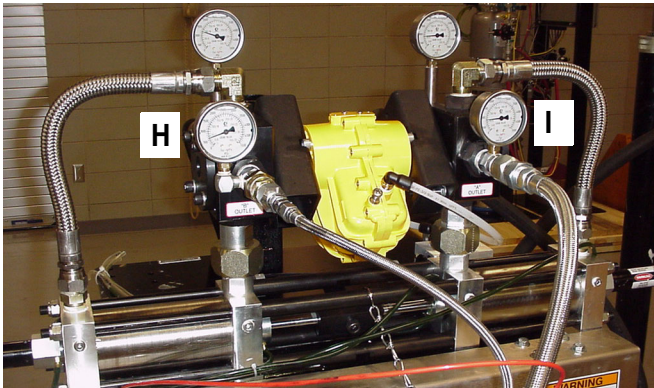


FIG. 21

4. Adjust the component A and component B air regulators (F and O) until both outbound gauges (H and I) show the desired pressure, FIG. 20-21.
5. Trigger the gun to dispense mixed material.

Adjust the Flow Rate

The dispensing flow rate for the system is controlled by the material pressure of component A and component B. The air pressure on pump A determines the flow rate from the material outlet. Perform the steps on page 25 to set an initial flow rate. When the setup is complete, adjust flow to the correct rate.

The diagram in FIG. 22 shows the inlet and outlet of the meter cylinders in relation to the direction of rod movement. The material pressure gauges will represent either inlet or outlet pressure, depending on the direction of the rod. Inlet and outlet pressures are critical to establishing meter flow rates and balanced pressures.

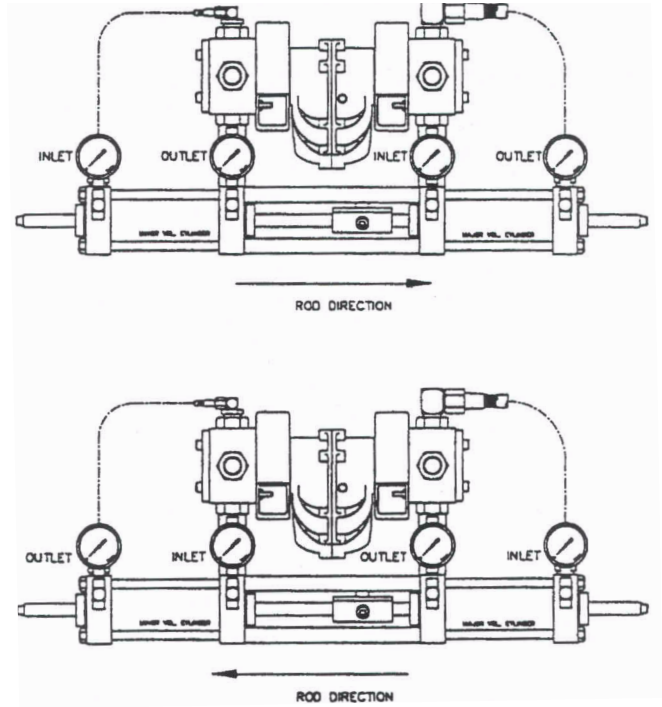


FIG. 22

Flow Rate Adjustment Example

A 20:1 fluid:air supply pump ratio with an air regulator setting at 100 psi (.7 MPa, 7 bar). The pump generates approximately 2000 psi (14 MPa, 140 bar). Fluid pressure, normal friction losses with mastic materials will use 5-15% of the force, resulting in actual stall pressure of 1700-1900 psi (13 MPa, 130 bar).

A/B Pump Relationship

As a rule of thumb, the pressures of the two components should be adjusted to as close to equal as possible under dynamic pressure. Adjust the A and B feed pressures to accomplish this. Differences on material viscosity, flow rates, hose diameter and length, dispense valve, and mixer size cause this setting to vary from application to application.

1. Adjust the component A air regulator (O) for desired flow rate, FIG. 24.
2. Adjust the component B air regulator (F) to balance the A and B regulators.

Solvent-flush Mixed Material (for units using mix manifold gun kits)

1. Close the component A and component B valves on the mix chamber assembly. See FIG. 23.
2. Ensure solvent valve is closed.
3. Set solvent flush pump air regulator to approximately 25 psi (172 kPa, 1.7 bar) and open the air valve.
4. Open the solvent supply valve, ensuring that the dispense valve touches a grounded metal waste container and purge until solvent comes out clean.
5. Close solvent supply valve.

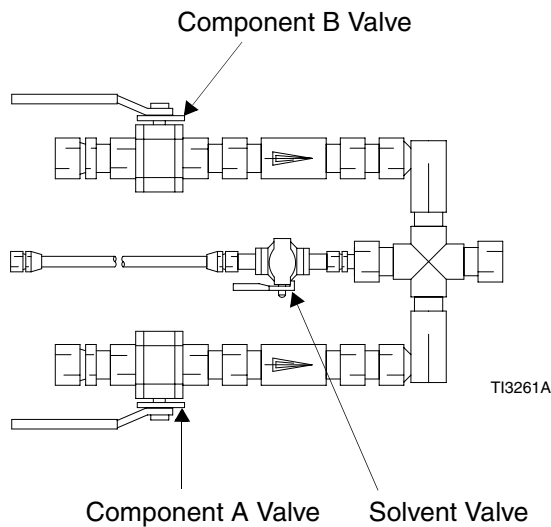


FIG. 23

8900 Proportioner with Disposable Mixer Gun

1. Load the material. See page 20.
2. Set ratio. (For variable ratio models, see page 15).
3. Install the mixer on the gun.
4. Open the pump A and pump B air shutoff valve (S), FIG. 24.

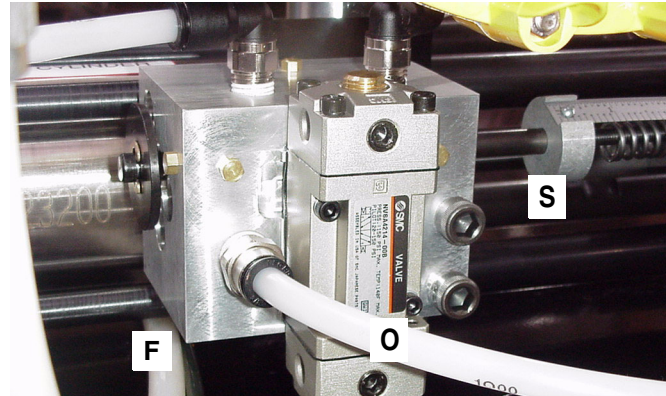


FIG. 24

5. Trigger the gun to dispense mixed material.
6. Adjust the component A air regulator (O) for the desired flow rate.
7. Adjust the component B supply air regulator (F) so that component B pressure is approximately equal to the component A pressure.
8. When you have finished dispensing, remove and dispose of the mixer, and install a red plastic cap (part no. 551327).

Changing Component A Drum

When the ram plate is extended fully to the bottom of the drum and the pump begins to cavitate, you need to change the drum. It is recommended that you check and refill the component B at the same time.

1. Close the air motor shutoff valve.
2. With the ram lever (PP) in the neutral position (FIG. 25), adjust the ram regulator (R-FIG. 26) to 0 psi.

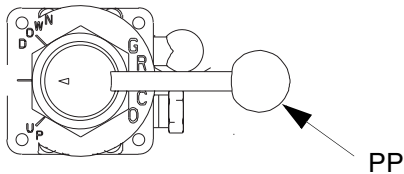


FIG. 25

3. Place the ram lever (PP) in the UP position, FIG. 26.

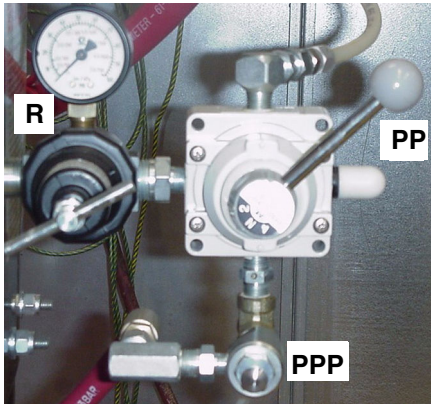




FIG. 26

WARNING



Do not use excessive drum separation air pressure. Make sure the drum is not damaged and the ram plate is free to exit the drum. Read warnings, page 4.

4. Push and hold the ram separation air button (PPP).
5. Adjust the ram regulator (R) to approximately 10-15 psi (69-103 kPa, 0.7-1 bar) or until the ram plate begins to rise.
6. Continue to hold the drum separation air button (PPP) just enough to keep the drum from rising with the ram plate.
7. Follow the procedure to load material, pages 20-25.

 You only need to lubricate the ram plate tire seals the first time you load material.


Changing Component B Pail

If you are using a ram and pump to supply component B, the procedure to change the pail is the same as changing the Component A drum except that you use the controls on the back of the pail ram.

Pressure Relief Procedure

(For component B tank models only.)

WARNING



PRESSURIZED EQUIPMENT HAZARD

The pressure tanks remain pressurized until pressure is manually relieved. To reduce the risk of serious injury from pressurized fluid or accidental spray from the gun, always follow this procedure to relieve pressure in the tank at the following times:

- Before you check or service any part of the spray system
- Before you loosen or remove the pressure tank cover or fill port.
- Whenever you stop spraying.

1. Shut off the air supply to the tank by closing the air inlet valve. Refer to FIG. 27.
2. Open the drain cock fitting by turning it counter-clockwise.
3. Wait until there is no air escaping through the drain cock fitting before removing the cover or opening the fill port.
4. Leave the drain cock fitting open until you have reinstalled the cover or fill port.

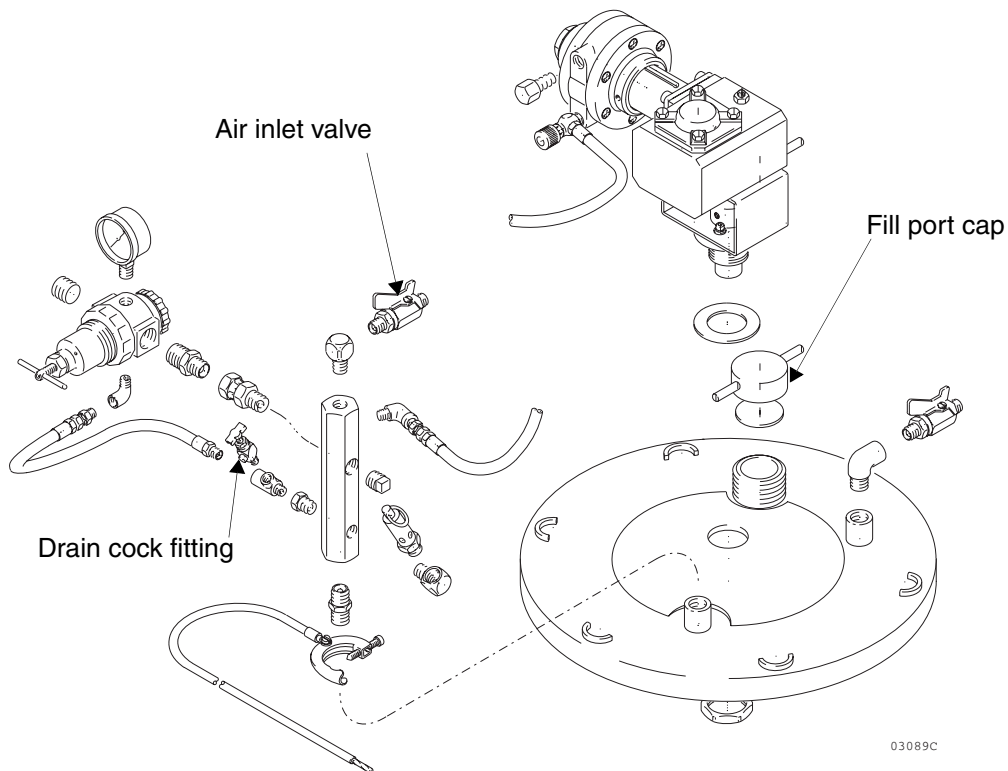


FIG. 27

Filling Component B Pressure Tank


If you are using a pressure tank to supply component B, check the tank level with a metal or plastic rod whenever the Component A drum is changed. To add component B to the tank, follow the procedure below.

1. Close the tank air supply shutoff valve, FIG. 28.
2. Relieve pressure in the tank (see page 28).
3. Open the fill port cap on top of cover.


CAUTION


Do not leave the pressure tank open. Component B will crystallize if exposed to the moisture in the air. The tank cover is normally removed only for tank cleaning.

4. Gently roll an unopened pail of component B on the floor for several revolutions to mix it.
5. Open the pail outlet and carefully pour the material into the tank through a funnel.
6. Close the drain cock fitting and screw on the cap.
7. Make sure the silica-gel in the desiccant filter is blue. If the gel is pink, replace it (part no. 106498) or bake out the moisture.

 The desiccant filter is an air dryer for moisture-sensitive materials, it is not included with the package.

8. Pressurize the tank with dried air by opening the component B air shutoff valve and the pressure tank air shutoff valve.

 Arrow points toward tank

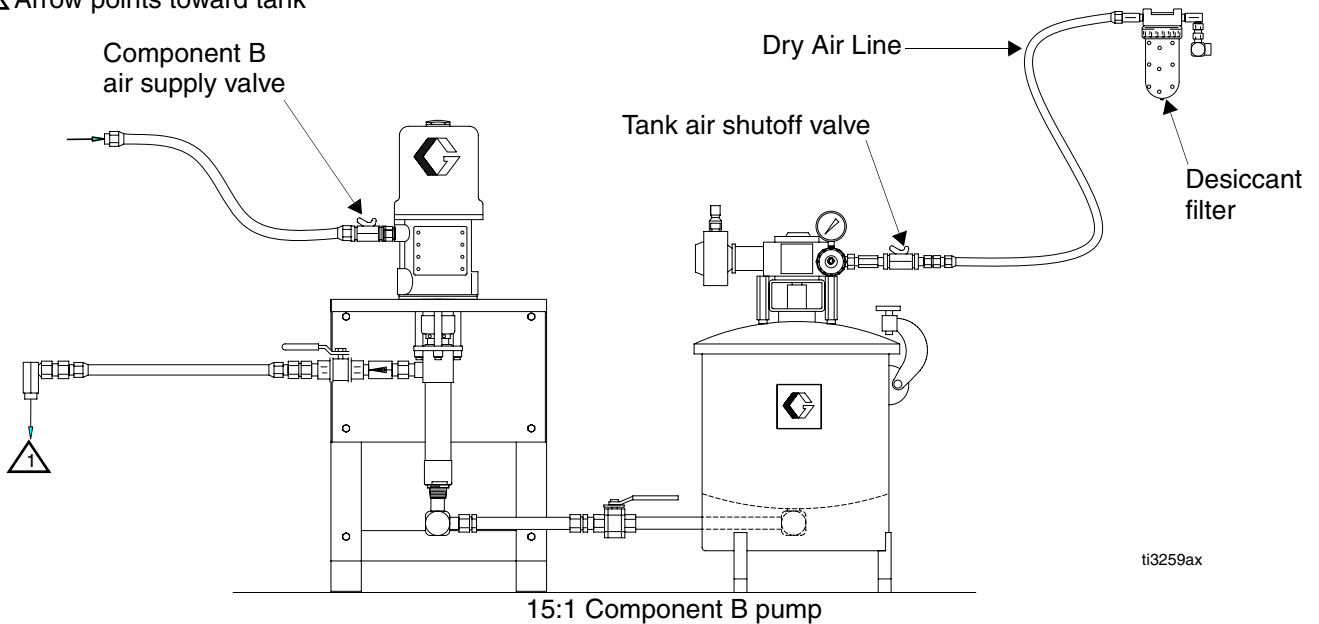

ti3259ax

FIG. 28

Adjust Ratio on Variable Ratio Machine

The ratio of this unit is determined partially by the difference in the area of the metering cylinders and partially by the position of the adjustable fulcrum point in the Uni-bar linkage assembly. With the fulcrum in the center, (next to stop at left of center), each meter cylinder strokes 3 in. In this center position, the dispense ratio is the same as the meter cylinder ratio. The ratio is adjustable from 1:1 to 20:1 depending on the location of the fulcrum point and cylinder size. There are three machines to accommodate these ratio ranges: 1:1-4:1, 2:1-8:1, and 5:1 to 20:1. The linkage must be adjusted for each material application so that the combination linkage and meter cylinder ratio equals the desired material mix ratio by volume. The ratio is checked by weight, but the machine meters by volume. Weight ratios must be known before proceeding. If weight ratios are not known, they can be calculated using the specific gravity and known volumetric ratio of each component.

The initial linkage adjustment point can be calculated by inserting known values into the following formula. The resulting value is the distance in inches from the center of the fulcrum point to the center of the component B meter cylinder. Measure the distance from the grease fitting on top of the fulcrum to the center of the component B cylinder meter rod. For reference, see the output charts on pages 16 through 18.

Ratio Adjustment Calculation Example:

DR = Required mix ratio by desired volume (X:1)

PR = Selected cylinder ratio (1:1, 2:1, 5:1)

LR = Linkage ratio

LD = Linkage distance (component B cylinder centerline to fulcrum center divided by LR+1)

$$\frac{DR}{PR} = LR$$

Cylinder ratio 1:1-4:1 machine use **PR** = 1

Cylinder ratio 2:1-8:1 machine use **PR** = 2

Cylinder ratio 5:1-20:1 machine use **PR** = 5)

Example:

- Desired volumetric mix ratio (**DR**) = **10:1**
- Measured distance from grease fitting on top of the fulcrum to the center of the component B cylinder meter rod = **14.85 in.**

$$\frac{DR}{PR} = LR \quad \frac{10}{5} = 2:1$$

$$LD = \frac{\text{measured distance}}{LR + 1} \quad LD = \frac{14.85 \text{ in.}}{2 + 1} \text{ or } LD = 4.95 \text{ in.}$$

Verify the Ratio

1. Relieve pressure. See **Pressure Relief Procedure** on page 28.
2. Remove gun and place a waste container under the component A and component B hoses.
3. Open air valve to turn on unit.
4. Activate the unit and using a collection container of known weight, collect a cup of component A and a proportionate amount of component B.
5. Weigh each component carefully and subtract the weight of the container.
6. Convert the manufacturer's ratio to parts component B per 100 parts Component A, by weight (2:1 = 100:50).
7. Divide component B weight by component A weight.
8. Multiply the result of step 7 by 100. The product is the number of parts of component B the machine dispenses per 100 parts of Component A.
9. Compare ratio obtained to ratio desired. Always make several ratio checks to ensure accuracy at final setup. Any air in the system will cause inaccurate ratio checks. If ratio checks are not consistent, review setup procedure.
10. If the ratio is incorrect, loosen fulcrum screw (A) and turn the ratio adjustment screw/nut (B) clockwise to decrease and counterclockwise to increase the amount of component B.
11. If the ratio is correct, tighten the fulcrum nut and reattach hoses (7) to the dispensing gun.

Daily Procedures

Daily Start-up Procedure

1. Perform daily maintenance operations, including:
 - a. Check oil level in main air lubricator.
 - b. Drain any water from filter in main air line.
 - c. Tighten pump packing nuts (daily the first week, weekly thereafter).
 - d. Visually inspect system for leaks.
 - e. Grease zerk fittings.
2. Turn air pressure to the unit "ON".
3. Check ratio on variable ratio models.



Steps 4 and 5 are applicable only to mix manifold models.

4. Open the coupled ball valves (push up).
5. Ensure that the component A purge ball valve is closed.
6. Place a material waste container under the gun outlet and open the dispense gun.
7. Dispense material until well mixed material is being dispensed.
8. The system is now ready to operate.

Daily Shut-down/Purge Procedures

Component A Purge

1. Close the coupled ball valves (push down).
2. Open the component A purge ball valve.
3. Hold the dispense gun over a material waste container.
4. Hold the dispense gun open until only component A is evident.
5. Close the component A purge ball valve.
6. Close the main air valve located under the meter base plate to remove air pressure from the meter.



After the system is purged, do not open the dispense gun until the next system operation.

Disposable Mixer System

1. Remove and discard the mixer.
2. Trigger gun to ensure the outlet is clear.
3. Turn off the main air valve.
4. Wiper off gun nose.
5. If material is moisture-sensitive or dries out, protect the outlet with the night cap and ISO pump oil.

General Ratio Check Procedure

Checking the ratio allows the user to take samples of the metered material to ensure the equipment is operating properly.



The unit meters by volume but it is more convenient to check the ratio by weight. You must know the ratio by weight or the specific gravity of the materials to convert volumetric ratio to weight ratio.

1. Remove the hoses from the dispense gun. Take a material sample from the outlet of these hoses.
2. Open the air ball valves (push up) and collect a large material sample (approximately 1 pint of component A) in separate containers of known weight. Material flowing from each hose provides a sample for ratio check. When sample is collected, turn off air supply ball valve.
3. Weigh the component A and component B samples and subtract the weight of the collection containers.
4. Convert the material manufacturer's ratio to "parts component B per 100 parts component A by weight." For example, a 2:1 ratio (component A: component B) becomes 100:50.
5. Divide component B sample weight by component A sample weight.
6. Multiply the result of previous step by 100. The product is the parts component B dispensed by the machine per 100 parts component A by weight.
7. Compare the weight ratio obtained to the desired weight ratio. Repeat to obtain several successful ratio checks.
8. Put new mix elements in the gun and reconnect the hoses to the gun.

9. Ration check is complete and the unit is ready for operation

Ratio Check Example

Conversion Formula:

Parts by Volume (PBV) to Parts by Weight (PBW)

$$\frac{\text{PBV component B}}{\text{PBV component A}} \times \frac{\text{Specific gravity component B}}{\text{Specific gravity component A}} \times 100 = \mathbf{X}$$

\mathbf{X} = 100:Parts component B by weight

Ratio Check Example

$$\frac{\text{component B sample weight LESS container weight}}{\text{component A sample weight LESS container weight}} \times 100 = \text{PRODUCT}$$

PRODUCT = Parts component B per 100 parts component A

- Manufacture's specified weight ratio = 4:1 or 100:25.
- Weight of component A in ratio check is 245 grams.
- Weight of component B in ratio check is 61.2 grams.
- 61.2 divided by 245 equals .2497 (61.2 / 245 = .2497).

Three ratio checks are recommended to ensure accuracy at final setup. The presence of any air (visible or not visible) in the material or system will cause inaccurate ratio checks. If the ratio check cannot be made with repetitive accuracy, review air bleed procedures.



Some materials contain substantial amounts of entrained air due to manufacturing, transportation, system setup, or drum change. Air must be removed by de-gassing, recirculation, or self removal over time, before accurate metering can be accomplished.



A series of horizontal lines for writing, starting from the top line and extending down to the bottom line, providing a template for text entry.

Troubleshooting

8900 Proportioner Operating Pressures

There are four fluid pressure gauges on a typical 8900 Proportioner system. They are mounted on:

- Component A inlet block
- Component B inlet block
- Component A outlet block
- Component B outlet block

What the fluid gauges tell you

Inlet Gauge

The pump A and pump B inlet pressure gauge shows whether there is sufficient material supply to reliably feed each metering pump during its intake stroke. These double-acting pumps dispense and load fluid on both strokes.

The pump A and pump B supply air pressure should be set high enough to maintain reliable pump feed pressures but no higher than necessary. If gauge pressure is not consistently steady, increase fluid pressure.

Outlet Gauge

The pump A and pump B outlet gauge displays one of two conditions, *stalled* and *running*.

- **Stalled:** With the pump air valve on and the gun closed, the gauge will show full stall pressure. This pressure is the fluid to air pressure ratio of the pump assembly, times the air pressure from the main regulator, minus the friction loss of the motor and pump assembly.

The fluid to air pressure ratio changes with different motors, different supply pumps, and different ratio settings.

- **Running:** When running, the gauge reads the flow-induced pressure drop between the gauge and the gun outlet. The motor power is used up by the time the fluid exits the gun. The pressure drop is a measure of friction loss caused by hoses, the 8900 Proportioner, fittings, mixers, and gun.

The difference in the gauge reading between the stall condition and running is the amount of dynamic friction loss from the pump assembly, plus the flow-induced pressure drop from the pump lower to the pressure gauge.

Viscosity, temperature, flow rate, and gun setup can affect the amount of gauge drop when the trigger is pulled. On a typical manual gun system, the gauge drops 100-400 psi (0.7-2.8 MPa, 7-28 bar).

Component B Pump Outlet Gauge

The component B pump gauge shows line pressure, but the component B outlet pressure is generated primarily as a reaction to component A pressure at the mix chamber.

For materials running at greater than 1:1 ratio, component B cannot open the check (injector) valve until its pressure equals the component A pressure at the check valve. Hoses and injector restriction are chosen to naturally balance the pressure drop while running and match the component B pressure in the line when stalled.

Changeovers

When the pumps change direction there is a momentary change in gauges. In general, the gauges will drop 5-15%, then return. However, many factors affect the actual fluctuation, such as pump selection, fluid characteristics, flow rate, temperature, and length of hoses.

Check valves near the pump outlets isolate the hoses to let them serve as momentary surge chambers. This is why flow from the gun is smooth during changeover.

Abnormal Readings

Since so many factors affect gauge readings, it is important to know what is normal. Note how your gauges read when the machine is setup and running a good mix with no soft spots. What are the stall pressures and what are the running pressures for a given inbound air pressure? How much drop is there on changeover?

If something goes wrong, a change on the gauges can indicate what the problem is. Note those changes and work through the troubleshooting guide, beginning on page 41.

Air Supply Troubleshooting Chart

| Problem | Cause | Solution |
|---|---|---|
| Abnormal pressure loss on air motor pressure regulator gauge during both changeovers. | Air line restriction due to quick-disconnect pin fitting. | Remove quick-disconnect from the air line and replace it with bleed-type air shutoff valve. |
| Abnormal A and B pump outlet pressure loss during both changeovers. | Air supply line ID to each feed pump is too small. | Replace with minimum 3/4 in. (19 mm) ID hose. |
| Reduced flow rate. | Undersized air compressor. | Replace with properly sized air compressor. |
| Off-ratio material. | | |

During normal operating conditions, the feed pump (A and B) air motors are filled with air almost instantaneously on both changeovers.

However, if the feed pump air supply is restricted, it can take significantly longer for air to fill the air motor. To check for this, observe the gauge on the air motor pressure regulator during both changeovers:

- At the end of each stroke the air pressure will drop abnormally as the air motor begins to fill.
- At the same time the A and B pump outlet pressures will drop abnormally due to the feed pump's respective air motor's reduced pressure.
- The decrease in the pump outlet pressures causes the flow rate at the dispense gun to be reduced.
- Once the air motor has filled with air, all air pressures and flow rates will return to normal until the end of the next stroke.
- The decreased pump outlet pressure may affect the feed pumps' checking action, and thus mix ratio, resulting in the dispense of what appears to be poorly mixed material.
- Changing air pressure changes the compression of the component A hose and material. This causes an off ratio condition until pressures stabilize. Equipment air supply pressure must always stay above the motor regulator setpoint.

Pump Troubleshooting Overview

Pump Cavitation

Under normal operation, when the feed pump pressures are balanced, component A and component B outlet pressures are consistent.

Some up or down adjustments in feed pressures will be necessary to keep the pumps' outlet pressures balanced. This is due to viscosity differences in the two materials, volumetric ratio, and required flow rate. Because of the viscosity difference between the two materials, most of the balancing effect comes from adjusting the component A pressure. For ratios higher than 1:1, the component B pressure should be set only as high as necessary to avoid cavitation at the desired flow rate. For 1:1 ratio there is equal balancing from component A and component B pressure.

If either the A or B pump does not completely fill with material on intake, the failing pump's material output is interrupted at the beginning of the next stroke. This is referred to as *cavitation*.

Pump A cavitation is detected by observing the inlet pressure gauges on pump A and pump B immediately after changeover. When cavitation occurs, the proportioner pump outlet pressure gauge drops and the pump A outlet pressure gauge shows an increase in pressure, as described previously.

B pump cavitation is detected by observing the B pump inlet pressure gauge immediately after pump top changeover. When cavitation occurs, the B pump outlet pressure gauge drops.

If the amount of cavitation is moderate, the pressure gauges return to their normal readings at some point during the downstroke of the failing pump.

During pump A cavitation, the pressure drop may cause a noticeable reduction in flow rate at the dispense gun. Additionally, the interruption in the pump A material output may cause component B-rich material to dispense, which may appear as poorly mixed material.

During B pump cavitation, the interruption in the B pump material output may cause component A-rich material to dispense, which may appear as poorly mixed material.

Pump Failure to Seal

Under normal operation, the output of the component A and component B pumps depends upon proper sealing of their internal packings.

If packings fail to seal properly, the pump material output, and thus the output pressure, is reduced. Depending on the location of the failure, the pressure reduction may occur on the pump upstroke, downstroke, or both strokes.

Component B Pressure Relief Valve

The proportioner includes a spring-loaded, overpressure relief valve, which bypasses component B back to the supply when pressures exceed 3400 psi (23 MPa, 234 bar).

Troubleshooting Guide: Feed pumps

| Problem | Cause | Solution |
|---|----------------------------|---|
| Erratic feed pump speed. | Pump cavitation. | Bleed air from pump. |
| | Pumping too fast. | Turn down air pressure regulator. |
| | Improper pump loading. | Increase ram down pressure Ram valve not in down position. |
| | Pump lower not performing. | Rebuild pump |
| Material leaking from top of pump | Loose packing nut. | Retighten. |
| | Worn throat seals. | Rebuild pump, replace seals. |
| Feed pump fails to cycle | Air supply off. | Check air valves/line pressure. Turn on if required. |
| | Air pressure too low. | Increase air pressure on respective feed pump air regulator. |
| | Stalled air motor. | Motor icing (warm up). Check air filter and lubrication. |
| Ram fails to move up and down | Lack of air pressure. | Turn on or increase air supply pressure to ram. |
| | Ram failure. | Check and rebuild. |
| Material leaking past follower plate seal (small amount of leakage is normal) | Too much ram pressure. | Reduce ram down pressure on ram air pressure. |
| | Worn wiper seals. | Replace. |
| | Dented container. | Straighten or replace container. |

Troubleshooting Guide: 8900 Proportioner

| Problem | Cause | Solution |
|---|---|--|
| Inconsistent material mix | Material inlet pressures are not set correctly. Erratic feed pump. | Follow flow rate procedures and ram feed pump troubleshooting guide. |
| | Mix elements not assembled correctly or need to be replaced. | Fix or replace. |
| | Cylinder cups are bypassing material. | Replace cylinder cups. |
| | Material outlet hoses are not sized correctly (pressures not balanced). | Call Graco Tech Service - (800) 543-0339 |
| | Material ball valves are bypassing. | Rebuild/replace. |
| | Insufficient air supply to material supply pumps. | Verify consistent air supply. |
| | Purge valve open (if applicable). | Close during operation. |
| Meter pressures never change | Broken material gauge(s). | Replace. |
| Meter will not shift at the end of the stroke. | Limit valve not working correctly. | Rebuild/replace, see page 47. |
| | No material inlet pressure. | Verify. |
| | No air supply to limit valve. | Verify. |
| Meter will not move | Material inlet pressure not high enough to drive meter. | Verify low pressure on the gauges before increasing. |
| | 4-way ball valve orientation incorrect. | Check, fix. |
| | Dispense valve closed. | Open. |
| | Blockage in material hose. | Depressurize system and repair. |
| | Blockage in meter assembly. | Depressurize system and repair. |
| Material leaking from meter end caps | Worn seals. | Replace. |
| | End caps loose. | Hand tighten with wrench provided. |
| Meters not balanced | Improper operation of supply pumps. | Check for proper operation of material supply pumps. Each should have adequate material supply. Reasonably constant and balanced meter inlet and outlet pressures indicate proper pump function. If flow rate is increased by increasing A pump pressure, increase B pump pressure proportionally to balance meter inlet and outlet pressures. |
| | Inadequate material supply to pumps. | |
| Meter outlet pressure too high, metering inaccurate, decreased flow rate, non-uniform mix (streaking) | Curing material in the mixer or blockage of either mixer inlet port (check valves/injector valves plugged). | Clear blockage. |
| Incorrect ratio check and reduced flow rate | Material may be bypassing rather than flowing through the meter. | Check for leakage in meter seals and cups. |
| Inaccurate metering | Air in the material or trapped in the pumping and metering components. | Bleed the air from the pump. |

Troubleshooting Guide: Manifold/Mixer

| Problem | Cause | Solution |
|---|---|---|
| Poor mix quality. | Dirty mixer. | Disassemble Tri-Core mixer, clean housing and end caps, and replace mix elements. |
| | Inadequate mixing. | Add mixer with more elements or larger ID mixer. |
| | Dirty mixer and gun. | Replace flex mixer or clean Tri-Core mixer and gun. |
| | Tri-core mixer assembled improperly. | Reassemble with scribe lines on end caps aligned. |
| | Fouled or plugged component B injector. | Clean or replace injector. |
| | Cavitation due to ram air control valve not in DOWN position. | Place control valve in DOWN position. |
| | Cavitation due to low ram pressure. | Increase to required operating pressure. |
| Reduced flow rate. | Dirty mixer. | Disassemble Tri-Core mixer, clean housing and end caps, and replace mix elements. |
| | Dirty mixer and gun. | Replace flex mixer or clean Tri-core mixer and gun. |
| | Leaking component B shutoff valve. | Repair or replace valve. |
| Poor purge quality. | Leaking component B shutoff valve. | Repair or replace valve. May require solvent flush after valve replacement. |
| Abnormally high B pump outlet pressures. | Fouled or plugged component B injector. | Clean or replace injector. |
| | Feed pressure too high. | Reduce feed pressure. |
| Abnormally high pump A outlet pressures. | Restriction in gun or hose, plugged check valve. | Clean out gun. Inspect for cured material in check valve. |
| Soft spots or color change relating to changeovers. | Pressures are out of balance. | Adjust pressure settings on A and B supply pumps to balance outbound ram pressure too low on feed pump. |

Component B Injector

In most dispense systems, an injector is included in the component B fluid line. This injector adds back pressure to the system and provides the necessary pressure balance between component A and component B to achieve the proper ratio and mix.

If the injector becomes fouled with mixed material, the pressure indicated on the B pump outlet gauge will increase and upset the pressure balance, resulting in the dispense of poorly mixed material.

If the injector becomes completely plugged, only component A is dispensed from the gun and the B pump outlet pressure will increase until the relief valve discharges.

If the injector valve sticks, it can react sluggishly causing soft spots after valve triggering or changeover.

Keep the injector clean. Inspect the housing tip and needle end for dents or scratches. Lapping the needle to the housing with automotive lapping compound will recondition the seat/needle. When reassembling the injector, tighten the nut 2-2.5 turns after the slack is taken up.

It is good practice to have a clean injector on hand. A fouled injector can then be replaced quickly, and thoroughly cleaned and held for future use.

Preventive Maintenance

1. Air supply: Oil level in main air line lubricator should be checked daily and refilled when necessary with SAE 10W non-detergent oil. Adjust to dispense 1 drop per minute during operation.

Main air line filter should be drained as required. Excessive amounts of water in the system will reduce machine performance.

2. Housekeeping: Spilled materials on any part of the equipment should be cleaned up promptly. Your system is precision equipment and should be maintained as such. A light coating of petroleum jelly on components will often prevent spilled material from sticking to equipment.
3. Pumps: Pump packing should be tightened daily the first week of operation and weekly thereafter.
4. When using Throat Seal Lubricant (TSL) or ISO oil, the lubricant should be maintained at an adequate level in the pump packing reservoir. These lubricants prevent material from sticking to pump rods, extends packing life, and protects material from contamination from the atmosphere.



Use ISO oil when dispensing moisture-sensitive materials.

Meter: Maintain TSL or ISO oil in reservoir if used; grease zerk fitting. Clean up spills as soon as possible to prevent damage to the meter.

5. Mixer: With most materials, frequent use of equipment is all that is needed to prevent internal curing. Some materials have a tendency to cure slowly on the walls of the mixing chamber. Experience will dictate how often the mixer or mixer elements should be thoroughly cleaned or replaced.
6. O-rings/Seals: O-rings and seals will be damaged if soaked in solvents. When reusing, wipe with solvent and dry immediately.

Service and Repair

Repair the Cylinder (Fixed Ratio)



- Relieve pressure throughout the 8900 Proportioner assembly. Follow the pressure relief procedure on page 32.
- Reference numbers shown in parentheses in Service and Repair procedures refer to references in figures and parts lists.

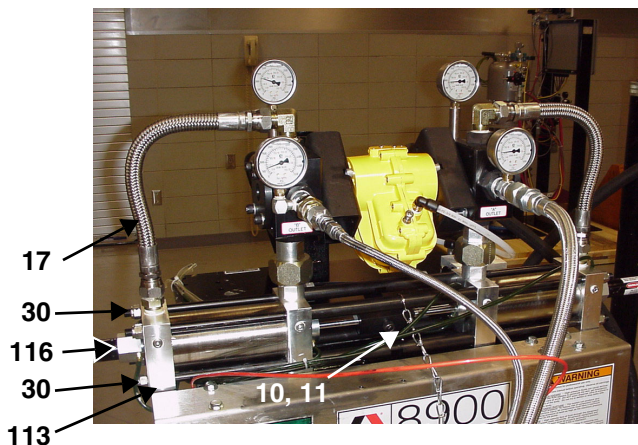


FIG. 29: Fixed Ratio 8900

- Disconnect hose (17) on cylinder end manifold, FIG. 29.
- Remove guard tube (116).
- Loosen and remove 4 locknuts (30).
- Loosen nut (10) on coupling (11) and disconnect pump rod from coupling.



If the entire cylinder needs to be removed and serviced at another location, loosen and remove screws (49). Then loosen union (9) to remove the cylinder assembly from unit. See page 51.

- Pull on cylinder block (113), FIG. 31. Cylinder should come apart.
- Remove rod and piston assembly from cylinder.
- Remove packing nut (115) from cylinder block (113) and remove throat packings and glands (110, 111, 112).

- Remove packing nut (103) from opposite cylinder end cap (106) and remove throat packings and glands (110, 111, 112).
- Remove piston assembly (106, 107) from rods (101, 102).
- Replace V packings and glands on both ends with new ones and reassemble in reverse order of disassembly.
- Replace cylinder end o-rings (109) on each cylinder end cap. Apply grease to each to help hold o-ring into end cap.
- Push piston assembly through cylinder block (113).



Use grease generously during reassembly.

- Replace o-rings (114) on each packing nut and screw, then screw packing nut back into cylinder end caps. Hand tighten until firmly seated on packings, then wrench tighten 1/4 turn.
- Push cylinder assembly back together.
- Complete reassembly of the cylinder in reverse order of disassembly.

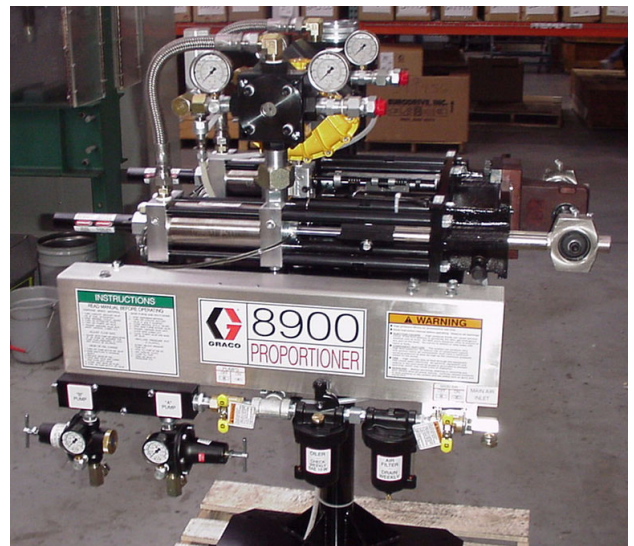


FIG. 30: Variable Ratio 8900

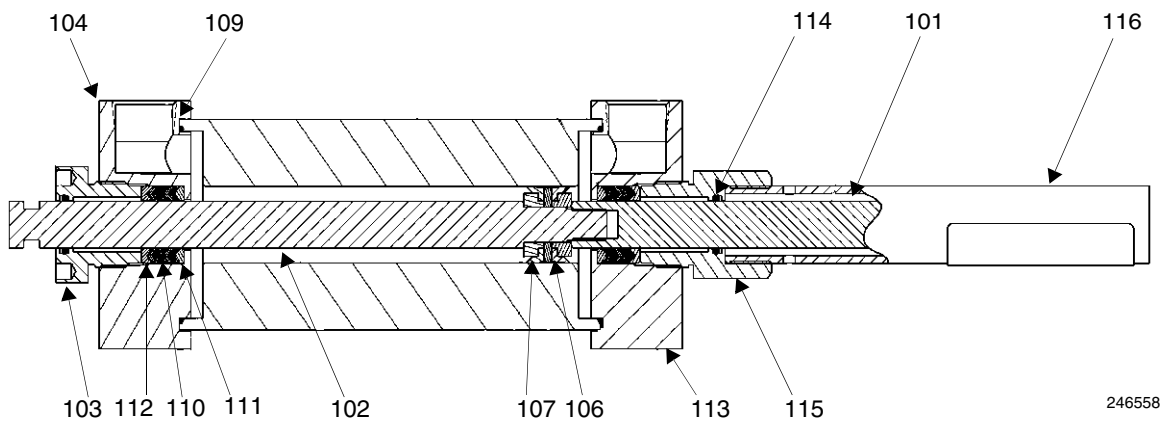
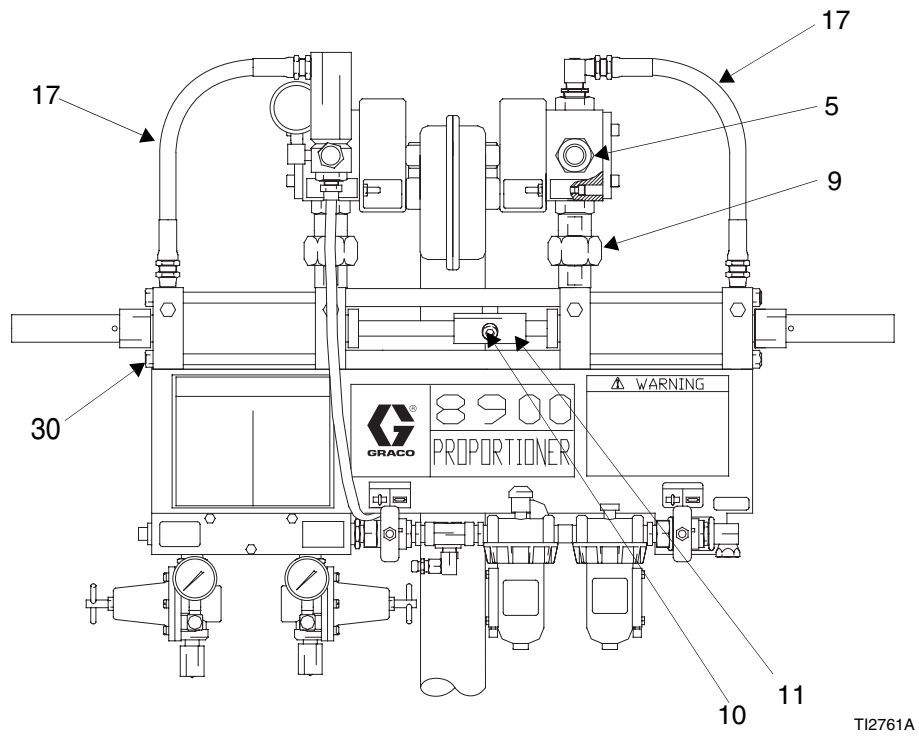


FIG. 31

Replace Air Valve

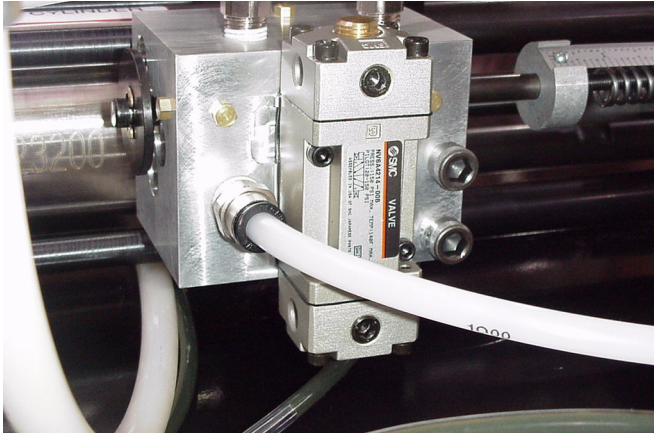


FIG. 32

1. Unscrew 2 socket head cap screws (311), FIG. 33.
2. Pull complete air valve assembly off cylinder and connecting rod assembly.
3. Remove retaining ring and plate off end and pull rod through.
4. Remove retaining ring off appropriate air valve (303), pull out valve (304) and replace with new valve.
5. Reassemble in reverse order of disassembly. Make sure not to remove spacer (305) during disassembly. This spacer sets correct alignment of valves.
6. Reattach air valve assembly to the 8900 cylinder block and connecting rod assembly.

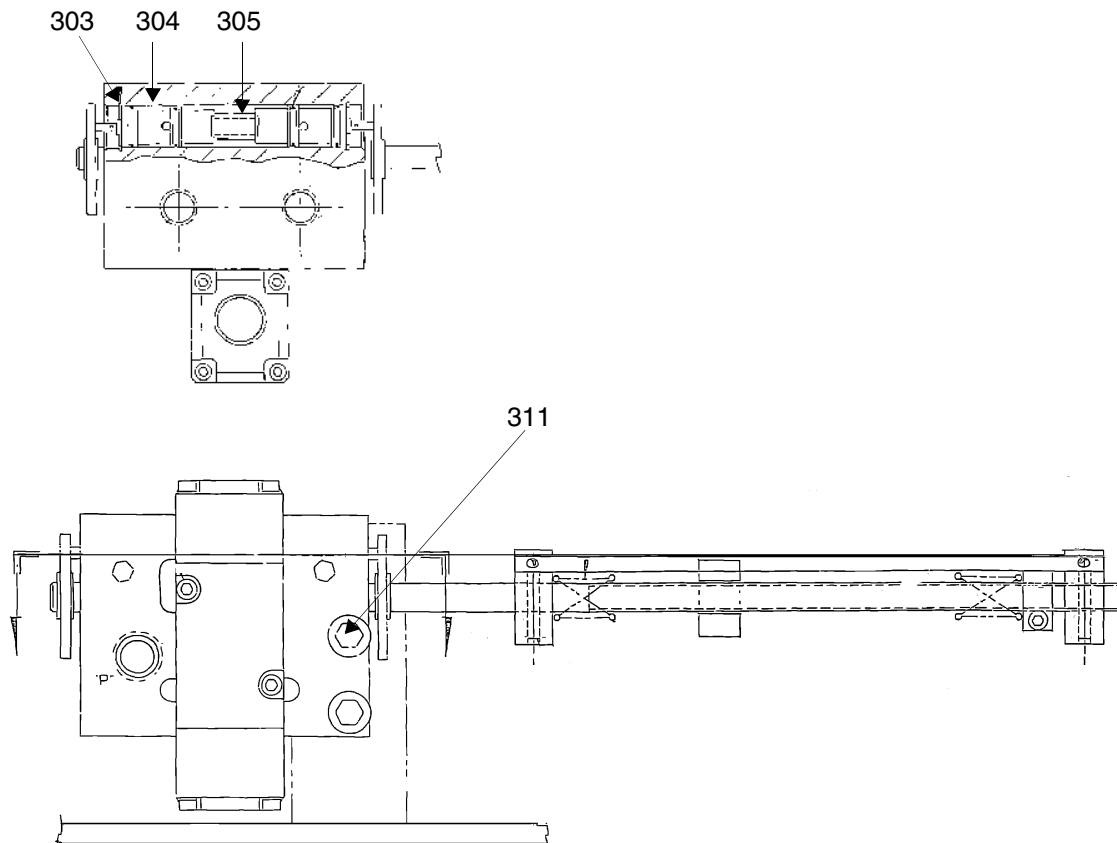


FIG. 33

Disassemble Fluid Valve

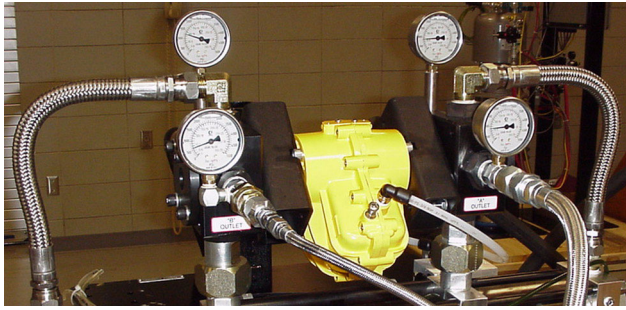


FIG. 34

1. Relieve pressure and turn off feed supply units. Close air valve.
2. Remove valve assembly from 8900 cylinder. Take off hose (17), union (9), fitting in (5), fitting out (5). See FIG. 31.

3. Remove 4 socket head cap screws (415, FIG. 35).
4. Pull off end cap (413).
5. Pull out ball passage (411) with backup ring (409), packing o-ring (410), and bushing (408).
6. Remove packing assemblies consisting of seal (402), o-ring (403), bushing (404), o-rings (406, 407), and connector (405).
7. 4-way valve must be installed so that flow paths marked on shaft (see illustration below) are 90° out of phase with each other. Stamped indicators on shaft end of valves show material flow paths. The 8900 Proportioner will not cycle if the valves are not in proper phase with each other.

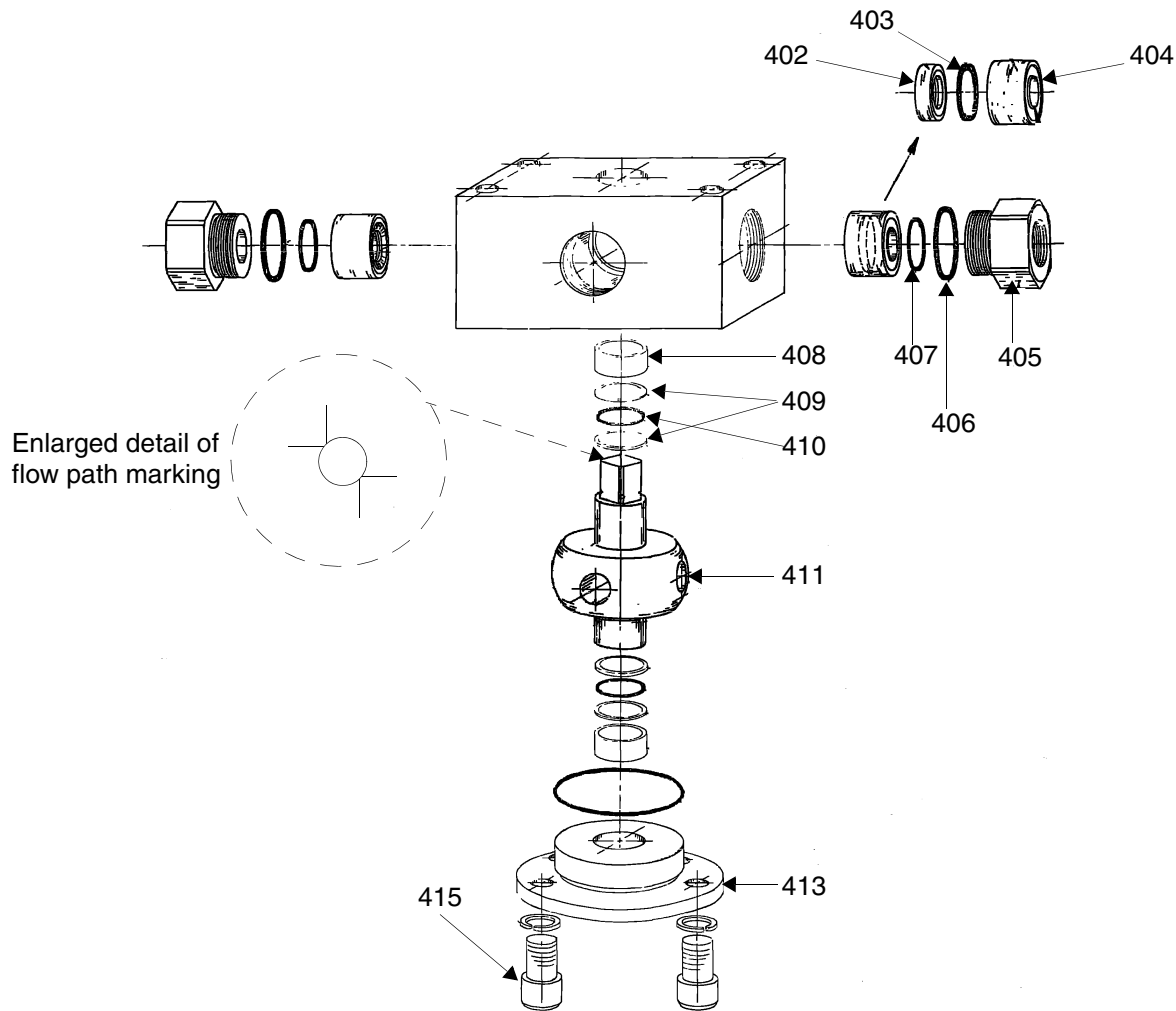


FIG. 35



A series of horizontal lines spanning the width of the page, providing a template for writing or drawing.


Parts



8900 Proportioner, Fixed Ratio

| Fixed Ratio | Assembly No. | Item 7 | | | | Item 14 | | |
|-------------|--------------|-------------|--------|--------|--------|---------|--------|--------|
| | | Part Number | | | | | | |
| | | 570367 | 570369 | 570366 | 246558 | C24145 | 570366 | 570367 |
| | | Quantity | | | | | | |
| 1:1 | 570371 | | | | | 2 | | |
| 2:1 | 570372 | 1 | | | | 1 | | |
| 2.5:1 | 570373 | | 1 | | | | 1 | |
| 4:1 | 570374 | | | 1 | | 1 | | |
| 5:1 | 570375 | | 1 | | | | | 1 |
| 9:1 | 246557 | | | | 1 | 1 | | |
| 10:1 | 570376 | | 1 | | | 1 | | |

| Ref. No. | Part No. | Description | Qty. |
|----------|----------|---|------|
| 27 | 598729 | ELBOW, 90°; 1/4 npt x 1/4 in. tube | 1 |
| 28 | 590385 | TUBE, nylon; 0.375 OD; 6 ft | * |
| 30 | 101926 | LOCKNUT; 1/2-20 NF | 8 |
| 31 | C29034 | WRENCH, spanner | 1 |
| 38 | C03190 | RING | 2 |
| 39 | C23269 | CHAIN | 1 |
| 40 | C24140 | MANIFOLD, lube | 1 |
| 41 | 949666 | AIR CONTROL; see page 55 | 1 |
| 42 | C30021 | U-BOLT; 3/8-16 UNC | 2 |
| 43 | 237112 | VALVE, relief | 1 |
| 44 | 113344 | UNION, swivel; 1/2-14 npt x 3/4 npsm | 2 |
| 45 | 156022 | ADAPTER; 1/2-14 x 3/8-18 npt | 1 |
| 46 | 205439 | COUPLING, hose, 3/8-18 npsm | 1 |
| 47 | 061134 | HOSE, nylon; 1/2 in. OD, 1.4 MPa, (14 bar, 200 psi), 6' | 1 |
| 48 | 105209 | SCREW; 10-32 UNF x 7/8 in. | 2 |
| 49 | 100101 | SCREW; 3/8-16 UNC x 1 in. | 10 |
| 50 | 100131 | NUT; 3/8-16 UNC | 6 |
| 51 | 100133 | WASHER, lock; 7/16 in. | 6 |
| 52 | 965785 | BASE | 1 |
| 57 | 100840 | ELBOW; 1/4-18 npt | 1 |

| Ref. No. | Part No. | Description | Qty. |
|----------|----------|---|------|
| 1 | C24016 | ARM, trip | 1 |
| 2 | 100721 | PLUG | 4 |
| 3 | 187877 | TUBE, gauge | 2 |
| 4 | 102814 | GAUGE, fluid pressure | 4 |
| 5 | 180916 | T-FITTING; 3/4 npt(m) x 1/4 npt(f) | 4 |
| 6 | 157785 | UNION, swivel; 3/4 nps x 3/4 npt | 3 |
| 7 | | CYLINDER; see table above; see page 54 | 1 |
| 8 | C19411 | CONNECTOR; 3/8 npt x 3/8 tube | 1 |
| 9 | C24042 | UNION; includes 9a | 2 |
| 9a | 105802 | • O-RING; fluoroelastomer | 2 |
| 10 | C19854 | SCREW; 1/2-13 UNC x 1.5 in. | 1 |
| 11 | C23016 | COUPLING | 1 |
| 12 | C24013 | SPACER | 4 |
| 13 | C24053 | COUPLING | 2 |
| 14 | | CYLINDER; see table above; see page 54 | 2 |
| 17 | 552272 | HOSE; 3/4 npt, 4000 psi (28 MPa, 276 bar) | 2 |
| 19 | 100214 | LOCKWASHER | 4 |
| 20 | C19829 | SCREW; 5/16-18 x 2.5 in. | 4 |
| 21 | 100188 | NUT; 5/16-18 | 4 |
| 22 | C24052 | BRACKET, valve mounting | 2 |
| 23 | 109212 | SCREW; 3/8-24 x 3/4 in. | 8 |
| 24 | C24046 | ACTUATOR, pneumatic | 1 |
| 25 | C24029 | VALVE, 4-way | 2 |
| 26 | C24014 | VALVE, limit | 1 |

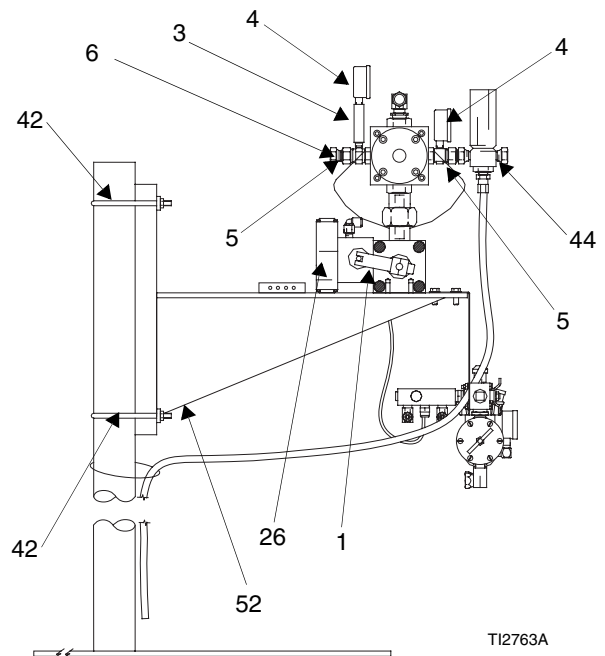

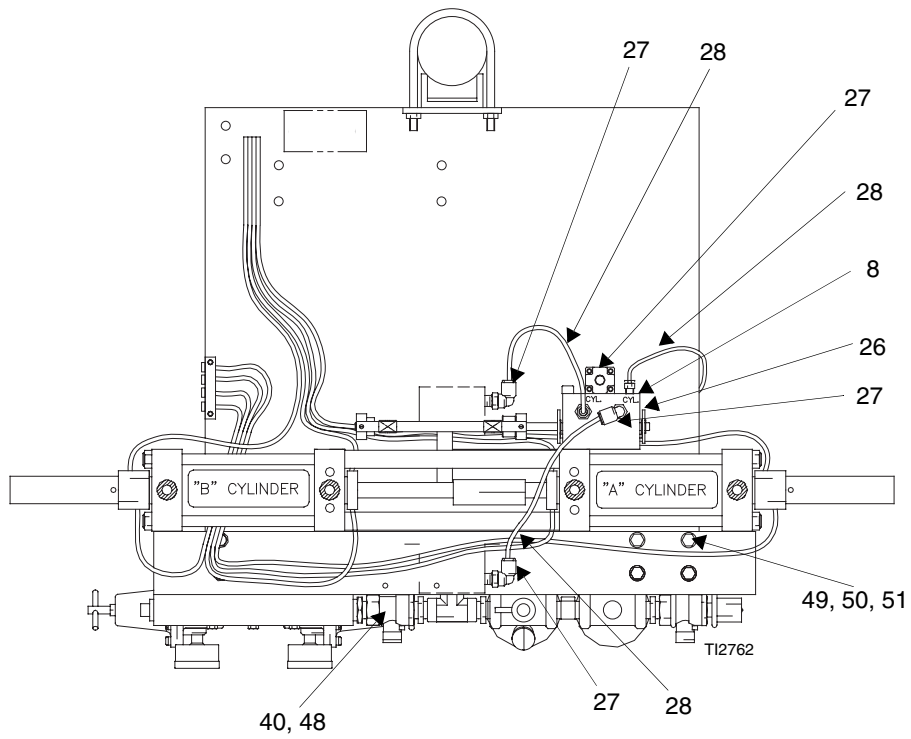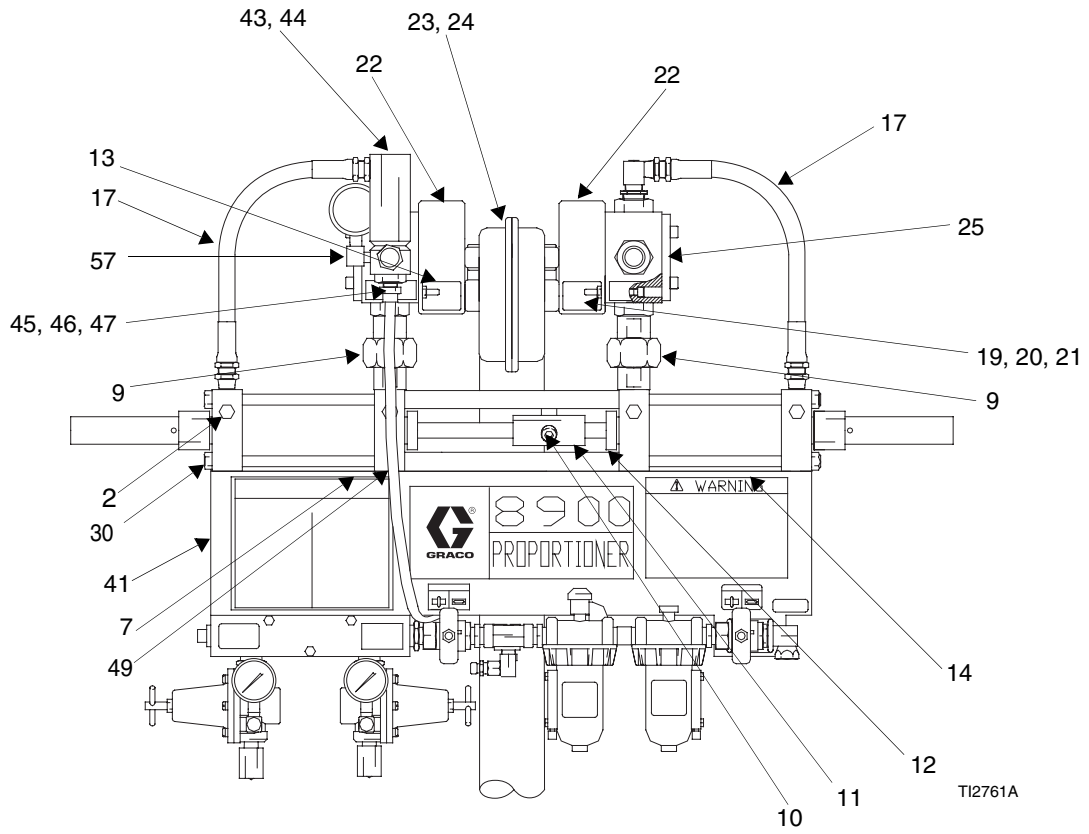


8900 Proportioner, Variable Ratio


| Variable Ratio | Assembly No. | Item 1 | | Item 2 | |
|----------------|--------------|-------------|--------|--------|--------|
| | | Part Number | | | |
| | | 570367 | 570369 | 570366 | 570369 |
| | | Quantity | | | |
| 1:1 - 4:1 | 570377 | 2 | | | |
| 2:1 - 8:1 | 570378 | 1 | | | 1 |
| 5:1 - 20:1 | 570380 | 1 | | | 1 |

| Ref. No. | Part No. | Description | Qty. |
|----------|----------|---------------------------------------|------|
| 1 | | CYLINDER; see table above and page 54 | |
| 2 | | CYLINDER; see table above and page 54 | |
| 4 | 180916 | FITTING, TEE 3/4m run X 1/4f | 4 |
| 5 | 100721 | PLUG, pipe | 4 |
| 6 | 157785 | FITTING, union, swivel | 3 |
| 7 | 102814 | GAUGE, pressure, fluid | 4 |
| 9 | 552272 | HOSE, PTFE 3/4-18" 5000 psi npt(m) | 2 |
| 12 | C23016 | COUPLING, pair | 2 |
| 13 | C19854 | SCREW, cap, socket head (570377) | 2 |
| | C19854 | SCREW, cap, socket head (570378) | 2 |
| | C19855 | SCREW, cap, socket head (570380) | 2 |
| 14 | C24016 | ARM, trip | 1 |
| 15 | C24422 | ROD, tie | 8 |
| 16 | C20557 | NUT, locking, metallic | 16 |
| 17 | C23280 | 8841-4-A, beam assembly | 1 |
| 18 | C24420 | SCREW, ratio adjusting | 1 |
| 19 | C24419 | PLUNGER | 2 |
| 20 | C29031 | BAR, uni | 1 |
| 21 | C29023 | ASSEMBLY, fulcrum | 1 |
| 22 | C29037 | STOP, unibar | 2 |
| 23 | C19852 | SCREW, cap, socket head | 2 |
| 24 | C24046 | ACTUATOR, pneumatic | 1 |
| 25 | C07086 | COUPLER, long | 2 |
| 26 | C24418 | BRACKET, 3/4 valve mounting | 2 |
| 27 | C24029 | VALVE, 4-way | 2 |
| 29 | 109212 | SCREW, cap, socket head | 8 |
| 30 | C19829 | SCREW, cap, socket head | 4 |
| 31 | 100188 | NUT, heavy hex | 4 |
| 32 | 100214 | WASHER, lock | 4 |
| 33 | C23276 | MONITOR, scale | 1 |
| 34 | C19798 | SCREW, cap, socket head | 2 |
| 35 | 100018 | WASHER, lock, spring | 3 |
| 36 | 100321 | NUT | 1 |
| 37 | C24456 | SPACER, 8981-1-13 | 2 |
| 38 | C24014 | VALVE, limit | 1 |
| 39 | C24042 | FITTING, union, assembly | 2 |
| 40 | C24417 | STUD | 2 |
| 42 | C24423 | PLATE | 1 |

| Ref. No. | Part No. | Description | Qty. |
|----------|----------|---------------------------------------|------|
| 43 | 100847 | FITTING, lubrication | 2 |
| 44 | C24442 | PLATE, designation | 1 |
| 45 | C29034 | TOOL, spanner wrench | 1 |
| 46 | C23269 | CHAIN | 1 |
| 47 | C03190 | RING | 2 |
| 49 | 100840 | ELBOW, street | 4 |
| 53 | C29043 | BUSHING, ball | 2 |
| 54 | 156589 | FITTING, union, adapter, 90 degree | 2 |
| 55 | 157191 | FITTING, adapter | 2 |
| 56 | 237112 | VALVE, relief | 1 |
| 57 | 156022 | ADAPTER | 1 |
| 58 | 205439 | COUPLING, hose | 1 |
| 59 | 061134 | HOSE, nylon | 6 |
| 60 | C24140 | MANIFOLD, lubrication | 1 |
| 61 | 105209 | SCREW, cap, socket head | 2 |
| 62 | 949666 | AIR CONTROL; see page 55 | 1 |
| 63 | 100101 | SCREW, cap, hex head | 10 |
| 64 | 100131 | NUT, full hex | 6 |
| 65 | 100133 | WASHER, lock | 6 |
| 66 | 965785 | BASE, weld mount 8900 VR | 1 |
| 67 | C30021 | BOLT, u | 2 |
| 68 | 626814 | SPACER, .75 od x .45 id x .50 lg alum | 4 |
| 72 | 598729 | FITTING, elbow, male, 90 degree | 2 |
| 73 | 513066 | TUBE, 3/8 in. OD nylon 3.6 ft | * |
| 74 | C19413 | FITTING, tube | 2 |
| 75 | 513754 | COLLAR, shaft 1.250 cs split | 2 |

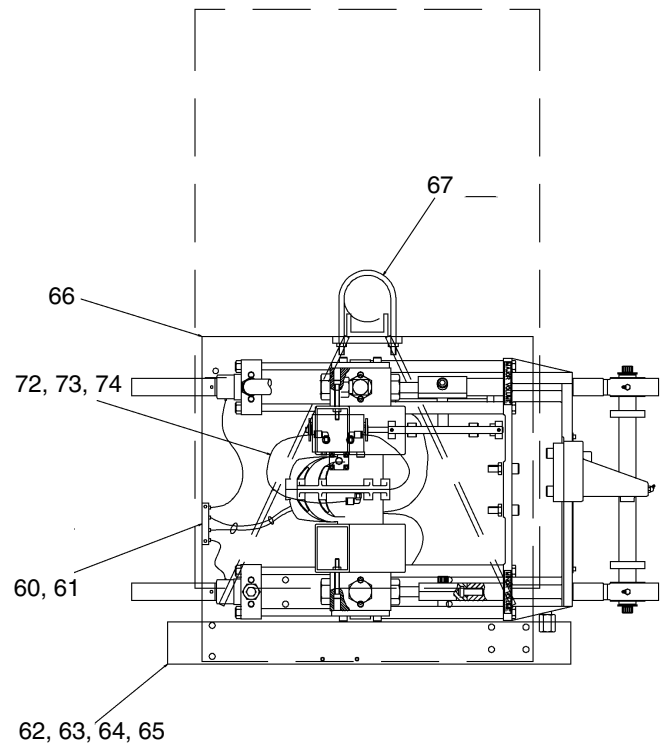

Top View

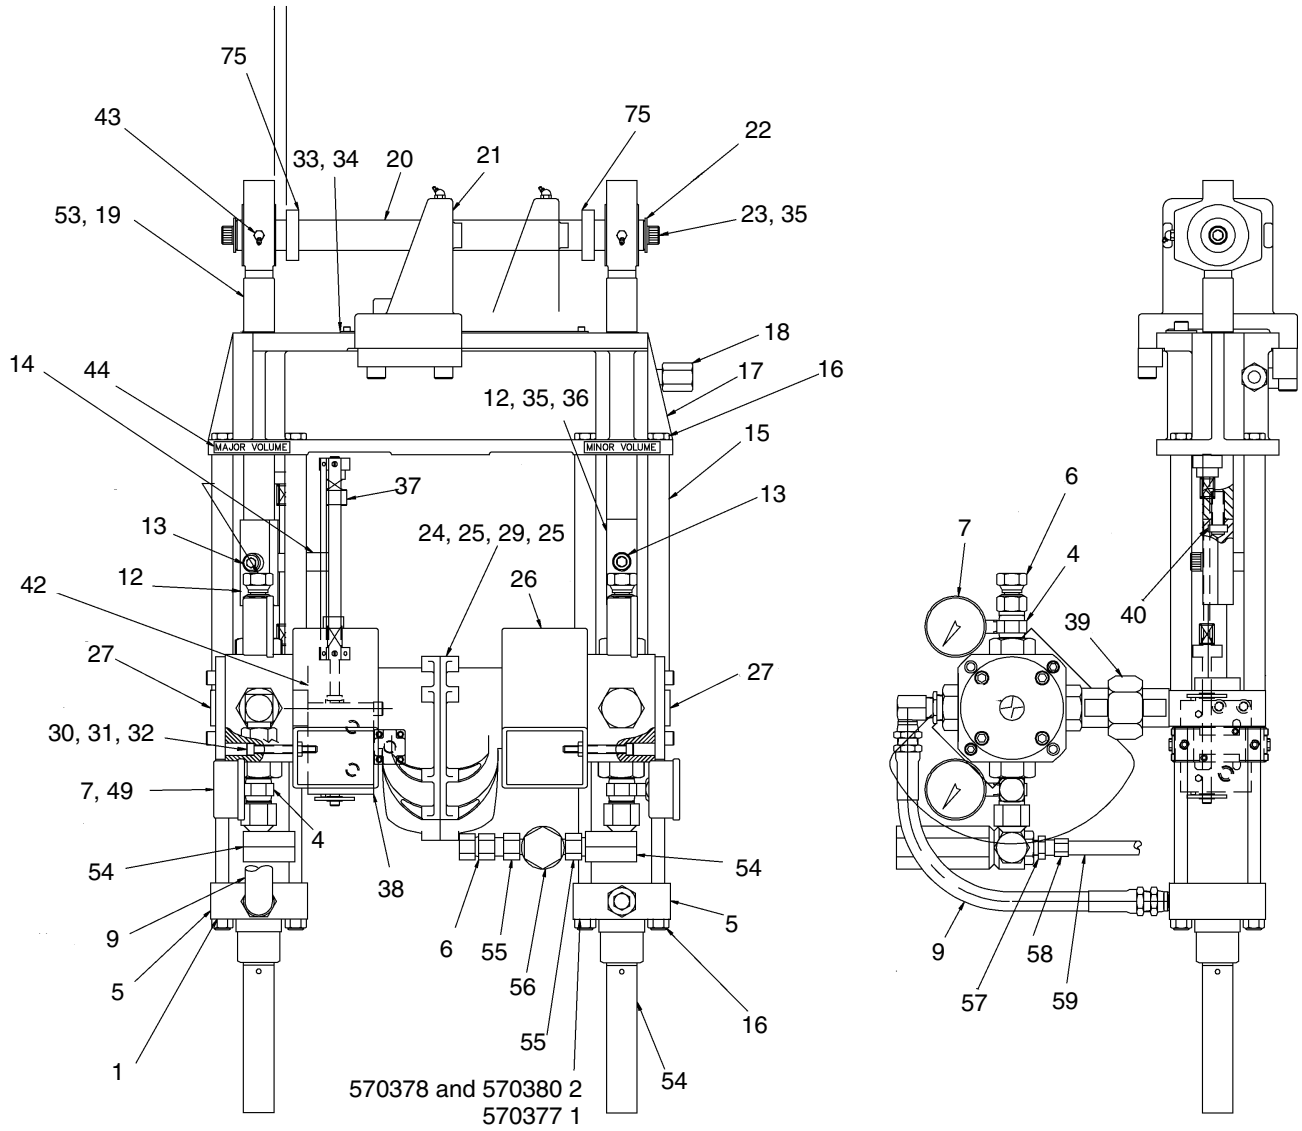

Cylinder Assemblies

(ref. nos. 7 and 14 FR, 1 and 2 VR)

Part No. 246558

Model 246557 only

Part No. 570366

Models 570373 and 570374 only

Part No. 570367

Models 570372, 570375, and 570377 only

Part No. 570369

Models 570371 and 570376 only


Part No. C24145

Models 570371, 570372, 570374, 246557, and 570376

Ref.

| No. | Part No. | Description | Qty. |
|-----|----------|-----------------------------|------|
| 101 | C24054 | SHAFT, piston, outer | 1 |
| 102 | C24055 | SHAFT, piston, inner | 1 |
| 103 | C24022 | NUT, packing | 1 |
| 104 | C24026 | BLOCK, cylinder, inside | 1 |
| 105 | 15C180 | CYLINDER, 111; 246558 only | 1 |
| | C23171 | CYLINDER, 250; 570366 only | |
| | C23200 | CYLINDER, 500; 570367 only | |
| | C23137 | CYLINDER, 100; 570369 only | |
| | C23136 | CYLINDER; 1000; C24145 only | |

| Ref. No. | Part No. | Description | Qty. |
|----------|----------|---------------------------------|------|
| 106 | 15C181 | SPACER; 246558 only | 1 |
| | C23431 | SPACER, 570366 only | |
| | C23460 | SPACER, 570367 only | |
| | C23398 | SPACER; 570369 only | |
| | C05031 | SPACER; C24145 only | |
| 107 | 15C182 | PACKING, cup; 246558 only | 2 |
| | C23318 | PACKING, cup; 570366 only | |
| | C23350 | PACKING, cup; 570367 only | |
| | C23282 | PACKING, cup; 570369 only | |
| | C05032 | PACKING, cup; C24145 only | |
| 108 | 15C183 | RING, backup; 246558 only | 2 |
| | C23547 | RING, backup; 570366 and 570367 | |
| | C23515 | RING, backup; 570369 only | |
| | C05029 | RING, backup; C24145 only | |
| 109 | C20278 | O-RING; fluoroelastomer | 2 |
| 110 | C21002 | V-PACKING; PTFE | 10 |
| 111 | C36244 | GLAND, male | 2 |
| 112 | C36246 | GLAND, female | 2 |
| 113 | C24023 | BLOCK, cylinder, outside | 1 |
| 114 | 188554 | O-RING, fluoroelastomer | 2 |
| 115 | C57617 | NUT, packing | 1 |
| 116 | C57618 | TUBE, guard | 1 |
| 117 | 179788 | LABEL, warning | 1 |


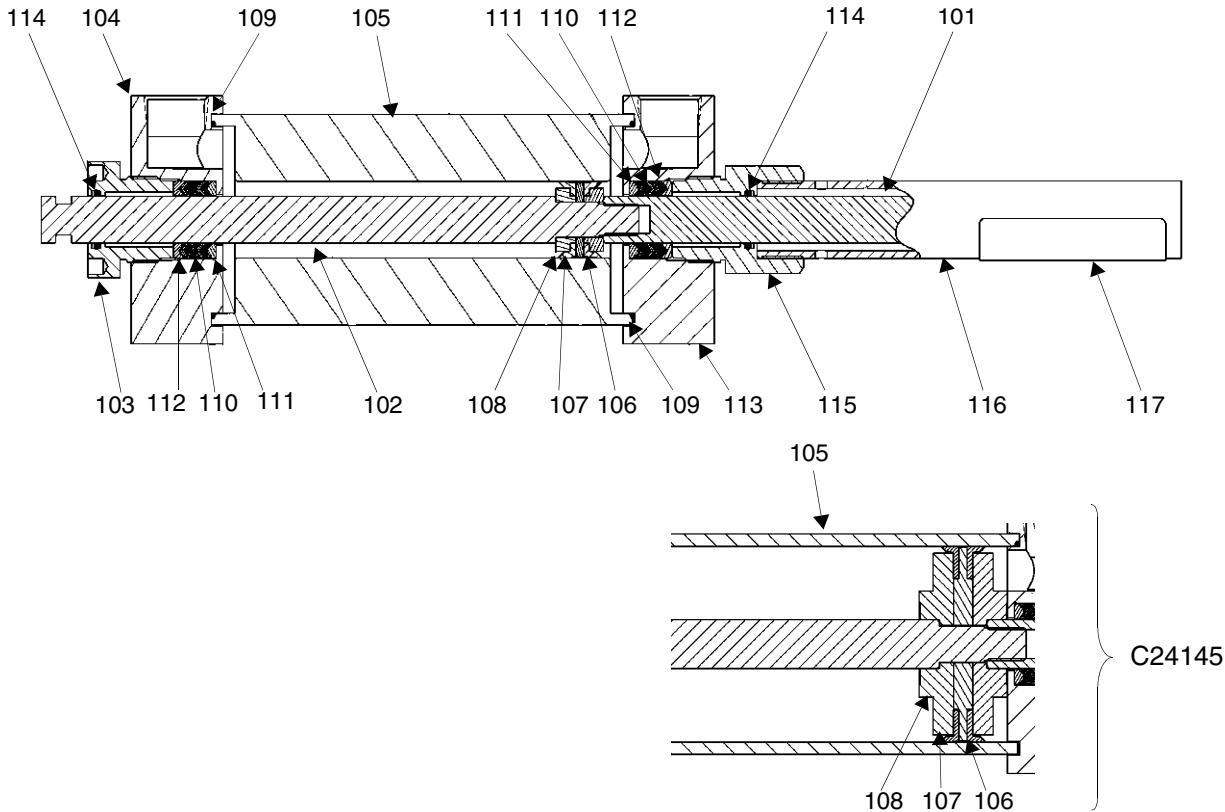


Limit Valve

(ref. no. 26 FR, 38 VR)

Part No. C24014

| Ref. No. | Part No. | Description | Qty. |
|----------|----------|---------------------------------|------|
| 301 | C20439 | RING, retaining ext | 4 |
| 302 | C24008 | WASHER | 2 |
| 303 | C20407 | RING, retainer | 2 |
| 304 | C22064 | VALVE | 2 |
| 305 | C24007 | SPACER | 1 |
| 306 | C24051 | MANIFOLD | 1 |
| 307 | 100079 | WASHER, lock, spring | 2 |
| 308 | C19977 | SCREW, cap | 2 |
| 309 | C24012 | VALVE, 4-way | 1 |
| 310 | C20852 | FITTING, plug, 10-32 | 5 |
| 311 | C19835 | SCREW, cap socket head | 2 |
| 312 | C24017 | ROD, trip, valve | 1 |
| 313 | C24009 | SPRING, compression | 2 |
| 314 | C20068 | PIN, spring | 2 |
| 315 | C24018 | COLLAR, stop | 2 |
| 316 | C24019 | INDICATOR, scale | 1 |
| 317 | C19146 | SCREW, mach, slotted round head | 2 |
| 318 | C24020 | COLLAR, clamp | 1 |
| 319 | C19264 | PLUG, pipe plug 1/4 in. | 3 |
| 320 | C24016 | ARM, trip | 1 |

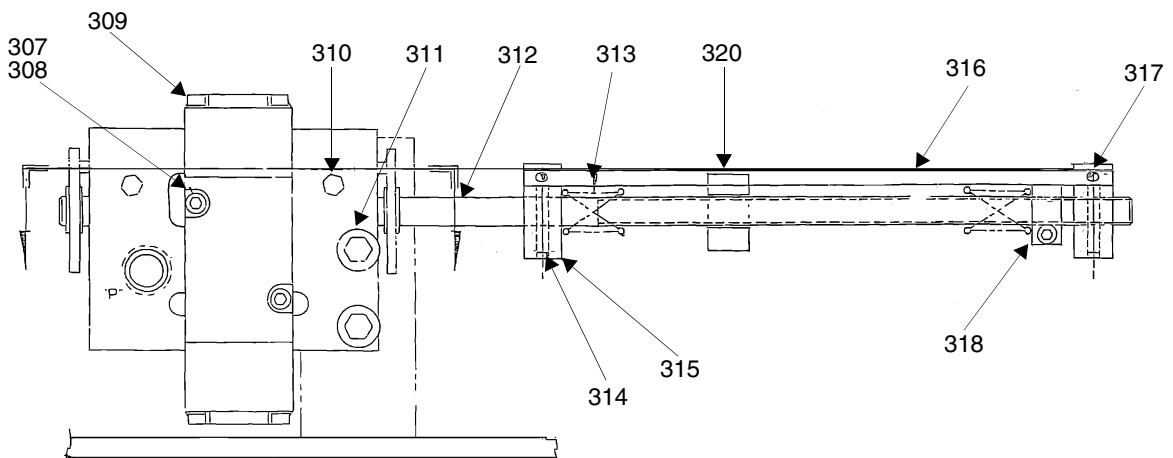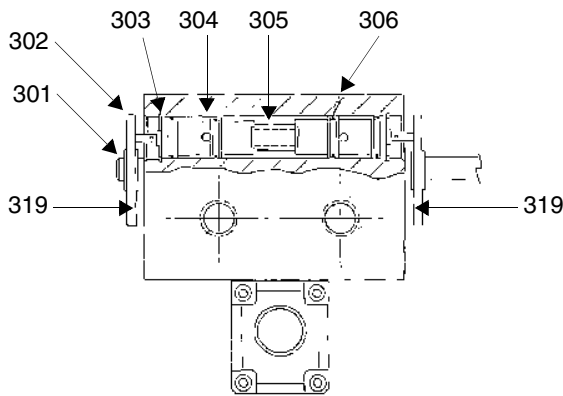


Air Control

(ref. no. 41 FR, 62 VR)

Part No. 949666

| Ref. | No. | Part No. | Description | Qty. |
|------|------|----------|---|------|
| | 212 | 101846 | TEE; 1/2 npt | 1 |
| | 213 | 100122 | NIPPLE; 1/2-14 npt | 2 |
| | 214 | 214848 | LUBRICATOR, air line | 1 |
| | 215 | 106149 | FILTER, air; 1/2 npt | 1 |
| | 216 | 172124 | NIPPLE; 1/2-14 x 3/8-18 npt | 1 |
| | 219▲ | 551206 | WARNING LABEL | 1 |
| | 220▲ | 551207 | INSTRUCTION LABEL | 1 |
| | 221 | 158990 | AIR MANIFOLD | 1 |
| | 222 | 158491 | NIPPLE; 1/2-14 npt | 1 |
| | 223 | 155495 | UNION, 90° swivel; 1/4 npsm x 3/8 npt | 2 |
| | 224 | 162453 | NIPPLE; 1/4 npsm x 1/4 npt | 2 |
| | 225 | 101748 | PLUG; 3/8-18 npt | 2 |
| | 226 | 100361 | PLUG; 1/2-14 npt | 1 |
| | 227 | C19411 | CONNECTOR; 3/8 tube x 3/8 npt | 1 |
| | 228 | 106285 | U-BOLT; 1/4-20 UNC | 2 |
| | 229 | C19394 | ELBOW, 90°; 3/8 tube x 3/8 npt | 1 |
| | 201 | 626086 | BRACKET | 1 |
| | 202 | 624225 | AIR MANIFOLD | 1 |
| | 203 | 157191 | ADAPTER; | 3 |
| | 204 | 206197 | AIR REGULATOR; 1/2 x 3/4 npt | 2 |
| | 205 | 100840 | ELBOW; 1/4-18 npt | 2 |
| | 206 | 160430 | GAUGE, air pressure | 2 |
| | 207 | 1554701 | UNION, 90° swivel; 1/2-14 npsm x 1/4-14 npt | 3 |
| | 208 | 105170 | SCREW; 1/4-20 UNC x 2 in. | 3 |
| | 209 | 100015 | NUT; 1/4-20 UNC | 5 |
| | 210 | 100016 | WASHER, lock | 5 |
| | 211 | 110225 | VALVE, 2-way, vented; 1/2-14 npt | 2 |

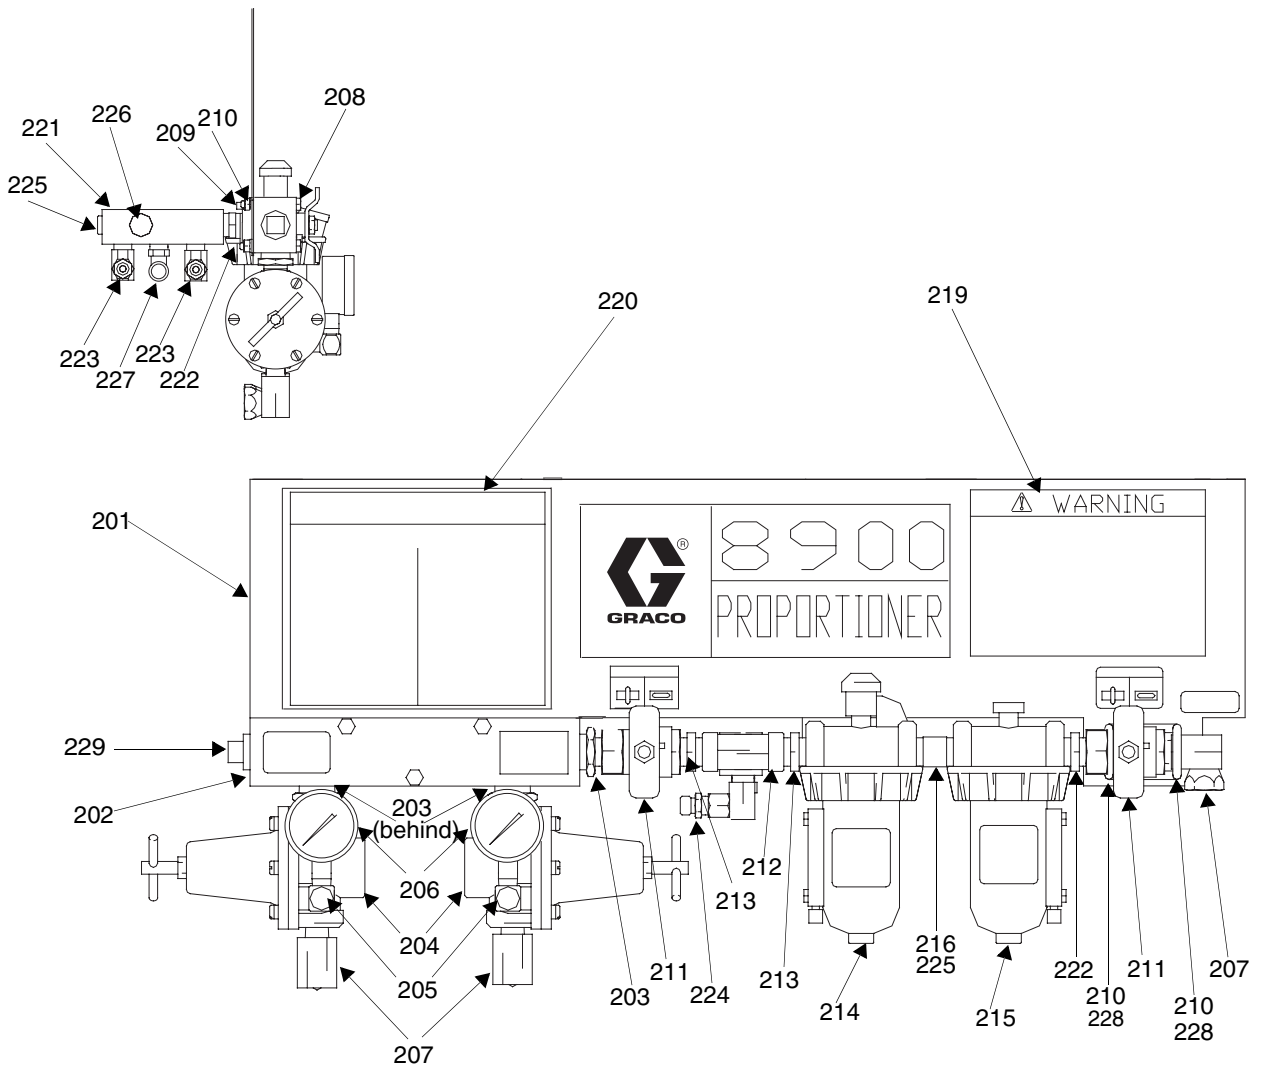

4-Way Valve

(ref. no. 25 FR, 27 VR)

Part No. C24029

Ref.

| No. | Part No. | Description |
|-----|----------|--------------------|
| 401 | C24030 | BODY, valve |
| 402 | C24031 | SEAL |
| 403 | C24036 | PACKING, o-ring |
| 404 | C24033 | BUSHING |
| 405 | C24034 | FITTING, connector |


Qty.

Ref.

| No. | Part No. | Description |
|-----|----------|-------------------------|
| 406 | C24035 | PACKING, o-ring |
| 407 | C24032 | PACKING, o-ring |
| 408 | C24037 | BUSHING |
| 409 | C24038 | RING, backup |
| 410 | 103611 | PACKING, o-ring |
| 411 | C07068 | BALL, passage |
| 412 | C24040 | PACKING, o-ring |
| 413 | C24041 | CAP, end |
| 414 | 100133 | WASHER, lock |
| 415 | C19839 | SCREW, cap, socket head |

Qty.

| |
|---|
| 4 |
| 4 |
| 2 |
| 4 |
| 2 |
| 1 |
| 1 |
| 1 |
| 4 |
| 4 |

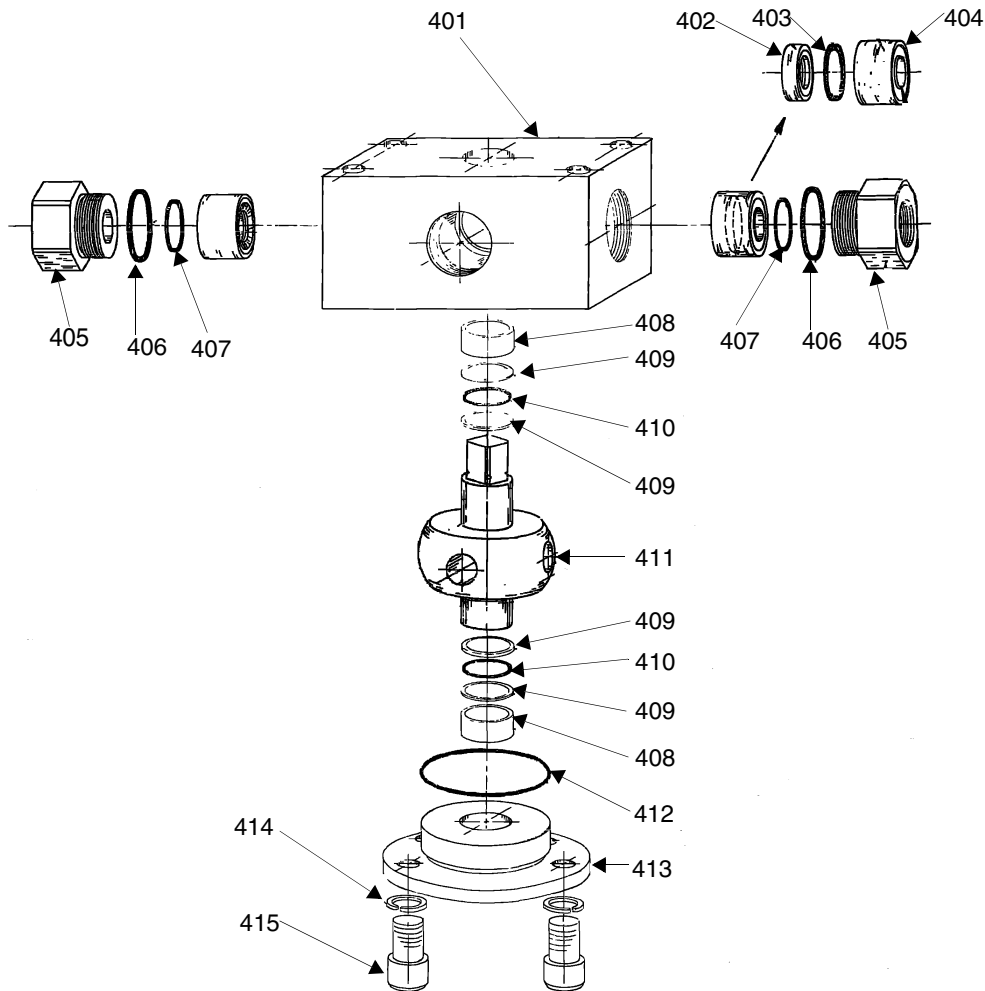



A series of horizontal lines for writing, consisting of 25 evenly spaced lines that span the width of the page.


Pump Feed Module Selection for Component A or Component B

20:1 President on 5 Gallon Ram

(See Graco Manuals 308026 and 306838)

Module No. 965571

| Ref. No. | Part No. | Description | Qty. | Ref. No. | Part No. | Description | Qty. |
|-------------|----------|-----------------------------------|------|-------------|----------|--|------|
| 4 | 237207 | PUMP, President, 20:1 | 1 | 55 | 101533 | WASHER, spring lock | 1 |
| 13 | 222812 | PLATE, wiper, 5 gallon | 1 | 56 | 190265 | SPACER | 1 |
| 22 | 102556 | RIVET, blind | 4 | 57 | 238925 | PISTON, ram, 5 gallon | 1 |
| 24 | 156823 | UNION, swivel | 1 | 58 | 166552 | CAP, cylinder | 1 |
| 27 | 184147 | SHIELD, 5 gallon ram | 1 | 59 | 206726 | BASE, and cylinder | 1 |
| 35 | 113269 | VALVE, ball, vented, .500 | 1 | 63 | 054123 | TUBE, nylon 3.7 ft | * |
| 36 | 155865 | UNION, adapter | 1 | 65 | 190256 | CLAMP, support | 2 |
| 37 | 237569 | WIRE, assy, 25 ft | 1 | 66 | 100680 | SCREW, cap, hex head | 4 |
| 42 | 156971 | NIPPLE, short | 1 | 67 | 101566 | NUT, lock | 4 |
| 43 | 104984 | TEE, pipe | 1 | 68 | 100023 | WASHER, flat | 4 |
| 44 | 113286 | VALVE, safety | 1 | 70 | 114320 | FITTING, connector, 1/8 npt(f) | 1 |
| 45 | 160701 | ELBOW, street | 1 | 71 | 115901 | TRIM, edge, protection | 2 |
| 47 | 237562 | SUPPORT, pump | 1 | 72 | 160327 | UNION, adapter, 90° | 2 |
| 48 | 113208 | FITTING, tube | 2 | 73 | 235497 | VALVE, check | 1 |
| 49 | 113896 | VALVE, control | 1 | 74 | 100896 | FITTING, bushing, pipe | 2 |
| 51 | 104765 | PLUG, pipe headless | 1 | 75 | H45010 | HOSE, fluid; nylon; 1/2 in. (13 mm) ID; 1/2 npsm(fbe); 10 ft (3.05 m) long | 1 |
| 52 | 110318 | REGULATOR, air, 1/4 in.npt | 1 | 76 | 214656 | HOSE, coupled, 61209, 10 ft | 1 |
| 53 | 110319 | GAUGE, pressure, air, 1/8 in. npt | 1 | 77 | 109126 | HOSE coupled, 10 ft | 1 |
| 54 | 160107 | NUT, cap | 1 | 79 | 155470 | UNION, swivel, 90° | 1 |
| | | | | 80 | 158491 | FITTING, nipple | 2 |

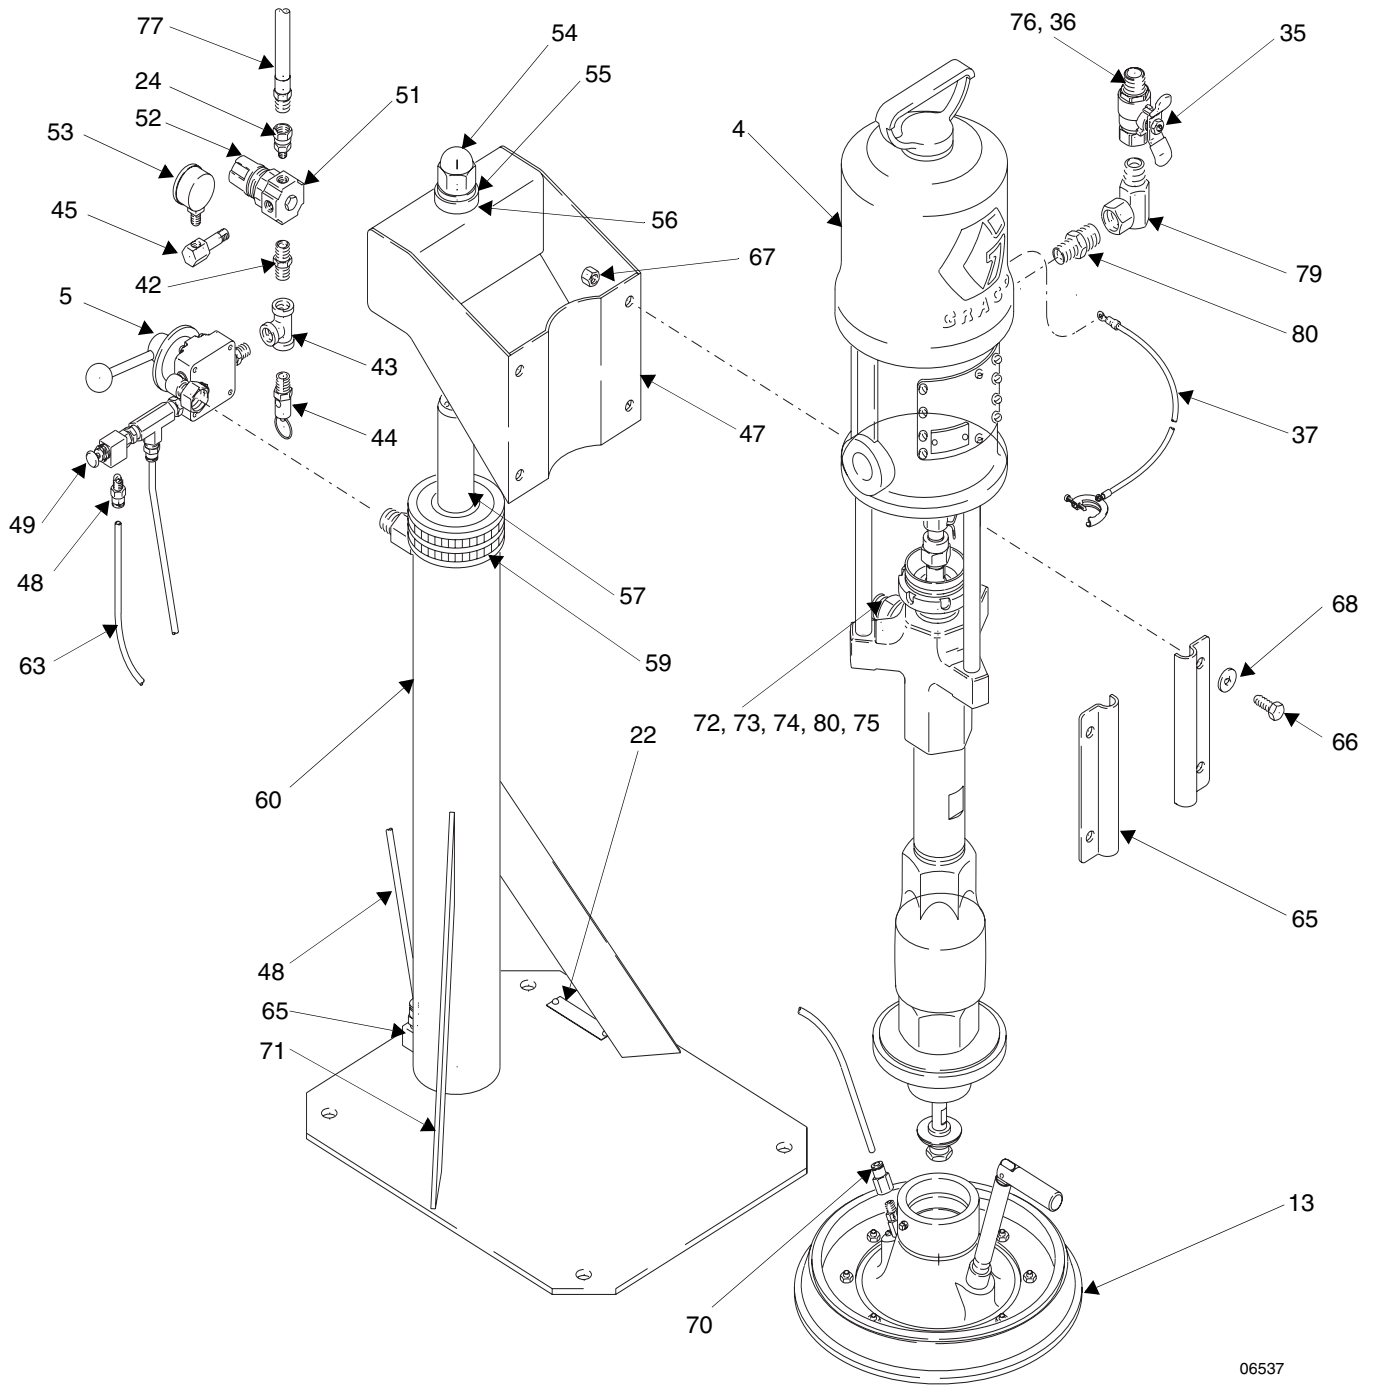


06537

34:1 Senator on 5 Gallon Ram

(See Graco Manuals 308026 and 306838)

Module No. 965597

| Ref. No. | Part No. | Description | Qty. | Ref. No. | Part No. | Description | Qty. |
|----------|----------|-----------------------------|------|----------|----------|-----------------------------------|------|
| 1 | 222769 | PUMP, senator (4.5 cm) | 1 | 35 | 110319 | GAUGE, pressure, air, 1/8 in. npt | 1 |
| 2 | 100468 | SCREW, cap, hex head | 4 | 36 | 104765 | PLUG, pipe, headless | 1 |
| 3 | 100133 | WASHER, lock | 4 | 37 | 155541 | UNION, swivel, 90° | 1 |
| 4 | 222812 | PLATE, wiper, 5 gallon | 1 | 38 | 238925 | PISTON, ram, 5 gal. | 1 |
| 7 | 101154 | PIN, driv-lok | 1 | 39 | 166533 | SUPPORT, pump | 1 |
| 10 | 102556 | RIVET, blind | 4 | 40 | 110225 | VALVE, ball, vented | 1 |
| 12 | 107144 | SCREW, cap, hex head | 1 | 45 | 237569 | WIRE, assy, 25 in. | 1 |
| 15 | 184150 | SPACER, rod, elevator | 1 | 46 | 180916 | MANIFOLD, adapter | 1 |
| 17 | 184147 | SHIELD, 5 gallon ram | 1 | 47 | 114003 | VALVE, safety | 1 |
| 22 | 206726 | BASE, and cylinder | 1 | 50 | 114320 | FITTING, connector, 1/8 npt(f) | 1 |
| 23 | 101533 | WASHER, spring lock | 1 | 52 | 160327 | UNION, adapter, 90° | 3 |
| 24 | 166552 | CAP, cylinder | 1 | 53 | 115901 | TRIM, edge, protection | 2 |
| 25 | 113208 | FITTING, tube | 2 | 55 | 235497 | VALVE, check | 1 |
| 26 | 113896 | VALVE, control | 1 | 56 | 157191 | FITTING, bushing, pipe | 1 |
| 29 | 160107 | NUT, cap | 1 | 57 | 215238 | HOSE, coupled, 61220 | 1 |
| 30 | 054123 | TUBE, nylon 3.7 ft | * | 58 | 214656 | HOSE, coupled, 61209, 10 in. | 1 |
| 34 | 110318 | REGULATOR, air, 1/4 in. npt | 1 | 59 | 109126 | HOSE, coupled, 10 in. | 1 |
| | | | | 60 | 156684 | UNION, adapter, swivel | 1 |

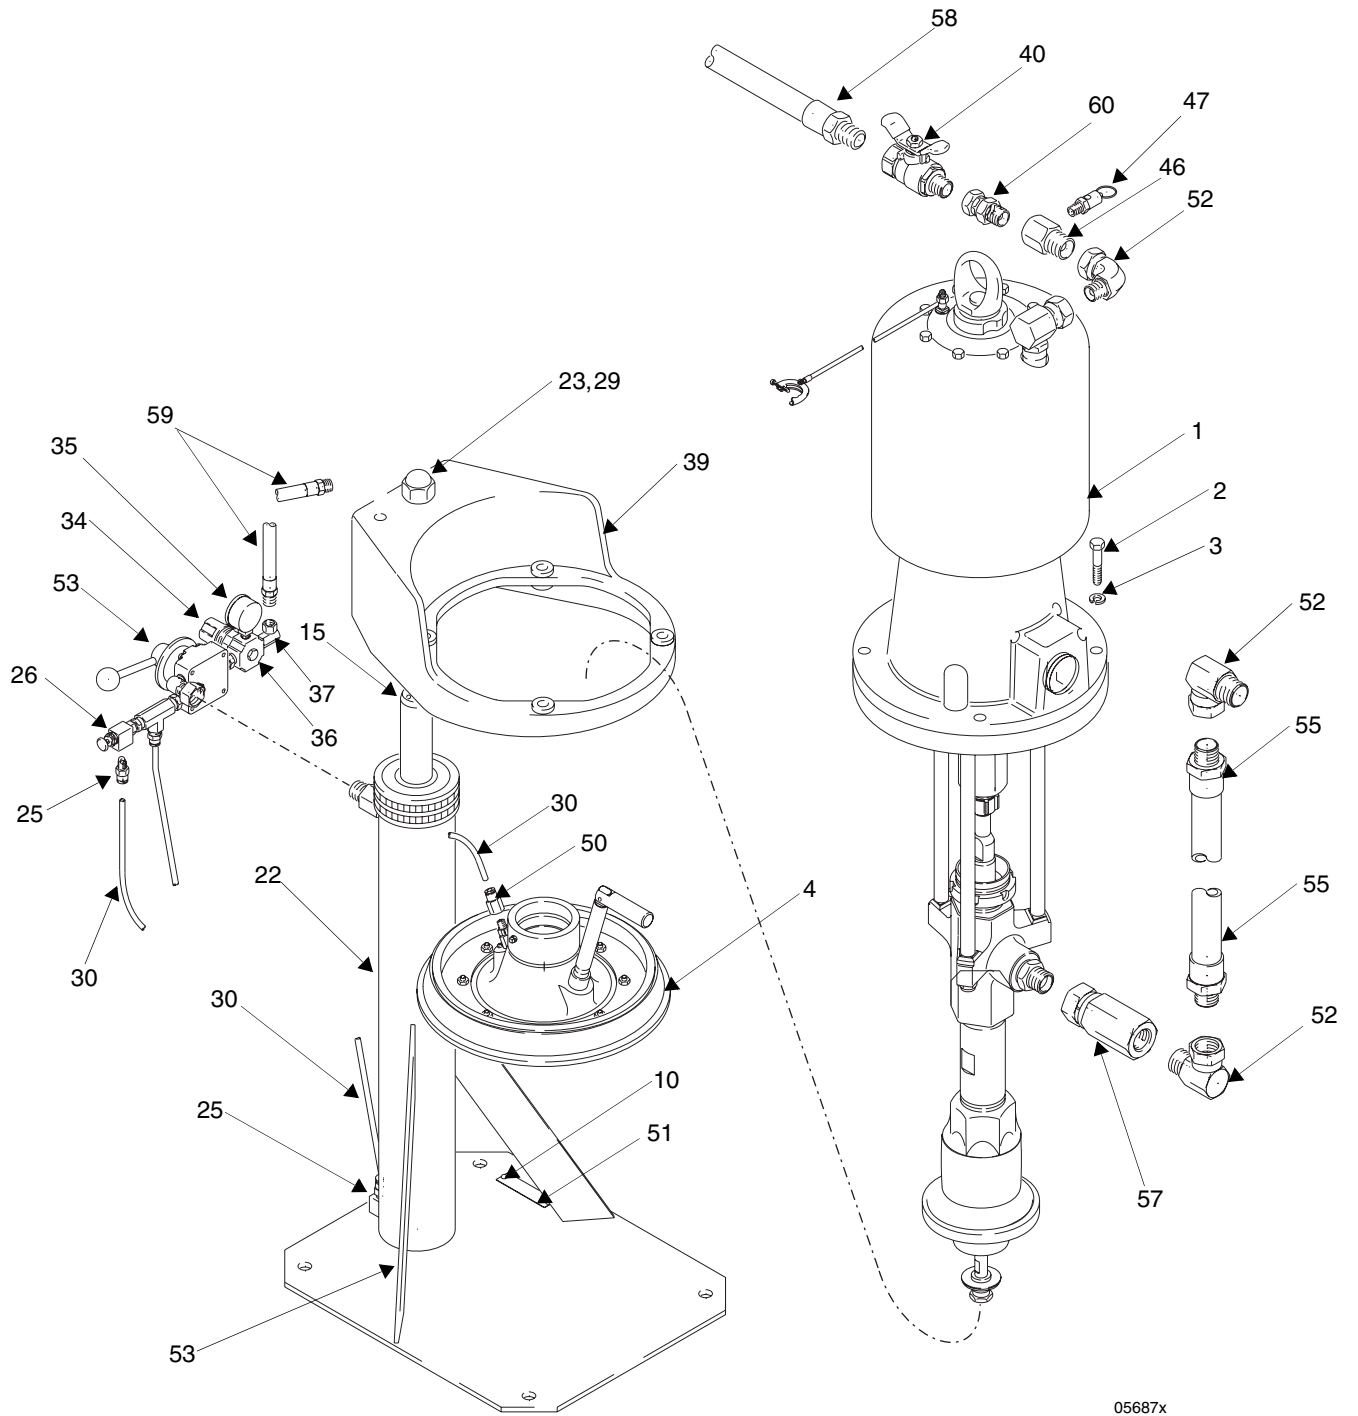


23:1 Monark on 5 Gallon Ram

(See Graco Manuals 308026 and 306838)

Module No. 570142

| Ref. No. | Part No. | Description | Qty. | Ref. No. | Part No. | Description | Qty. |
|----------|----------|------------------------------------|------|----------|----------|--|------|
| 1 | 184147 | SHIELD, 5 gallon ram (not shown) | 1 | 50 | 110318 | REGULATOR, air, 1/4 in. npt | 1 |
| 2 | 206994 | FLUID, TSL 8 oz bottle (not shown) | 1 | 51 | 104765 | PLUG, pipe, headless | 1 |
| 4 | 222782 | PUMP, Monark | 1 | 52 | 113896 | VALVE, control | 1 |
| 11 | 222812 | PLATE, wiper, 5 gallon | 1 | 53 | 166552 | CAP, cylinder | 1 |
| 19 | 156823 | UNION, swivel | 1 | 54 | 206726 | BASE, and cylinder | 1 |
| 25 | 155470 | UNION, swivel, 90° | 1 | 55 | 113208 | FITTING, tube | 2 |
| 27 | 113269 | VALVE, ball, vented .500 | 1 | 58 | 190256 | CLAMP, support | 2 |
| 28 | 155865 | UNION, adapter | 1 | 59 | 100680 | SCREW, cap, hex head | 4 |
| 29 | 237569 | WIRE, assy, 25 ft | 1 | 60 | 101566 | NUT, lock | 4 |
| 34 | 156971 | NIPPLE, short | 1 | 61 | 159239 | FITTING, nipple, pipe, reducing | 1 |
| 35 | 104984 | TEE, pipe | 1 | 62 | 100023 | WASHER, flat | 4 |
| 36 | 113286 | VALVE, safety | 1 | 64 | 114320 | FITTING, connector 1/8 npt(f) | 1 |
| 37 | 160701 | ELBOW, street | 1 | 65 | 115901 | TRIM, edge, protection | 2 |
| 41 | 238925 | PISTON, ram, 5 gallon | 1 | 66 | 100896 | FITTING, bushing, pipe | 3 |
| 42 | 237562 | SUPPORT, pump | 1 | 67 | 160327 | UNION, adapter, 90° | 2 |
| 43 | 160107 | NUT, cap | 1 | 68 | 235497 | VALVE, check | 1 |
| 44 | 101533 | WASHER, spring lock | 1 | 69 | H45010 | HOSE, fluid; nylon; 1/2 in. (13 mm) ID; 1/2 npsm(fbe); 10 ft (3.05 m) long | 1 |
| 45 | 190265 | SPACER | 1 | | | | |
| 47 | 054123 | TUBE, nylon 3.7 ft | * | | | | |
| 49 | 110319 | GAUGE, pressure, air, 1/8 in. npt | 1 | 70 | 214656 | HOSE, coupled, 61209, 10 ft | 1 |
| | | | | 71 | 109126 | HOSE, coupled, 10 ft | 1 |
| | | | | 73 | 158491 | FITTING, nipple | 2 |

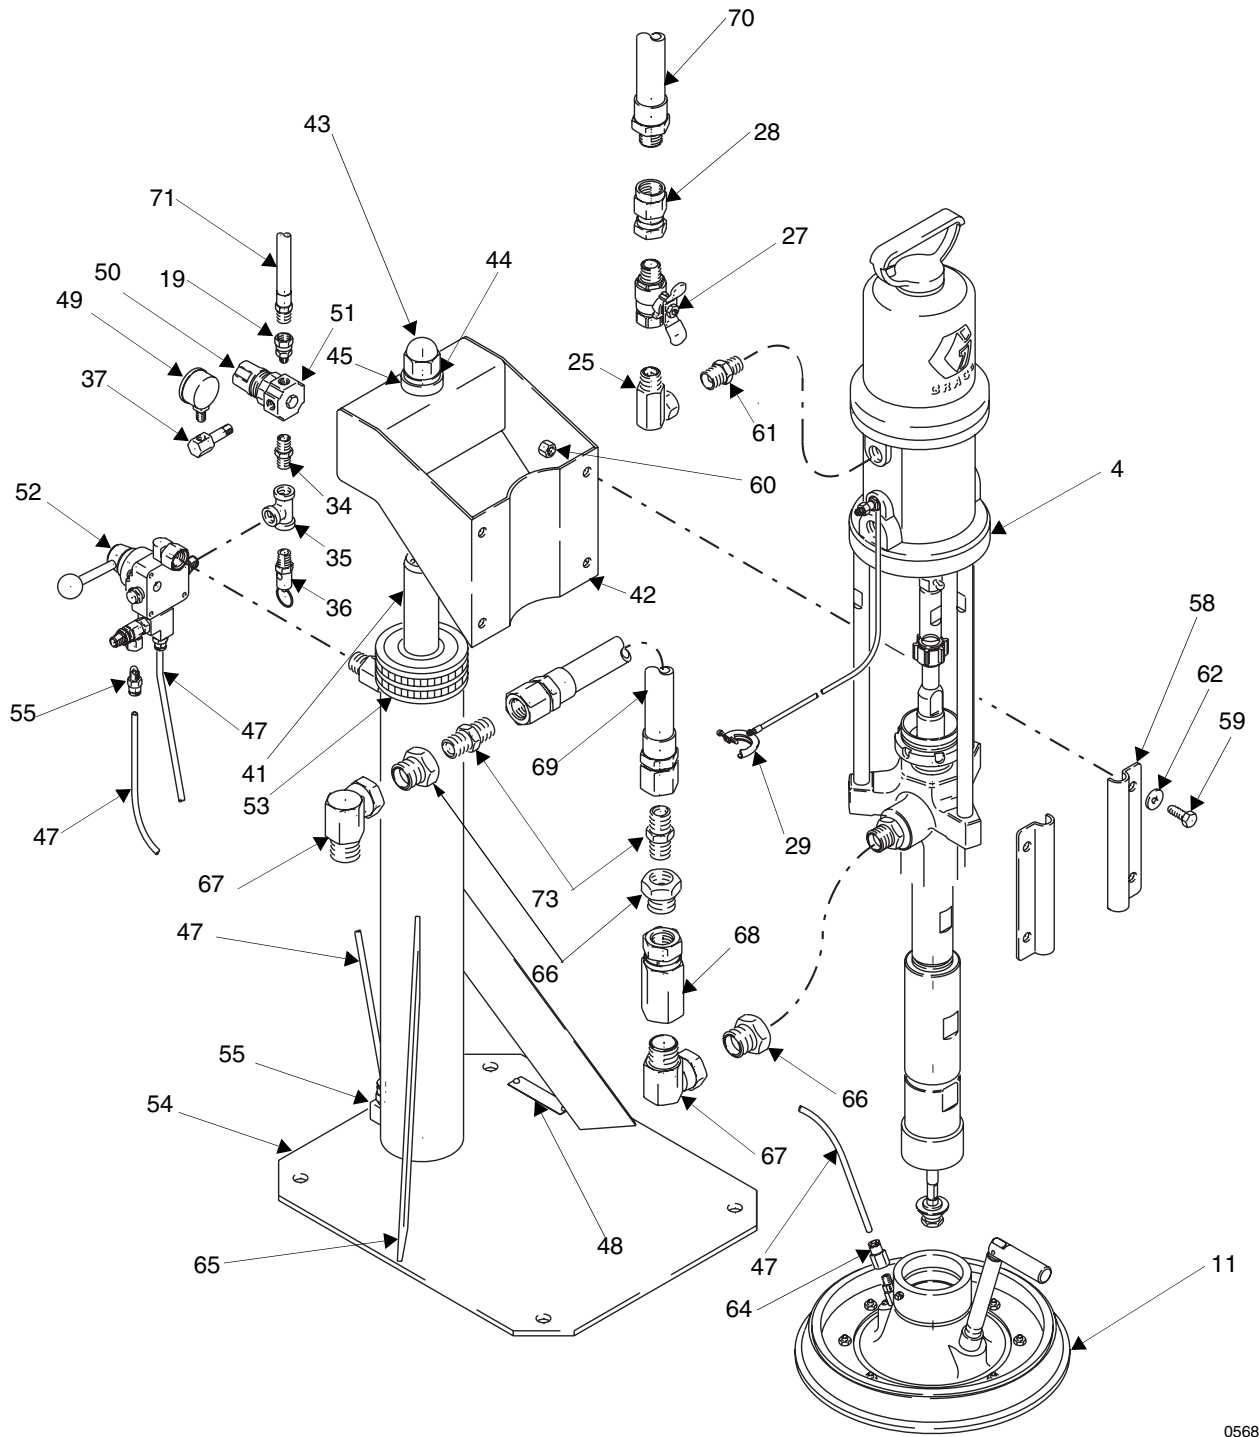


05689C

20:1 President on 55 Gallon Ram

(See Graco Manuals 306934 and 308027)

Module No. 570114

| Ref. No. | Part No. | Description | Qty. | Ref. No. | Part No. | Description | Qty. |
|----------|----------|-----------------------------------|------|----------|----------|-----------------------------|------|
| 1 | 215335 | BASE, ram | 1 | 40 | 158256 | UNION, swivel | 1 |
| 2 | 222768 | PUMP, President (4.5 cm) | 1 | 41 | 113269 | VALVE, ball, vented, .500 | 1 |
| 3 | 276025 | CLAMP | 4 | 45 | 161822 | PLATE, mounting | 2 |
| 5 | 206537 | CLAMP, drum | 1 | 46 | 054123 | TUBE, nylon 3.6 ft | * |
| 7 | 184140 | PLATE, mounting | 1 | 47 | 111162 | FITTING, elbow | 1 |
| 9 | 237569 | WIRE, assy, 25 ft | 1 | 48 | 167652 | ROD, tie ram | 2 |
| 10 | 104984 | TEE, pipe | 1 | 49 | 238928 | PISTON, 55 gallon ram | 2 |
| 11 | 113286 | VALVE, safety | 1 | 50 | 114363 | VALVE, ball, fluid | 1 |
| 12 | 156971 | NIPPLE, short | 1 | 51 | 167646 | BEAM, ram | 1 |
| 16 | 102637 | SCREW, cap | 4 | 52 | 166552 | CAP, cylinder | 2 |
| 18 | 100101 | SCREW, cap, hex head | 4 | 55 | 238929 | PLATE, 55 gallon ram | 1 |
| 19 | 100122 | NIPPLE, close | 1 | 56 | 109495 | PACKING, o-ring | 1 |
| 20 | 100133 | WASHER, lock | 4 | 58 | 208048 | HOSE, coupled 61089 | 1 |
| 22 | 100672 | SCREW, set | 4 | 64 | 100403 | PLUG, pipe | 1 |
| 23 | 100132 | WASHER, flat | 4 | 69 | 113896 | VALVE, control | 1 |
| 24 | 100464 | SCREW, lag | 4 | 75 | 100270 | SCREW, cap, hex head | 2 |
| 25 | 101533 | WASHER, spring lock | 4 | 76 | 100016 | WASHER, lock | 2 |
| 26 | 101535 | NUT, full hex | 4 | 77 | 114243 | VALVE, check | 1 |
| 28 | 189559 | CAP, end | 2 | 78 | 156849 | UNION, adapter, 90° | 1 |
| 29 | 160701 | ELBOW, street | 1 | 79 | 113915 | FITTING, union | 1 |
| 31 | 157416 | UNION, swivel, 90° | 1 | 80 | 158212 | BUSHING | 1 |
| 32 | 158979 | FITTING, nipple, pipe, reducing | 1 | 81 | 235497 | VALVE, check | 1 |
| 36 | 110319 | GAUGE, pressure, air, 1/8 in. npt | 1 | 82 | 160327 | UNION, adapter 90 | 2 |
| 37 | 155541 | UNION, swivel, 90° | 1 | 83 | 215238 | HOSE, coupled, 61220 | 1 |
| 38 | 110318 | REGULATOR, air, 1/4 in. npt | 1 | 84 | 214651 | HOSE, coupled, 61209, 17 ft | 1 |
| | | | | 85 | 109126 | HOSE, coupled, 72 in. | 1 |
| | | | | 87 | 184037 | FITTING, outlet (6 cm) | 1 |

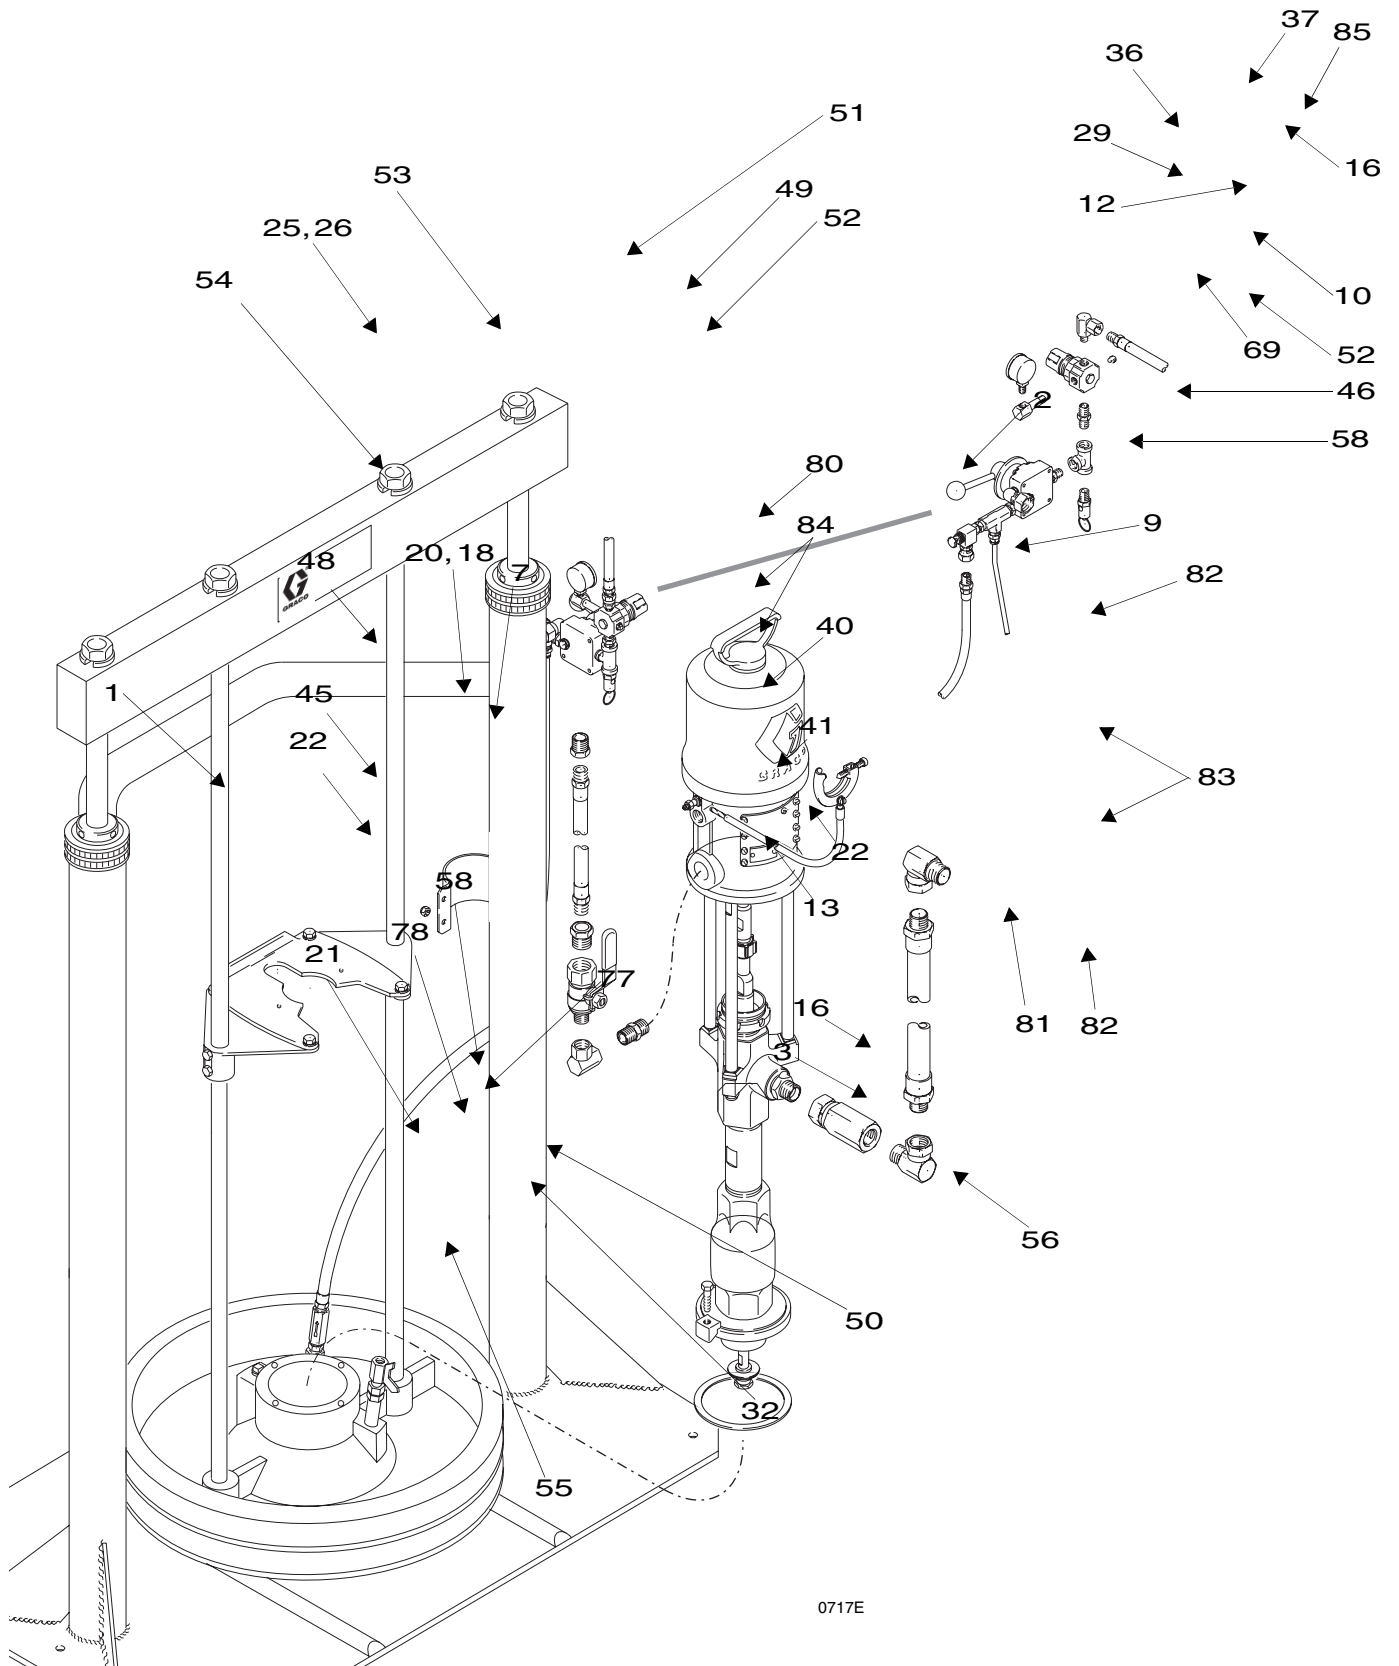


0717E

34:1 Senator on 55 Gallon Ram

(See Graco Manual 308027)

Module No. 965572

| Ref. No. | Part No. | Description | Qty. | Ref. No. | Part No. | Description | Qty. |
|----------|----------|---------------------------------|------|----------|----------|---------------------------------|------|
| 3 | 235497 | VALVE, check | 1 | 20 | 109495 | PACKING, o-ring | 1 |
| 4 | 160327 | UNION, adapter, 90° | 2 | 21 | 111803 | SCREW, cap, hex head | 4 |
| 5 | 215238 | HOSE, coupled, 61220 | 1 | 22 | 100133 | WASHER, lock | 4 |
| 6 | 214651 | HOSE, coupled, 61209, 17 ft | 1 | 23 | 158979 | FITTING, nipple, pipe, reducing | 1 |
| 7 | 109126 | HOSE, coupled, 10 ft | 1 | 25 | 114363 | VALVE, ball | 1 |
| 9 | 222769 | PUMP, Senator (4.5 cm) | 1 | 30 | 158256 | SWIVEL, union assembly | 1 |
| 10 | 241253 | RAM, pneumatic, EPDM, 55 gallon | 1 | 31 | 100896 | FITTING, bushing, pipe | 1 |
| 11 | 276025 | CLAMP | 4 | 34 | 206537 | CLAMP, drum | 1 |
| 12 | 102637 | SCREW, cap | 4 | 35 | 155541 | UNION, swivel | 1 |
| 15 | 113269 | VALVE, ball, vented, .500 | 1 | 36 | 158212 | BUSHING | 1 |

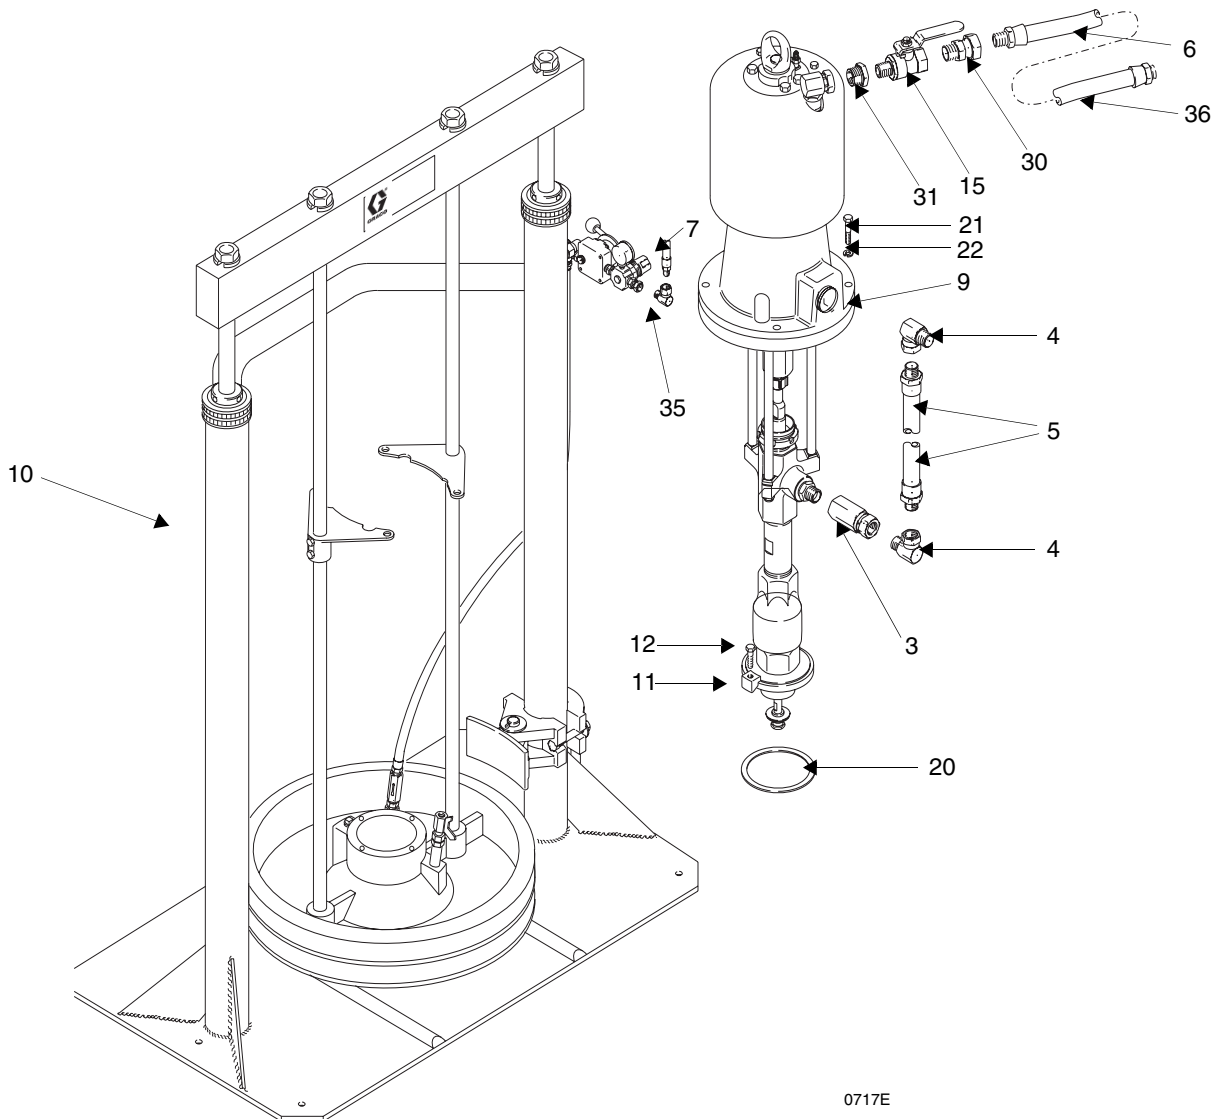


0717E

31:1 Bulldog on 55 Gallon Ram

Module No. 570141

| Ref. No. | Part No. | Description | Qty. |
|----------|----------|-----------------------------|------|
| 2 | 237261 | PUMP, Bulldog, 31:1 | 1 |
| 3 | 235497 | VALVE, check | 1 |
| 4 | 160327 | UNION, adapter, 90° | 2 |
| 5 | 215238 | HOSE, coupled, 61220 | 1 |
| 6 | 214651 | HOSE, coupled, 61209, 17 ft | 1 |
| 7 | 109126 | HOSE, coupled, 10 ft | 1 |
| 8 | 158212 | BUSHING | 1 |
| 15 | 158555 | NIPPLE, reducing | 1 |

| Ref. No. | Part No. | Description | Qty. |
|----------|----------|---------------------------------|------|
| 17 | 241253 | RAM, pneumatic, EPDM, 55 gallon | 1 |
| 26 | 113218 | VALVE, ball, vented, .750 | 1 |
| 28 | 155541 | UNION, swivel, 90° | 1 |
| 29 | 276025 | CLAMP | 4 |
| 30 | 102637 | SCREW, cap | 4 |
| 31 | 109495 | PACKING, o-ring | 1 |
| 32 | 100101 | SCREW, cap, hex head | 4 |
| 33 | 100133 | WASHER, lock | 4 |
| 37 | 237569 | WIRE, assy, 25 ft | 1 |
| 39 | 100505 | FITTING, bushing, pipe | 1 |
| 40 | 158979 | FITTING, nipple, pipe, reducing | 1 |
| 41 | 114363 | VALVE, ball | 1 |

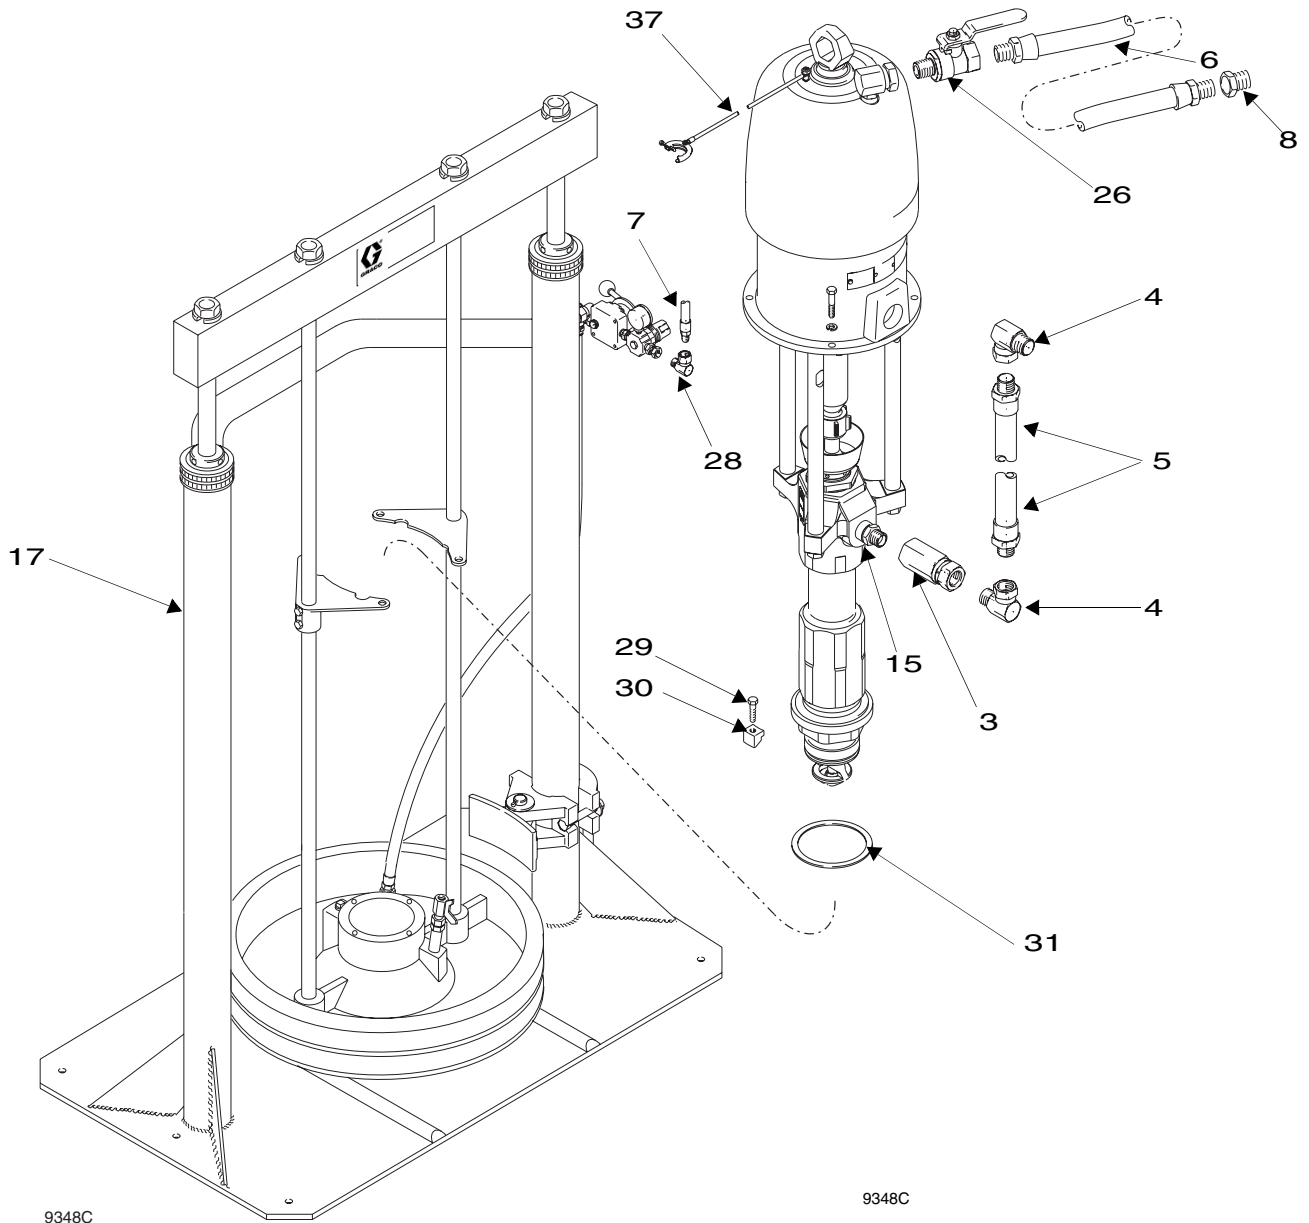


20:1 Senator on 55 Gallon Drum

Module No. 570309

| Ref. No. | Part No. | Description | Qty. |
|----------|----------|---|------|
| 1 | 570308 | PUMP, 20:1 Senator Dura-Flo 750 | 1 |
| 2 | 207408 | ELEVATOR, stationary | 1 |
| 3 | 237579 | KIT, repair | 1 |
| 6 | 514944 | VALVE, needle sst 1/2 MF 6000 | 1 |
| 7 | 159842 | ADAPTER | 1 |
| 8 | 100380 | BUSHING, pipe | 1 |
| 9 | 501764 | FITTING, elbow 90° 1 in. npt(f) x 1 in. n | 1 |
| 10 | 237309 | COVER, drum | 1 |
| 11 | 208536 | COUPLER, line, air | 1 |
| 12 | 158491 | FITTING, needle | 1 |
| 13 | 237578 | SUPPORT, cover assy, sst | 1 |
| 14 | 215239 | HOSE, coupled 61220 | 1 |
| 22 | 160327 | UNION, adapter, 90° | 2 |
| 23 | 160032 | NIPPLE | 2 |



| Ref. No. | Part No. | Description | Qty. |
|----------|----------|---|------|
| 24 | 102644 | VALVE, ball | 2 |
| 25 | 157785 | UNION, swivel | 1 |
| 26 | 214656 | HOSE, coupled 61209, 10 ft | 1 |
| 28 | 102471 | SCREW, cap hex head | 3 |
| 29 | 102021 | NUT, lock | 3 |
| 31 | 205349 | HOSE, coupled 61120, 15 ft | 1 |
| 32 | 162449 | FITTING, nipple, reducing | 2 |
| 33 | 157785 | FITTING, union, swivel | 1 |
| 34 | 180916 | FITTING, tee 3/4(m) run x 1/4(f) branch | 1 |
| 35 | 214037 | VALVE, ball | 3 |
| 36 | 109126 | HOSE, coupled, 10 ft | 1 |
| 38 | 187614 | NUT, jam | 1 |
| 39 | 159446 | GASKET, vellumoid | 1 |
| 40 | 15C321 | PLATE, cover | 1 |
| 41 | 100896 | FITTING, bushing, pipe | 1 |
| 42 | 15C322 | RETAINER, siphon tube | 1 |
| 43 | 190999 | NUT, retainer | 1 |
| 44 | 238161 | TUBE, siphon, hd agitator | 1 |
| 45 | 113218 | VALVE, ball, vented, .750 | 1 |

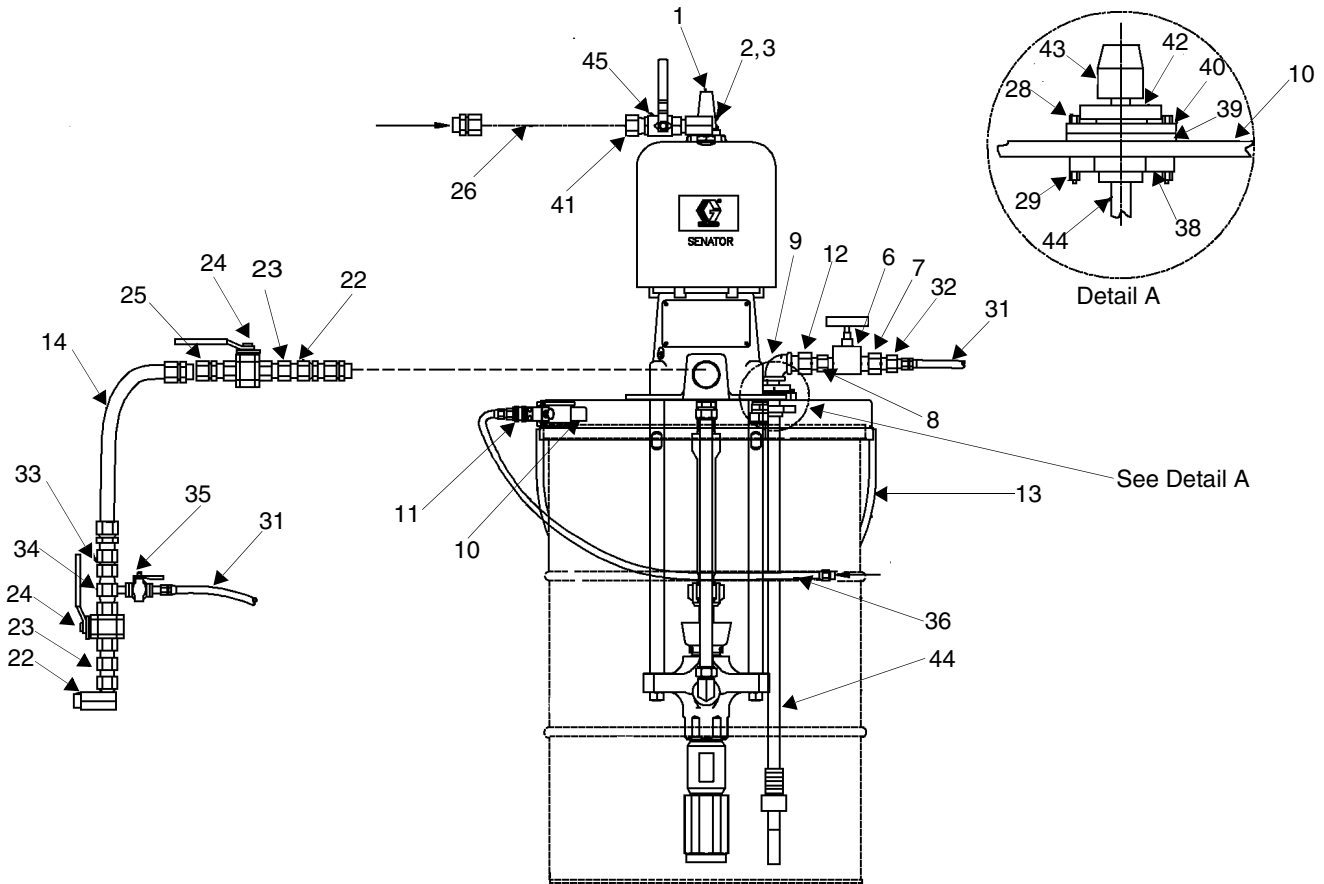

9:1 DynaMite on 1 Gallon Can Ram

Module No. 570249

| Ref. No. | Part No. | Description | Qty. | Ref. No. | Part No. | Description | Qty. |
|----------|----------|-------------------------------|------|----------|----------|--------------------|------|
| 1 | 235871 | PUMP, extruder, sst, 190 | 1 | 8 | C24332 | BOLT, "U" | 2 |
| 2 | 217298 | BRACKET, mounting | 1 | 9 | 100615 | BUSHING, hex steel | 1 |
| 3 | 514518 | HOSE, coupled 3/16 in. x 3 ft | 1 | 10 | 101885 | SCREW, cap sch | 2 |
| 4 | 109125 | HOSE, coupled 72 in. | 1 | 11 | 102040 | NUT, lock, hex | 2 |
| 5 | 224908 | INDUCTOR, assy, 1 gal. | 1 | 12 | 100086 | WASHER, plain | 1 |
| 6 | 156823 | UNION, swivel | 2 | 13 | 155541 | UNION, swivel, 90° | 1 |
| 7 | 156971 | NIPPLE, short | 2 | 14 | 100206 | BUSHING, pipe | 1 |

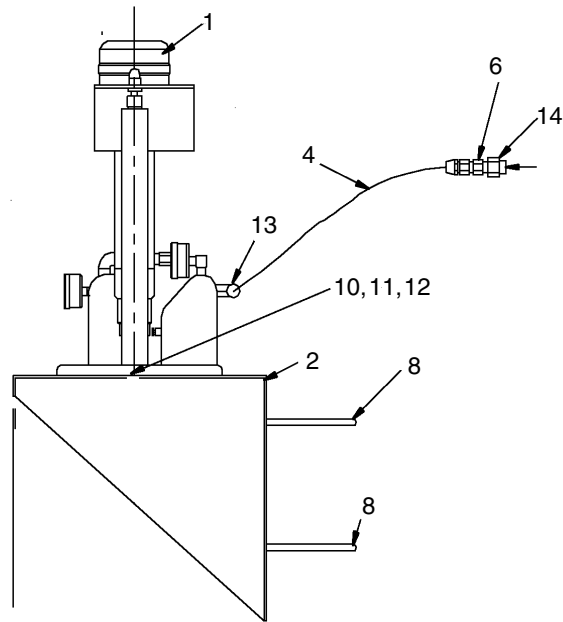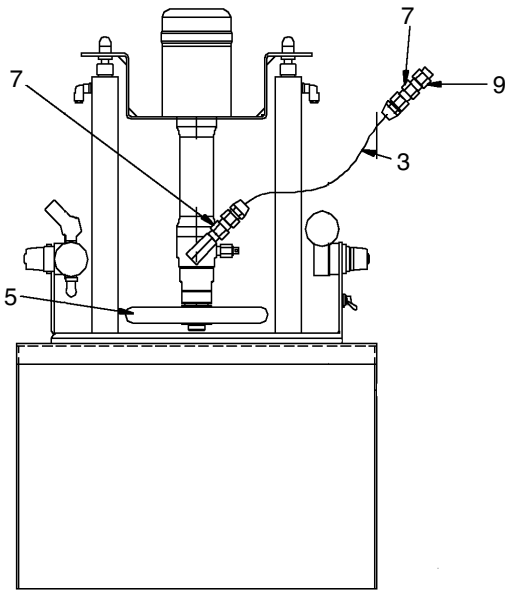


10 Gallon Press Tank with 15:1 Booster

Module No. 570037

| Ref. No. | Part No. | Description | Qty. |
|----------|----------|-------------------------------|------|
| 2 | 101946 | PIN, cotter, sst | 1 |
| 3 | 102325 | ELBOW, 90° | 1 |
| 5 | 156082 | PACKING, o-ring | 1 |
| 6 | 156823 | UNION, swivel | 1 |
| 7 | 157785 | UNION, swivel | 2 |
| 8 | 217296 | FRAME, pump | 1 |
| 9 | 167682 | ROD, tie | 3 |
| 10 | 207352 | MOTOR, air, pres | 1 |
| 11 | 207370 | ROD, connecting | 1 |
| 12 | 215930 | PUMP, displ, recip | 1 |
| 13 | 221170 | HOSE, coupled, 061260, 3 ft | 1 |
| 14 | 236150 | TANK, high pressure 10 gallon | 1 |


| Ref. No. | Part No. | Description | Qty. |
|----------|----------|--|------|
| 15 | 236662 | AGITATOR, heavy duty, 10 gallon | 1 |
| 16 | 236677 | KIT, repair | 1 |
| 17 | 501603 | VALVE, check 1/2 in. npt mbe sst tf | 1 |
| 18 | 512484 | VALVE, ball, sst | 1 |
| 19 | 620198 | PLATE, mounting | 1 |
| 21 | 100101 | SCREW, cap, hex head | 4 |
| 22 | 100133 | WASHER, lock | 4 |
| 23 | 100131 | NUT, full hex | 4 |
| 24 | 100016 | WASHER, lock | 2 |
| 25 | 100022 | SCREW, cap, hex head | 2 |
| 26 | 150707 | PLATE, designation | 1 |
| 27 | H45010 | HOSE, fluid; nylon; 1/2 in. (13 mm) ID; 1/2 npsm(fbe); 10 ft (3.05 m) long | 1 |
| 28 | 100896 | FITTING, bushing, pipe | 1 |
| 29 | 160327 | UNION, adapter, 90° | 1 |
| 30 | 214656 | HOSE, coupled, 61209, 10 ft | 1 |
| 31 | 109126 | HOSE, coupled, 10 ft | 1 |
| 32 | 158491 | FITTING, nipple | 3 |
| 33 | 107142 | VALVE, ball, vented | 1 |

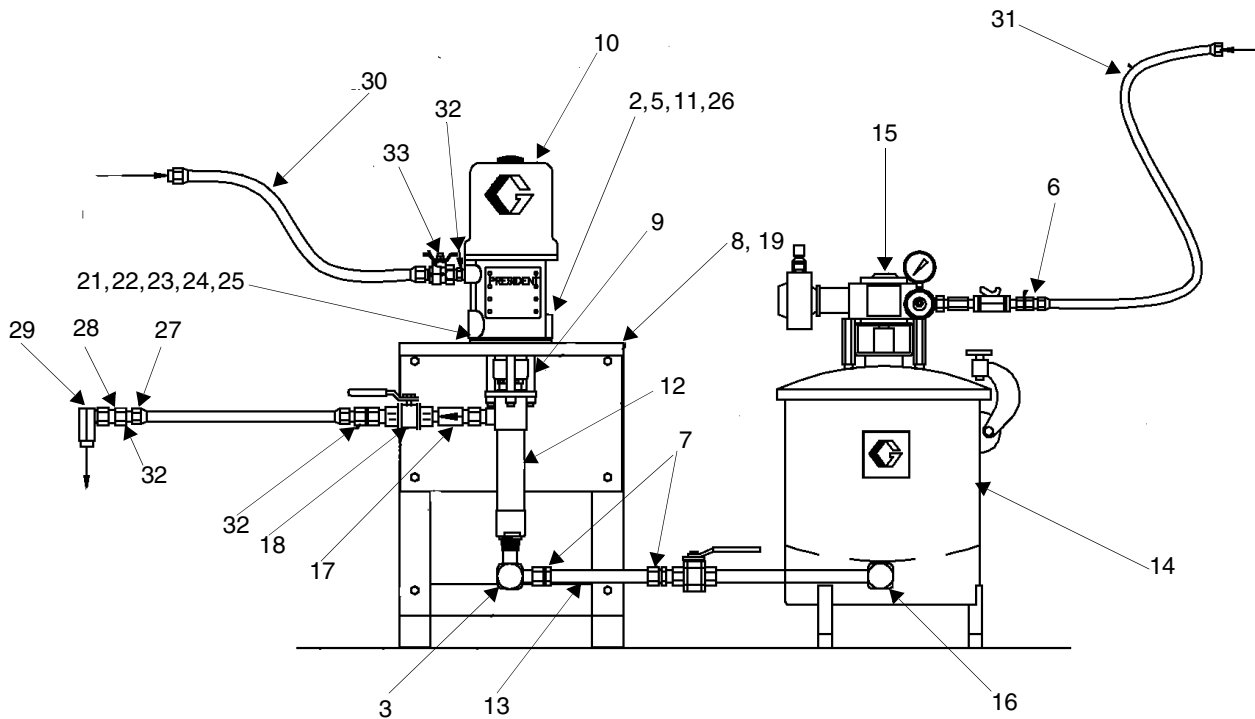

10:1 President 5 Gallon Pail Cover

Module No. 570264

| Ref. No. | Part No. | Description | Qty. | Ref. No. | Part No. | Description | Qty. |
|----------|----------|---------------------------|------|----------|----------|-----------------|------|
| 1 | 903295 | PUMP, 10:1 President, sst | 1 | 6 | 165516 | PACKING, o-ring | 1 |
| 3 | 100035 | SCREW, machine, panhead | 1 | 7 | 101962 | SCREW, set sch | 2 |
| 4 | 206755 | CHAIN | 1 | 8 | 100220 | SCREW, thumb | 3 |
| 5 | 165096 | PLUG | 1 | | | | |


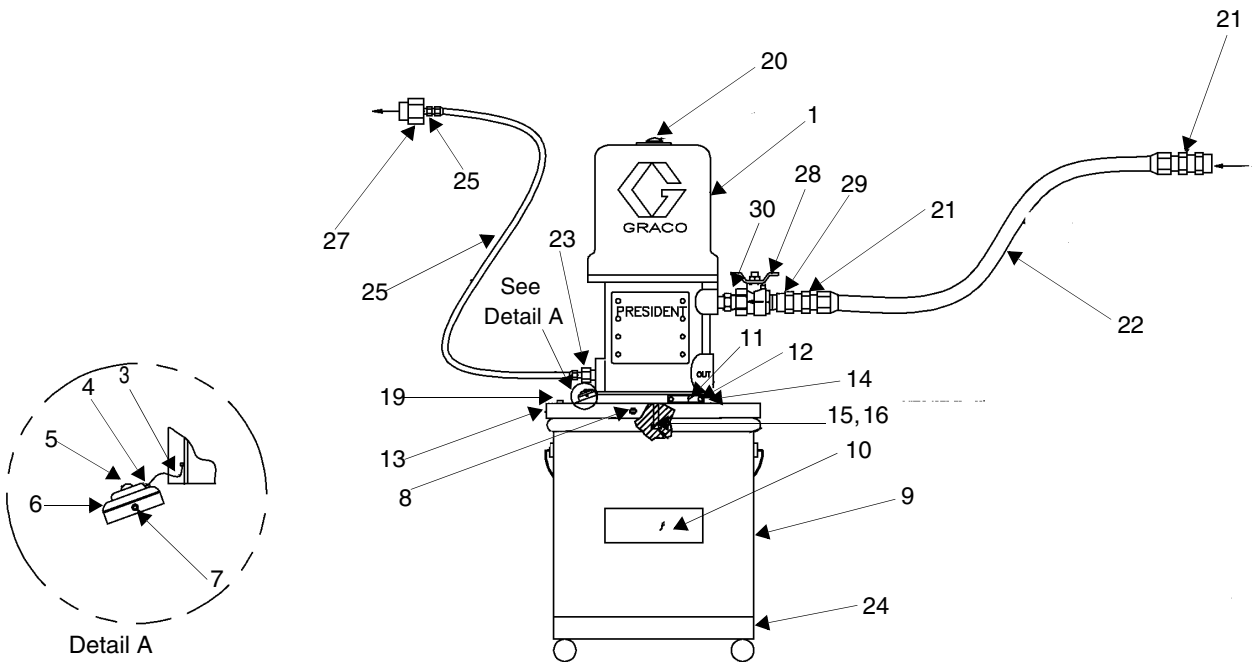


Mix Kit Selection

Cartridge Fill Medium Viscosity Wide Ratio

Module No. 570248


| Ref. No. | Part No. | Description | Qty. | Ref. No. | Part No. | Description | Qty. |
|----------|----------|--|------|----------|----------|---|------|
| 4 | 626748 | BRACKET, mount disp valv C24342 | 1 | 47 | 597151 | FITTING, elbow | 6 |
| 5 | 552204 | ACTUATOR, air, 8900 metered shot | 1 | 48 | 552211 | VALVE, pulse pneumatic | 2 |
| 6 | C30021 | BOLT, u | 1 | 49 | 593538 | VALVE, shuttle 1/8 npt(f) | 1 |
| 7 | 155699 | ELBOW, street | 1 | 50 | 503028 | VALVE, air, push-pull | 1 |
| 8 | 100615 | BUSHING, hex steel | 1 | 51 | 212099 | KIT, accessory | 1 |
| 9 | 159801 | UNION,swivel, 90° | 1 | 52 | 100730 | BUSHING | 2 |
| 10 | 504327 | HOSE, nylon 3/4 in. id | 4 | 53 | 104984 | TEE, pipe | 2 |
| 11 | 504621 | COUPLING, hose | 4 | 54 | C19391 | FITTING, elbow 1/4 npt(m) x 1/4 od tube | 4 |
| 12 | 166590 | ELBOW, street | 2 | 56 | 512420 | FITTING, cross steel 3/8 npt | 1 |
| 13 | 160327 | UNION, adapter, 90° | 2 | 57 | 100195 | NIPPLE, pipe | 1 |
| 14 | 175013 | NIPPLE, pipe | 1 | 58 | 103656 | FITTING, pipe, hex | 2 |
| 15 | 512442 | HOSE, bulk 1/2 in. nylon 3500 psi | 8 | 59 | 599433 | FITTING, elbow, male | 1 |
| 16 | 503917 | COUPLING, hose 1/2 ft npt(m) x 1/2, 3903 | 8 | 60 | 501014 | ACTUATOR, air 1/8 npt(f) | 2 |
| 17 | 105281 | UNION, swivel, 90° | 1 | 63 | 114372 | MIXER, static, 1/2 npt | 2 |
| 18 | 512616 | HOSE, PTFE 1/4 x 18 in. 1/4 npsm | 1 | 64 | 158581 | COUPLING, hex | 2 |
| 19 | 500517 | FITTING, tee 3/4 in. npt | 1 | 65 | 948081 | MIXER, tri-core 1/2(m) x 1/2(f) | 1 |
| 20 | 158683 | FITTING, elbow 3/4 in. npt | 5 | 66 | 159153 | UNION, swivel | 1 |
| 24 | 100896 | FITTING, bushing, pipe | 5 | 67 | 690270 | ADAPTER, luer lock 1/4 in. npt | 2 |
| 25 | 155470 | UNION, swivel, 90° | 1 | 68 | 112012 | NOZZLE, needle | 2 |
| 26 | 156684 | UNION, adapter, | 2 | 69 | 112019 | NOZZLE, needle | 2 |
| 27 | 100840 | ELBOW, street | 1 | 70 | 205324 | HOSE, coupled, 61120, 1 ft | 1 |
| 31 | 512910 | MUFFLER, polyethylene 1/4 in. npt | 2 | 71 | 164672 | ADAPTER | 2 |
| 32 | 156971 | NIPPLE, short | 4 | 72 | 162449 | FITTING, nipple, reducing | 1 |
| 33 | 626758 | MANIFOLD, block 8900 meter, shot | 1 | 73 | 159239 | FITTING, nipple, pipe, reducing | 1 |
| 34 | 626757 | BLOCK, check 8900 metered shot | 1 | 74 | 552208 | VALVE, ball 3-way | 1 |
| 35 | C26088 | VALVE, cone extension | 1 | 75 | 100206 | BUSHING, pipe | 2 |
| 36 | C26086 | STOP, cone, assembly | 1 | 76 | 552205 | MIXER, pipe, sst 1/4-4.2 in. 12 el | 2 |
| 37 | 103374 | SCREW, machine, rdh | 4 | 77 | 626760 | MANIFOLD, ratio check 8900 shot | 1 |
| 38 | 105192 | SCREW, cap, hex head | 1 | 79 | 102646 | VAVLE, ball | 1 |
| 40 | C24017 | ROD, trip, valve | 1 | 80 | 156877 | NIPPLE, long | 1 |
| 41 | C20068 | PIN, spring | 2 | 81 | 11201 | NOZZLE, needle | 2 |
| 42 | C24018 | COLLAR, stop | 2 | 82 | 112014 | NOZZLE, needle | 2 |
| 43 | C24020 | COLLAR, clamp | 1 | 83 | 112015 | NOZZLE, needle | 2 |
| 44 | 598729 | FITTING, elbow, male, 90° | 4 | 84 | 112020 | NOZZLE, needle | 2 |
| 45 | 513066 | TUBE, 3/8 ft OD nylon | 3 | 85 | 112021 | NOZZLE, needle | 2 |
| 46 | C12509 | TUBE, nylon | 20 | 86 | 112022 | NOZZLE, needle | 2 |

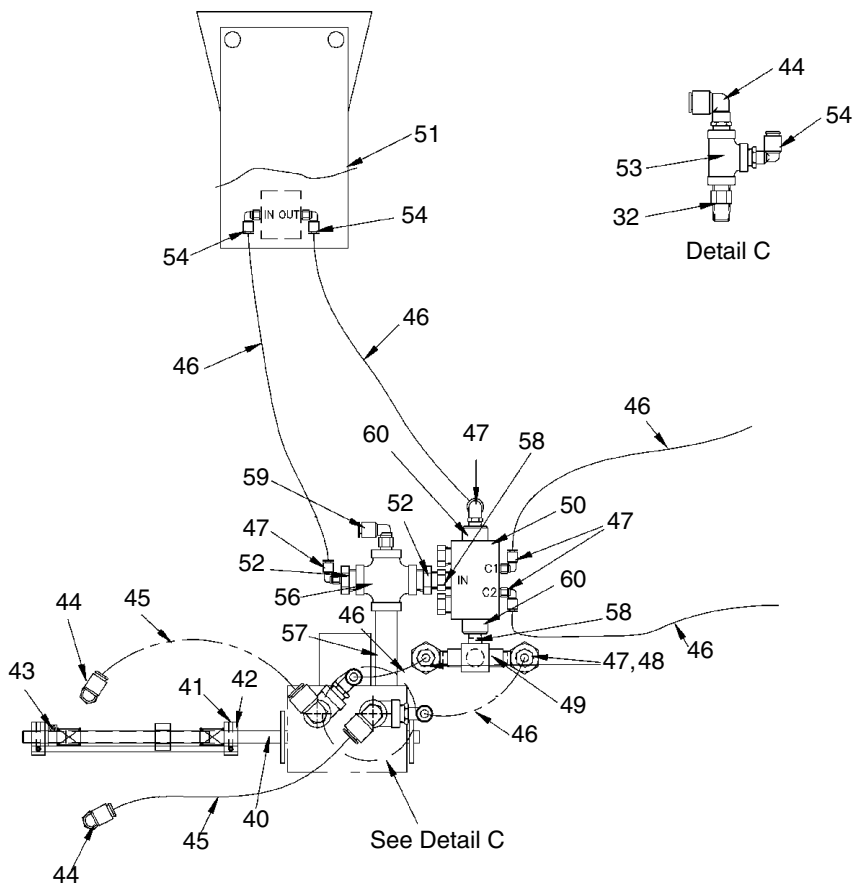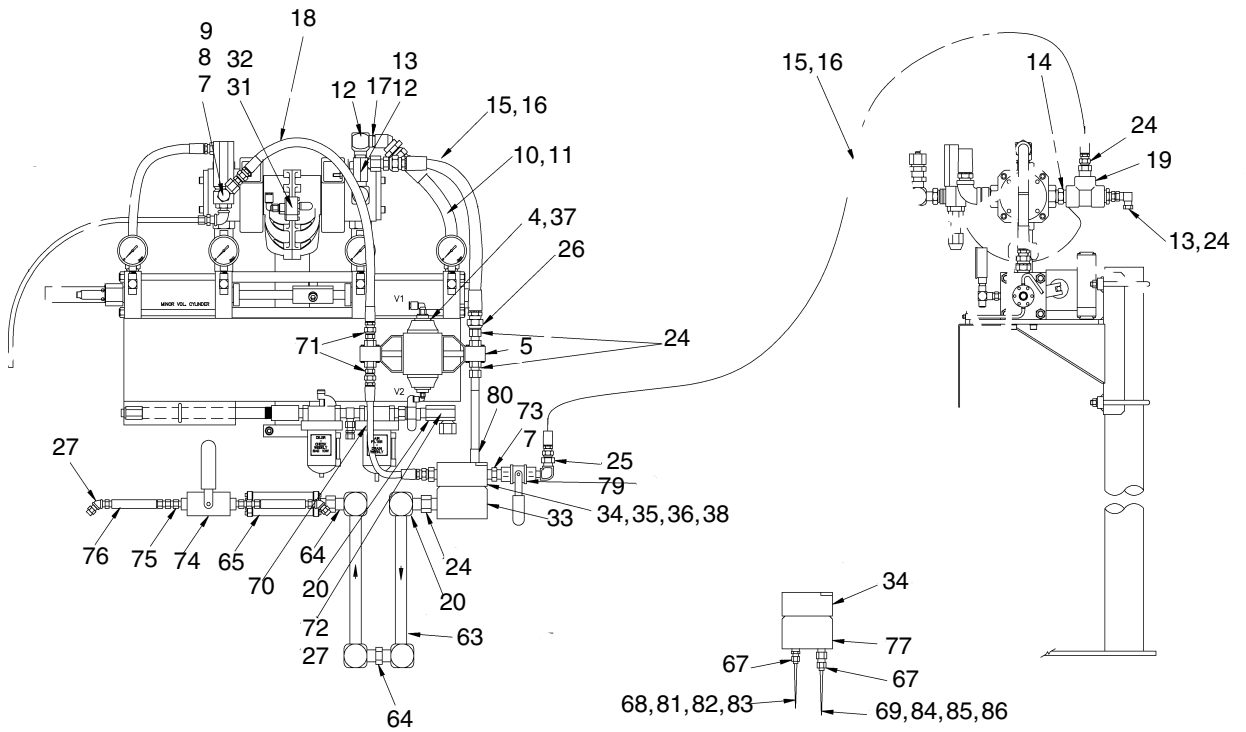


Cartridge Fill High Viscosity Wide Ratio

Module No. 570318


| Ref. No. | Part No. | Description | Qty. | Ref. No. | Part No. | Description | Qty. |
|----------|----------|-----------------------------------|------|----------|----------|---|------|
| 1 | 552204 | ACTUATOR, air, 8900 metered shot | 1 | 35 | 593538 | VALVE, shuttle 1/8 npt(f) | 1 |
| 2 | 626748 | BRACKET, mount disp valv C24342 | 1 | 36 | 552211 | VALVE, pulse, pneumatic | 2 |
| 3 | 103374 | SCREW, machine, rdh | 4 | 37 | C19391 | FITTING, elbow 1/4 npt(m) x 1/4 od tube | 5 |
| 4 | 100896 | FITTING, bushing, pipe | 2 | 38 | 104631 | VALVE, foot | 1 |
| 5 | 156877 | NIPPLE, long | 1 | 40 | 626760 | MANIFOLD, ratio check 8900 shot | 1 |
| 6 | 105192 | SCREW, cap, hex head | 1 | 41 | 503917 | COUPLING, hose, 1/2 npt(m) x 1/2, 3903 | 4 |
| 7 | 626757 | BLOCK, check 8900 metered shot | 1 | 42 | 512442 | HOSE, bulk 1/2 in. nylon 3500 psi | 6 |
| 8 | 626758 | MANIFOLD, block 8900 meter shot | 1 | 43 | 190747 | BRACKET, mounting, ram, painted | 1 |
| 9 | 166590 | ELBOW, street | 1 | 44 | 237962 | BRACKET, welded | 1 |
| 10 | 513375 | MIXER, pipe sst 3/4-16.4 in. 2 el | 2 | 45 | 100021 | SCREW, cap hex head | 4 |
| 11 | 100349 | FITTING, elbow | 3 | 46 | 100015 | NUT, hex mscr | 4 |
| 12 | 160032 | NIPPLE | 1 | 47 | 100133 | WASHER, lock | 2 |
| 13 | 552208 | VALVE, ball 3-way | 1 | 48 | 100131 | NUT, full hex | 2 |
| 14 | 100206 | BUSHING, pipe | 2 | 49 | 100101 | SCREW, cap, hex head | 2 |
| 15 | 552205 | MIXER, pipe sst 1/4-4.2 in. 24 el | 2 | 50 | 104172 | FITTING, tube | 2 |
| 16 | 100840 | ELBOW, street | 4 | 51 | 512231 | CONNECTOR, 1/4 od x 1/8 in. npt(f) | 2 |
| 17 | 157350 | ADAPTER, 3/8 npt x 1/4 npt | 1 | 52 | 100527 | WASHER, wrought | 8 |
| 18 | 205324 | HOSE, coupled, 61120, 1 ft | 1 | 53 | 100016 | WASHER, lock | 4 |
| 19 | 162449 | FITTING, nipple, reducing | 1 | 54 | 156971 | NIPPLE, short | 3 |
| 20 | 100040 | PLUG, pipe | 1 | 55 | 233415 | KIT, accessory, ratio check | 1 |
| 21 | 155699 | ELBOW, street | 1 | 56 | 504621 | COUPLING, hose | 2 |
| 22 | 159239 | FITTING, nipple, pipe, reducing | 2 | 57 | 504327 | HOSE, nylon 3/4 in. id | 5 |
| 23 | 102646 | VAVLE, ball | 1 | 58 | 157785 | UNION, swivel | 1 |
| 24 | 155470 | UNION, swivel, 90° | 2 | 59 | 157416 | UNION, swivel, 90° | 1 |
| 25 | C26088 | VALVE, cone extension | 1 | 60 | 160327 | UNION, adapter, 90° | 2 |
| 26 | C26086 | STOP, cone assembly | 1 | 61 | 166466 | TEE, pipe, female | 1 |
| 27 | 151249 | NIPPLE, pipe | 1 | 62 | 156684 | UNION, adapter | 1 |
| 28 | 112698 | ELBOW, male, swivel | 1 | 63 | 104984 | TEE, pipe | 1 |
| 29 | C12509 | TUBE, nylon | 30 | 64 | 598729 | FITTING, elbow, male, 90° | 1 |
| 30 | 503028 | VALVE, air, push-pull | 1 | 65 | 100003 | SCREW, cap, hex head | 2 |
| 31 | 157191 | FITTING, adapter | 1 | 66 | 100176 | BUSHING, hex | 1 |
| 32 | 596832 | FITTING, tee, tube | 1 | | | | |
| 33 | 501014 | ACTUATOR, air 1/8 npt(f) | 2 | | | | |
| 34 | 103656 | FITTING, pipe, hex | 1 | | | | |

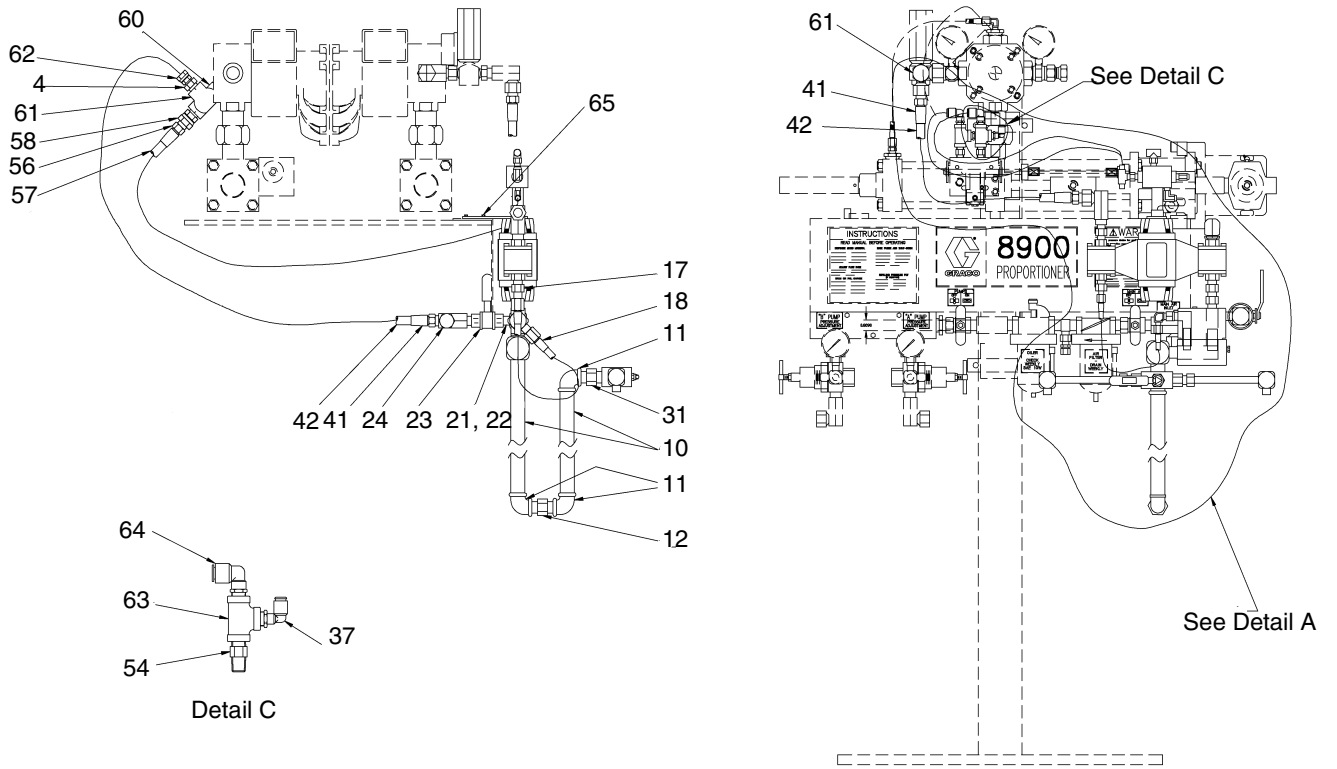

Detail C

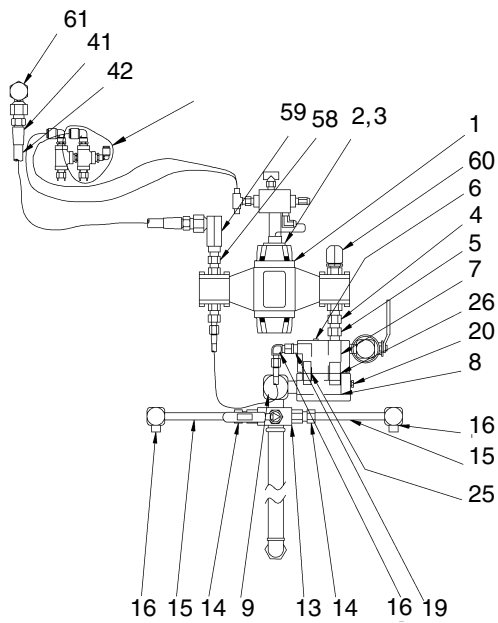



Detail A

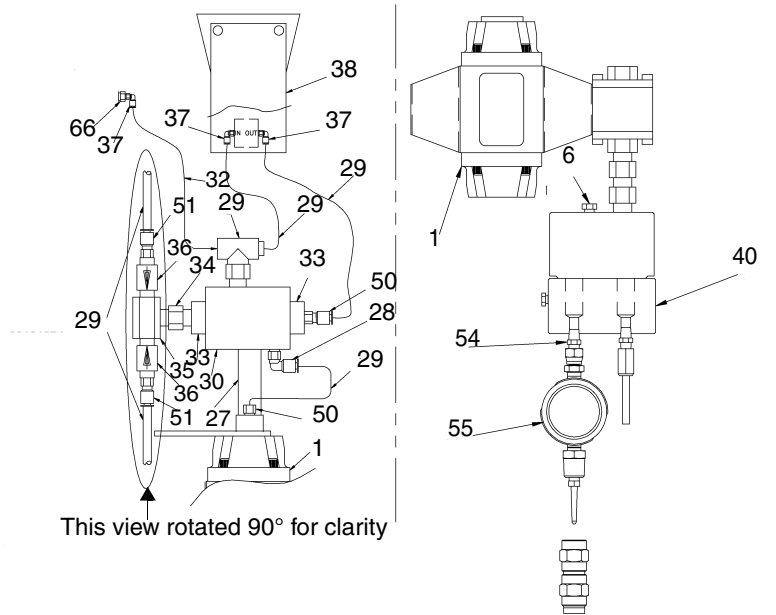

Brush Grade High Viscosity Wide Ratio

Module No. 570358

| Ref. No. | Part No. | Description | Qty. | Ref. No. | Part No. | Description | Qty. |
|----------|----------|--|------|----------|----------|---|------|
| | | | | 51 | 212099 | KIT, accessory | 1 |
| | | | | 52 | 100730 | BUSHING | 2 |
| | | | | 53 | 104984 | TEE, pipe | 2 |
| | | | | 54 | C19391 | FITTING, elbow 1/4 npt(m) x 1/4 od tube | 5 |
| | | | | 56 | 512420 | FITTING, cross steel 3/8 npt(f) | 1 |
| | | | | 57 | 100195 | NIPPLE, pipe | 1 |
| | | | | 58 | 103656 | FITTING, pipe, hex | 4 |
| | | | | 59 | 599433 | FITTING, elbow, male | 1 |
| | | | | 60 | 501014 | ACTUATOR, air 1/8 npt(f) | 3 |
| | | | | 63 | 114372 | MIXER, static, 1/2 npt | 2 |
| | | | | 54 | 158581 | COUPLING, hex | 2 |
| | | | | 65 | 948081 | MIXER, tri-core 1/2(m) x 1/2(f) | 1 |
| | | | | 66 | 159153 | UNION, swivel | 1 |
| | | | | 67 | 690270 | ADAPTER, luer lock 1/4 in. npt | 2 |
| | | | | 68 | 112012 | NOZZLE, needle | 2 |
| | | | | 69 | 112019 | NOZZLE, needle | 2 |
| | | | | 70 | 205324 | HOSE, coupled, 61120, 1 ft | 1 |
| | | | | 71 | 164672 | ADAPTER | 2 |
| | | | | 72 | 162449 | FITTING, nipple, reducing | 1 |
| | | | | 73 | 159239 | FITTING, nipple, pipe, reducing | 1 |
| | | | | 74 | 552208 | VALVE, ball, 3-way | 1 |
| | | | | 75 | 100206 | BUSHING, pipe | 3 |
| | | | | 76 | 552205 | MIXER, pipe sst 1/4-4.2 in. 12 el | 2 |
| | | | | 77 | 626760 | MANIFOLD, ratio check 8900 shot | 1 |
| | | | | 79 | 102646 | VALVE, ball | 1 |
| | | | | 80 | 156877 | NIPPLE, long | 1 |
| | | | | 82 | 100175 | COUPLING, pipe | 2 |
| | | | | 83 | 511351 | MIXER, static | 2 |
| | | | | 84 | 108233 | VALVE, needle | 1 |
| | | | | 85 | 156823 | UNION, swivel | 1 |
| | | | | 86 | 965766 | VALVE, 1k-ul, machine mount | 1 |
| | | | | 90 | 101353 | NIPPLE, pipe | 1 |
| | | | | 91 | 157416 | UNION, swivel, 90° | 1 |
| | | | | 92 | 158491 | FITTING, nipple | 1 |
| | | | | 93 | 501459 | VALVE, toggle, air | 1 |
| | | | | 94 | 110460 | FITTING, el male swivel, 10-32x5/32 | 1 |
| | | | | 95 | 598140 | FITTING, elbow 5/32t x 1/8 in. npt(m) | 1 |
| | | | | 96 | 510220 | VALVE, air 4-way spring 1/4 npt | 1 |
| | | | | 97 | 104165 | FITTING, tube | 2 |
| | | | | 98 | 164815 | FITTING, adapter, tee | 1 |
| | | | | 99 | 503279 | FITTING, union straight 1/8 in. mx f sw | 1 |
| | | | | 100 | 112013 | NOZZLE, needle | 1 |
| | | | | 101 | 112014 | NOZZLE, needle | 2 |
| | | | | 102 | 112015 | NOZZLE, needle | 2 |
| | | | | 103 | 112020 | NOZZLE, needle | 2 |
| | | | | 104 | 112021 | NOZZLE, needle | 2 |
| | | | | 105 | 112022 | NOZZLE, needle | 2 |
| 1 | 159841 | ADAPTER | 3 | | | | |
| 2 | 114112 | FITTING, connector, female | 1 | | | | |
| 3 | 100030 | BUSHING | 1 | | | | |
| 4 | 626748 | BRACKET, mount disp valv C24342 | 1 | | | | |
| 5 | 552204 | ACTUATOR, air 8900 metered shot | 1 | | | | |
| 6 | C30021 | BOLT, u | 2 | | | | |
| 7 | 155699 | ELBOW, street | 1 | | | | |
| 8 | 100615 | BUSHING, hex steel | 1 | | | | |
| 9 | 159801 | UNION, swivel, 90° | 1 | | | | |
| 10 | 504327 | HOSE, nylon 3/4 in. id | 4 | | | | |
| 11 | 504621 | COUPLING, hose | 4 | | | | |
| 12 | 166590 | ELBOW, street | 2 | | | | |
| 13 | 160327 | UNION, | 2 | | | | |
| 14 | 175013 | NIPPLE, pipe | 1 | | | | |
| 15 | 512442 | HOSE, bulk 1/2 in. nylon 3500 psi | 8 | | | | |
| 16 | 503917 | COUPLINE, hose, 1/2 npt(m) x 1/2, 3903 | 8 | | | | |
| 17 | 105281 | UNION, swivel 45° | 1 | | | | |
| 18 | 512616 | HOSE, PTFE 1/4 x 18 ft 1/4 npsm | 1 | | | | |
| 19 | 500517 | FITTING, tee 3/4 in. npt | 1 | | | | |
| 20 | 158683 | FITTING, elbow, 90° | 5 | | | | |
| 24 | 100896 | FITTING, bushing, pipe | 5 | | | | |
| 25 | 155470 | UNION, swivel, 90° | 1 | | | | |
| 26 | 156684 | UNION, adapter | 2 | | | | |
| 27 | 100840 | ELBOW, street | 4 | | | | |
| 31 | 512912 | MUFFLER, polyethylene 1/2 npt | 2 | | | | |
| 32 | 156971 | NIPPLE, short | 5 | | | | |
| 33 | 626758 | MANIFOLD, block 8900 meter shot | 1 | | | | |
| 34 | 626757 | BLOCK, check 8900 metered shot | 1 | | | | |
| 35 | C26088 | VALVE, cone extension | 1 | | | | |
| 36 | C26086 | STOP, cone, assembly | 1 | | | | |
| 37 | 133374 | SCREW, machine, rdh | 4 | | | | |
| 38 | 105192 | SCREW, cap, hex head | 1 | | | | |
| 40 | C24017 | ROD, trip, valve | 1 | | | | |
| 41 | C20068 | PIN, spring | 2 | | | | |
| 42 | C24018 | COLLAR, stop | 2 | | | | |
| 43 | C24020 | COLLAR, clamp | 1 | | | | |
| 44 | 598729 | FITTING, elbow, male, 90° | 6 | | | | |
| 45 | 513066 | TUBE, 3/8 in. OD nylon | 6 | | | | |
| 46 | C12509 | TUBE, nylon | 20 | | | | |
| 47 | 597151 | FITTING, elbow | 11 | | | | |
| 48 | 552211 | VALVE, pulse pneumatic | 2 | | | | |
| 49 | 593538 | VALVE, shuttle 1/8 npt(f) | 2 | | | | |
| 50 | 503028 | VALVE, air, push-pull | 1 | | | | |

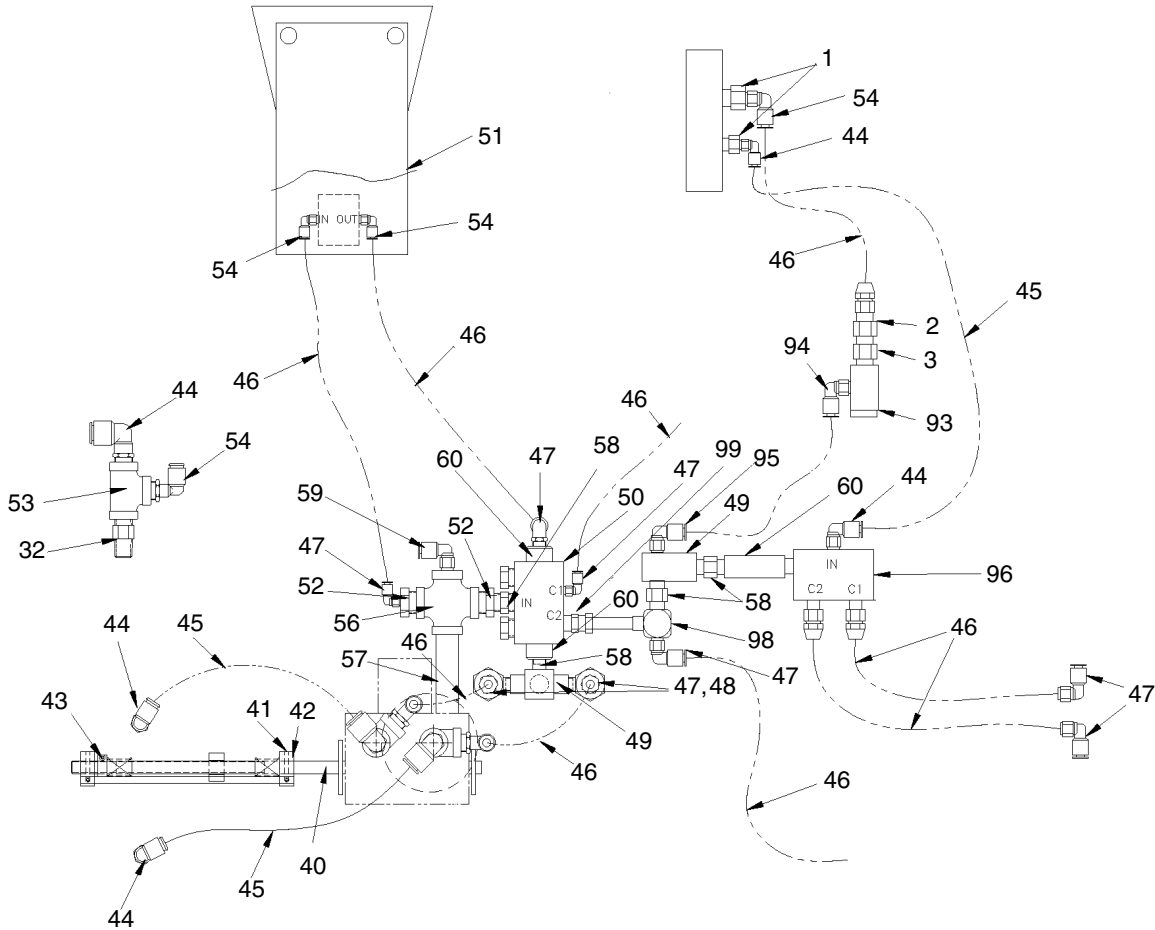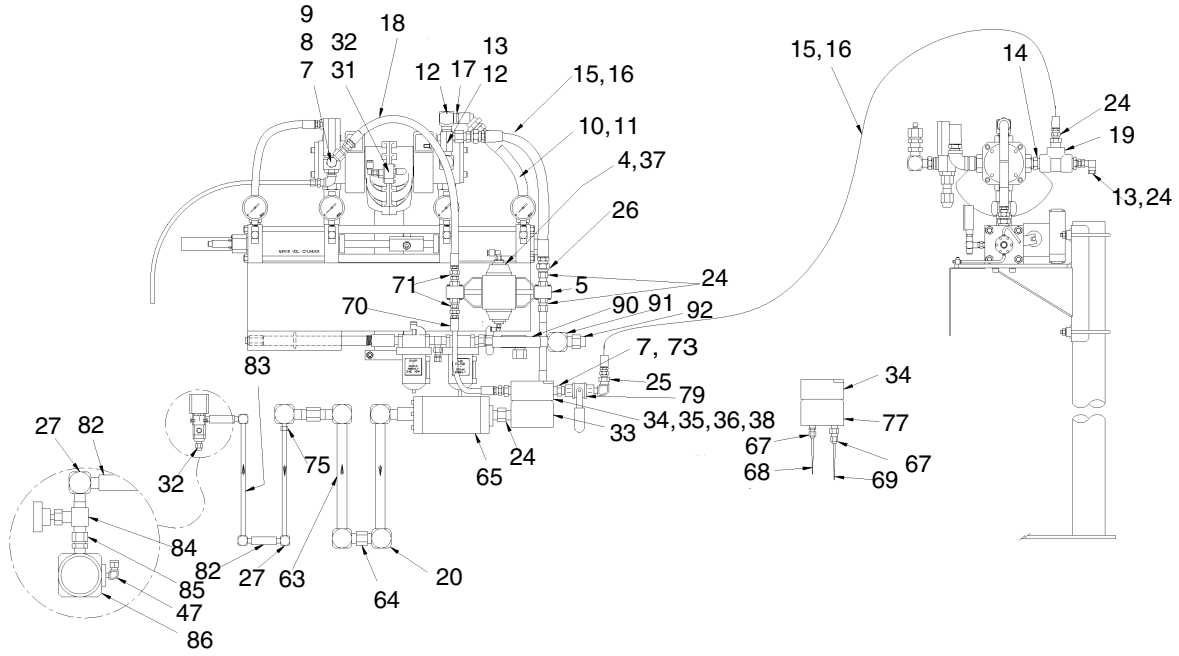



2K UltraLite 20 ft Automatic

(See Graco Manual 309000)

Wide Ratio Module No. 570144

Close Ratio Module No. 570362

| Ref. No. | Part No. | Description | Qty. | Ref. No. | Part No. | Description | Qty. |
|----------|----------|---|------|----------|----------|---|------|
| 1 | 570145 | VALVE, 2k2 aluminum machine mount wide ratio (507144) | 1 | 13 | 617467 | BUSHING, hex reducing 3/4 x 12 (570144) | 1 |
| | 965534 | VALVE, 2k-ultra lite, machine mount, sst (570362) | 1 | | 100896 | FITTING, bushing, pipe (570362) | 1 |
| 2 | 512291 | NUT, mixer | 2 | 14 | 160327 | UNION, adapter, 90° | 2 |
| 3 | 512016 | MIXER, 3/8 x 24 el dispos 10056-324 | 100 | 15 | 189018 | SWIVEL, 5800 pis (570144) | 1 |
| 4 | 503536 | FITTING, nipple, reducing, mod. | 1 | 16 | 598140 | FITTING, elbow 5/32T x 1/8 in. npt(m) | 4 |
| 5 | 155494 | UNION, swivel, 90° | 1 | 17 | 514607 | TUBE, nylon 2.5mm id red | 60 |
| 8 | H52525 | HOSE, fluid; nylon; 1/2 in. (13 mm) ID; 3/8 npsm(fbe); 25 ft (7.6 m) long | 1 | 18 | 552071 | SLEEVE, protective | 25 |
| 9 | 157350 | ADAPTER, 3/8 npt x 1/4 npt | 1 | 19 | 156970 | NIPPLE, short | 2 |
| 10 | 207946 | SWIVEL, straight | 1 | 20 | 104984 | TEE, pipe | 1 |
| 11 | 552026 | HOSE, PTFE/sst-10 hp 20 ft | 1 | 21 | 947937 | VALVE, injector #40 1/4 npt | 1 |
| 12 | 503931 | FITTING, adapter | 2 | 22 | 100721 | PLUG, pipe | 1 |
| | | | | 23 | 162449 | FITTING, nipple, reducing (570362) | 1 |

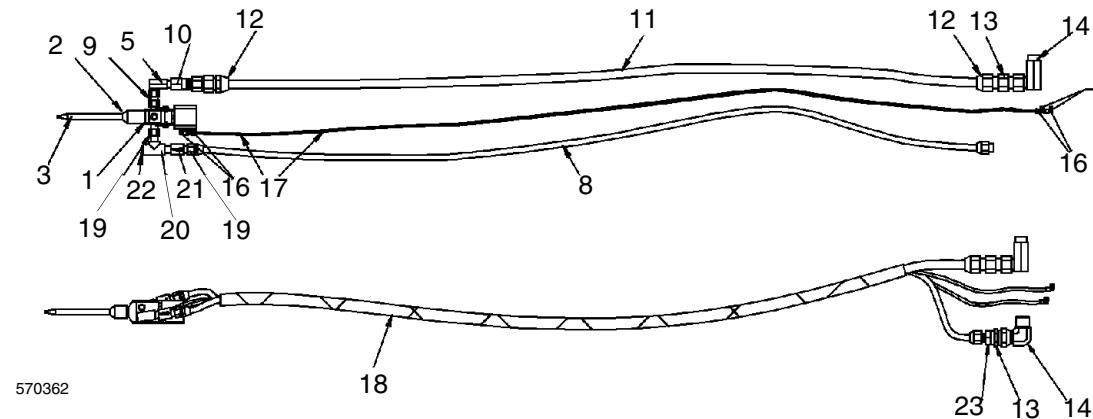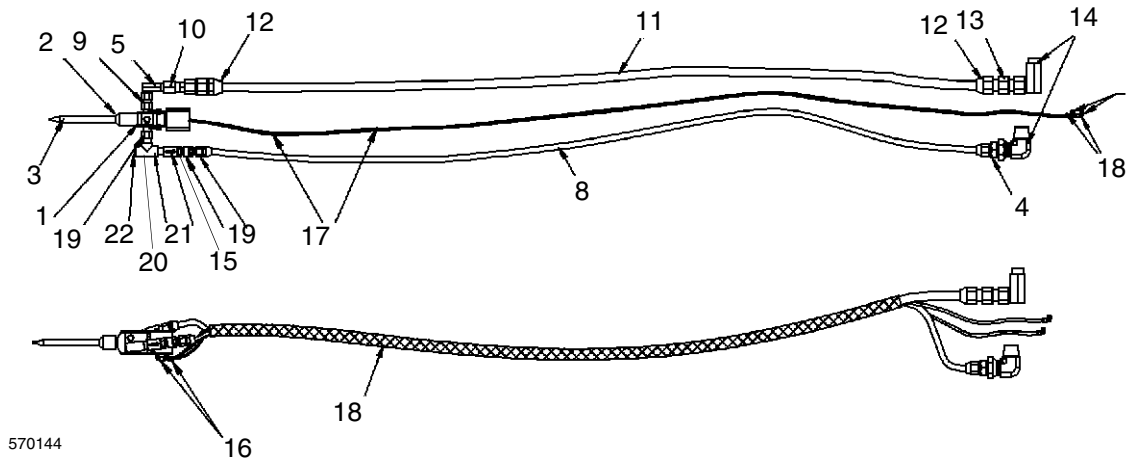


2K UltraLite 20 ft Hand Gun


Wide Ratio Module No. 570363

Close Ratio Module No. 570091

| Ref. | | | | Ref. | | | |
|------|----------|---|------|------|----------|--|------|
| No. | Part No. | Description | Qty. | No. | Part No. | Description | Qty. |
| 1 | 570182 | VALVE, 2k ultra lite, aluminum, hand gun, wide ratio (570363) | 1 | 9 | 157350 | ADAPTER, 3/8 npt x 1/4 npt | 1 |
| | 965535 | VALVE, 2k2, hand held, aluminum (570091) | 1 | 10 | 207946 | SWIVEL, straight | 1 |
| 2 | 512291 | NUT, mixer | 2 | 11 | H55010 | HOSE, fluid; nylon; 1/2 in. (13 mm) ID; 1/2 npsm(fbe); 10 ft (3.05 m) long | 2 |
| 3 | 512017 | NOZZLE, mixer | 50 | 12 | 158491 | FITTING, nipple | 3 |
| 4 | 162453 | NIPPLE, (1/4 npsm x 1/4 npt) | 2 | 13 | 100896 | FITTING, bushing, pipe | 1 |
| 5 | 157676 | UNION, swivel, 90° | 2 | 14 | 160327 | UNION, adapter, 90° | 2 |
| 6 | 501867 | VALVE, check | 2 | 15 | 503536 | FITTING, nipple, reducing, mod. | 1 |
| 7 | 205324 | HOSE, coupled, 61120, 1 ft | 1 | 16 | 598140 | FITTING, elbow 5/32t x 1/8 in. npt(m) | 2 |
| 8 | H52525 | HOSE, fluid; nylon; 1/2 in. (13 mm) ID; 3/8 npsm(fbe); 25 ft (7.6 m) long | 1 | 17 | 514607 | TUBE, nylon 2.5mm id red | 30 |
| | | | | 18 | 552071 | SLEEVE, protective | 25 |
| | | | | 19 | 189018 | SWIVEL, 5800 psi (570091) | 2 |

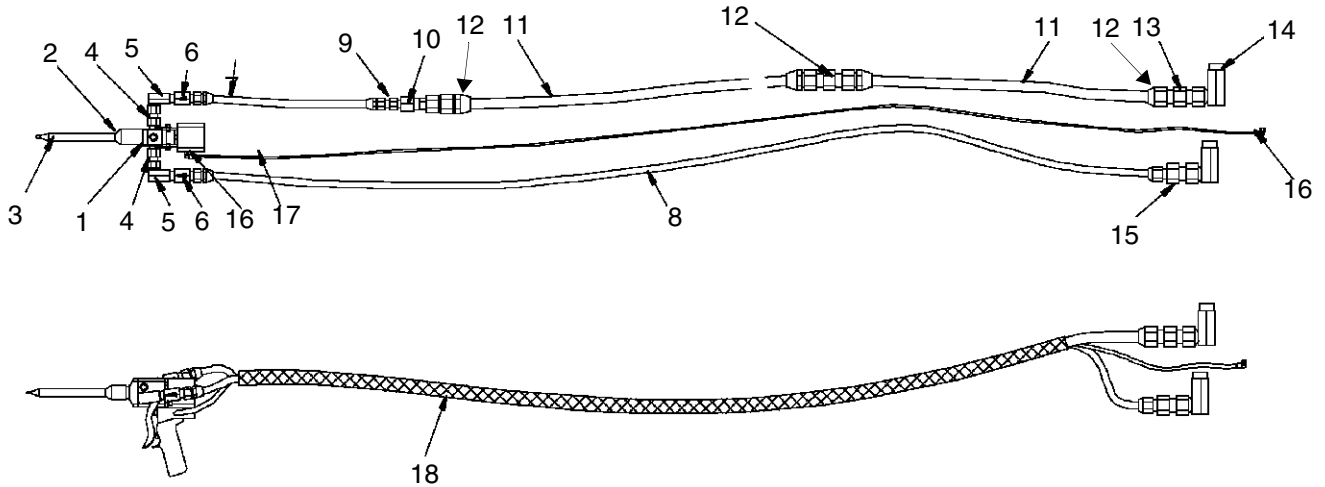

570363

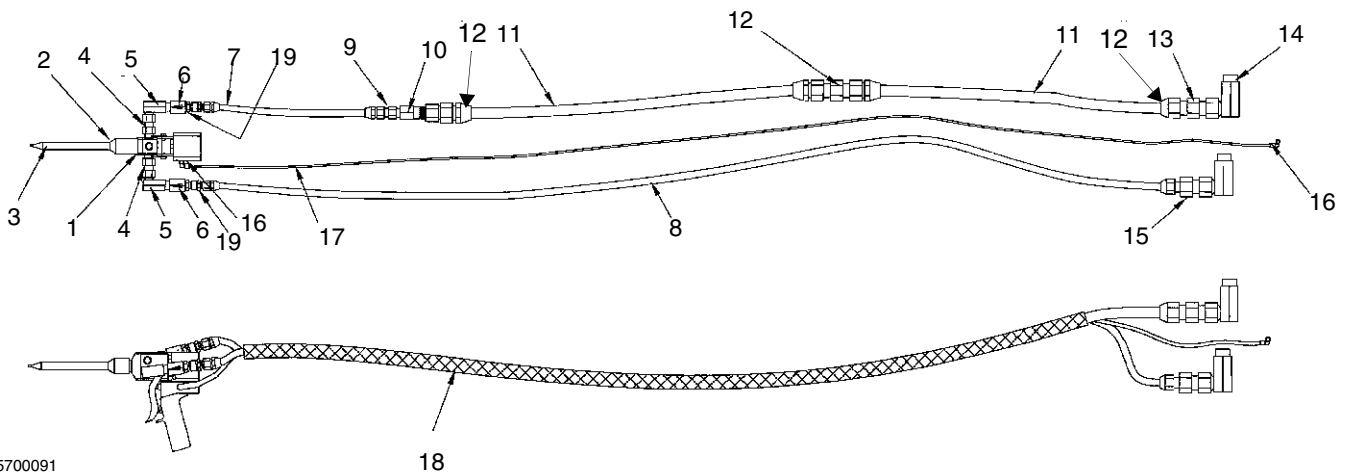


570091

2K UltraLite 15 ft Hand Gun Wide Ratio Moisture Lock

Module No. 246588

| Ref. No. | Part No. | Description | Qty. | Ref. No. | Part No. | Description | Qty. |
|----------|----------|---|------|----------|----------|---------------------------------------|------|
| 1 | 570182 | VALVE, 2k ultra lite, aluminum, hand gun, wide ratio (570363) | 1 | 12 | 157785 | FITTING, union, swivel | 1 |
| 2 | 189018 | SWIVEL, 5800 psi | 1 | 13 | 214925 | SWIVEL, hose | 2 |
| 3 | 512288 | MIXER, disposable .5 x 24 in. | 20 | 14 | 160327 | UNION, adapter, 90° | 1 |
| 4 | 162453 | NIPPLE, (1/4 nps(m) x 1/4 npt) | 4 | 15 | 503536 | FITTING, nipple, reducing, mod. | 2 |
| 5 | 155541 | UNION, swivel, 90° | 2 | 16 | 598140 | FITTING, elbow 5/32t x 1/8 in. npt(m) | 32 |
| 6 | 501684 | VALVE, check | 1 | 17 | 514607 | TUBE, nylon 2.5mm id red | 15 |
| 7 | 235905 | HOSE, coupled, 2.5 ft | 1 | 18 | 552071 | SLEEVE, protective | 1 |
| 8 | 514428 | HOSE, 1/4 in. PTFE x 10 ft | 2 | 19 | 512297 | SLEEVE, mixer jacket | 1 |
| 9 | 162024 | COUPLING | 1 | 20 | 155570 | UNION, swivel | 1 |
| 10 | 161490 | COUPLING, reducing | 1 | 21 | 947937 | VALVE, injector #40 1/4 in. not | 1 |
| 11 | 512247 | HOSE, 5/8 PTFE 7.5 ft 3/4 npt(m) | 2 | 22 | 100730 | BUSHING | 1 |

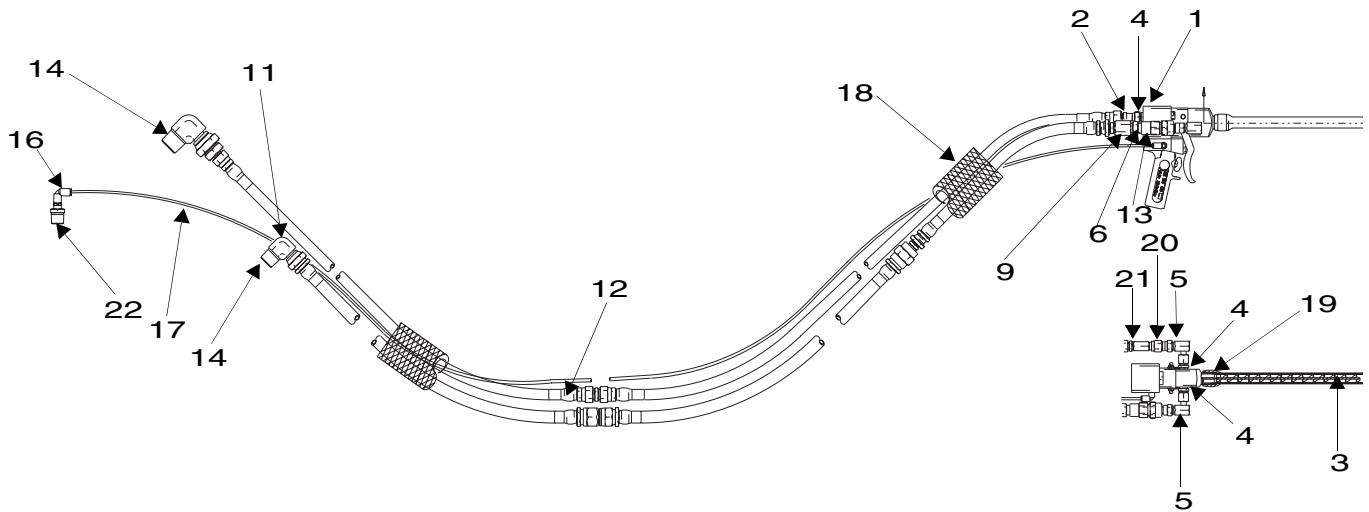


TI3262A

High Volume Static Mix Manifold

Module No. 570391

| Ref. No. | Part No. | Description | Qty. | Ref. No. | Part No. | Description | Qty. |
|----------|----------|---------------------|------|----------|----------|--|------|
| 1 | 157785 | UNION, swivel | 2 | 7 | 501392 | FITTING, cross 3/4 in. npt cs 2000 psi | 1 |
| 2 | 512151 | VALVE, ball | 2 | 8 | 100896 | FITTING, bushing, pipe | 1 |
| 3 | 175013 | NIPPLE, pipe | 4 | 9 | 156823 | UNION, swivel | 1 |
| 4 | 235497 | VALVE, check | 2 | 10 | 214037 | VALVE, ball | 1 |
| 5 | 160327 | UNION, adapter, 90° | 2 | 11 | 204938 | HOSE, coupled, 61120, 25 ft | 1 |
| 6 | 100615 | BUSHING, hex steel | 1 | | | | |

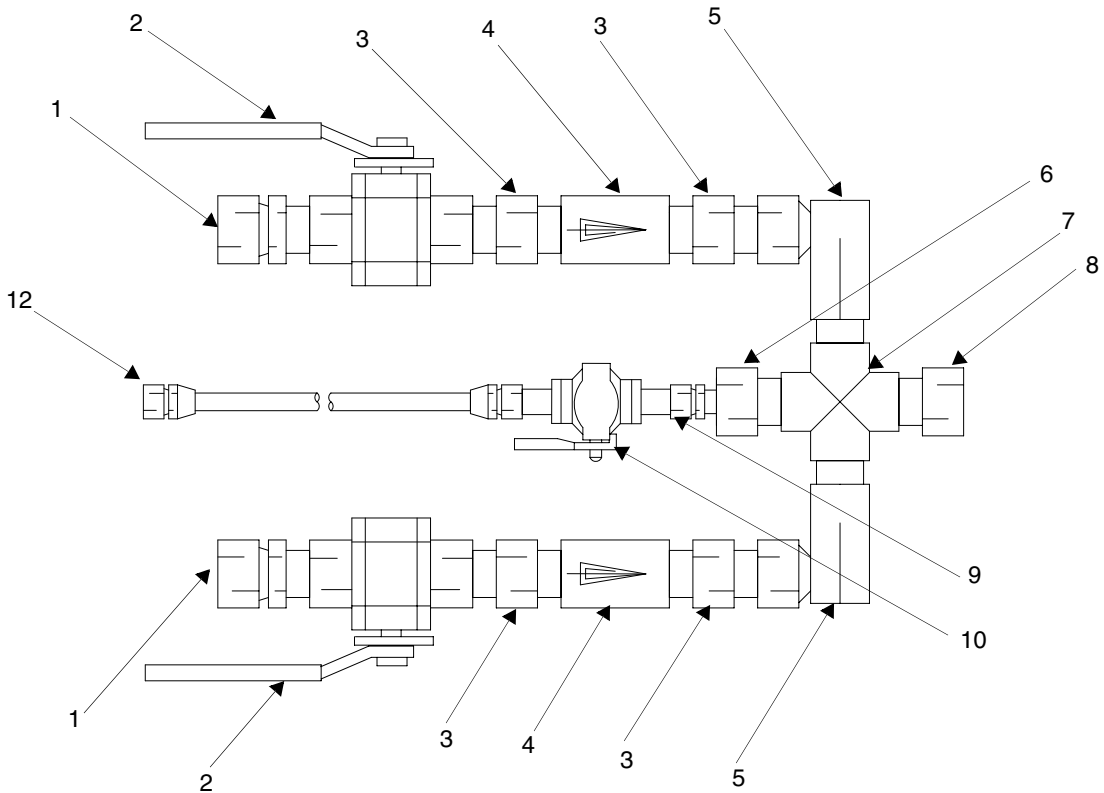


TI3261A

High Volume Static Mix Kit with Pump Pilots

Module No. 570263



| Ref. No. | Part No. | Description | Qty. | Ref. No. | Part No. | Description | Qty. |
|----------|----------|-----------------------------------|------|----------|----------|--------------------------------------|------|
| 1 | 504704 | FITTING, nipple, hex | 1 | 16 | 597151 | FITTING, elbow | 3 |
| 2 | 512152 | VALVE, ball 2000 psi 1 in. npt(f) | 1 | 17 | 502718 | FITTING, connector, male | 3 |
| 3 | 514058 | MIXER, pipe 1 in. x 12 | 3 | 18 | C12509 | TUBE, nylon | 80 |
| 4 | 158383 | FITTING, union, adapter, straight | 2 | 20 | 104632 | VALVE, piloted | 2 |
| 5 | 500946 | HOSE, 1 in. mbe | 1 | 21 | 512912 | MUFFLER, polyethylene 1/2 npt | 2 |
| 6 | 502766 | FITTING, cross 1 in. npt(f) sst | 1 | 22 | 158491 | FITTING, nipple | 2 |
| 7 | 160327 | UNION, adapter 90° | 2 | 23 | 103655 | FITTING, tee 1/8 brass | 1 |
| 8 | 175013 | NIPPLE, pipe | 4 | 26 | 104631 | VALVE, foot | 1 |
| 9 | 235497 | VALVE, check | 2 | 27 | 522071 | SLEEVE, protective; 2.1 ft | 1 |
| 10 | 157785 | UNION, swivel | 2 | 28 | C19391 | FITTING, elbow 1/4 npt x 1/4 od tube | 2 |
| 11 | 100615 | BUSHING, hex steel | 1 | 30 | 100474 | COUPLING; pipe | 1 |
| 12 | 156823 | UNION, swivel | 1 | 32 | 512151 | VALVE, ball | 2 |
| 13 | 214037 | VALVE, ball | 1 | 33 | 215238 | HOSE, coupled 61220 | 2 |
| 14 | 204938 | HOSE, coupled, 61120, 25 ft | 1 | 34 | 241358 | KIT, accessory | 1 |
| 15 | 158586 | FITTING, bushing | 3 | | | | |

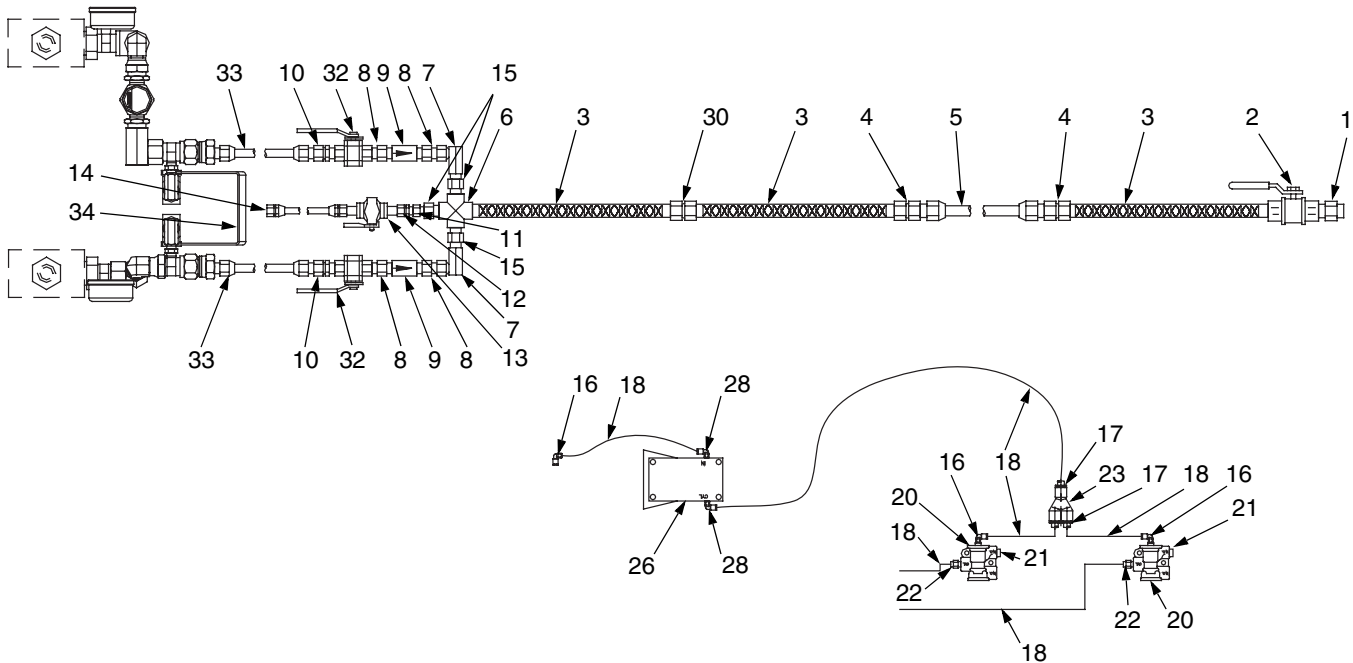

Stanchion

Module No. 570071


| Ref. No. | Part No. | Description | Qty. |
|----------|----------|-------------------|------|
| 1 | 167636 | BASE, ram | 1 |
| 2 | 167639 | BRACKET, cylinder | 4 |
| 3 | 176629 | CYLINDER, ram | 1 |
| 4 | 166552 | CAP, cylinder | 1 |

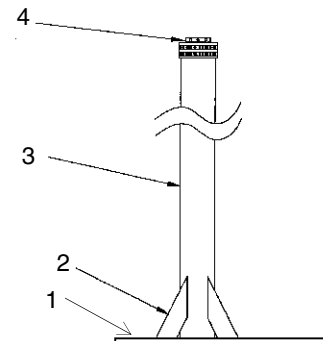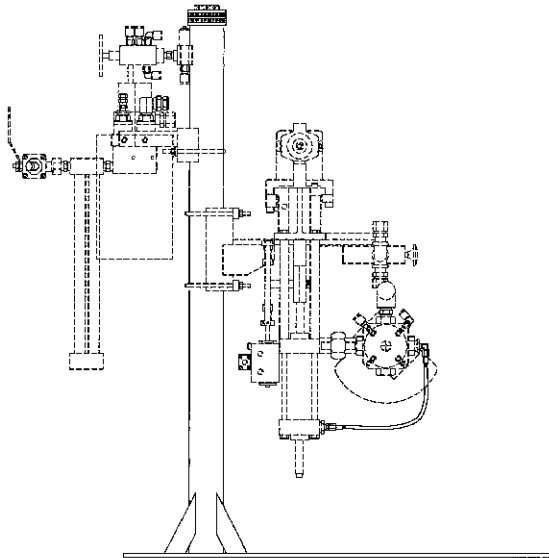

Boom Assembly

Module No. 246589

| Ref. No. | Part No. | Description | Qty. | Ref. No. | Part No. | Description | Qty. |
|----------|----------|-----------------------------------|------|----------|----------|-------------------------|------|
| 1 | 947039 | FRAME, boom, swivel, 55 gal | 1 | 10 | 622070 | BRACKET, boom | 1 |
| 2 | 158383 | FITTING, union, adapter, straight | 1 | 11 | 166590 | ELBOW, street | 2 |
| 3 | 157262 | WASHER, plain | 4 | 13 | 103473 | STRAP, tie, wire | 3 |
| 4 | 158555 | NIPPLE, reducing | 2 | 14 | 570071 | BASE, stacion mounting | 1 |
| 5 | 156971 | NIPPLE, short | 2 | 15 | 606937 | FITTING, bulkhead | 1 |
| 6 | 155495 | UNION, swivel, 90° | 1 | 16 | 100056 | NUT, jam hex | 1 |
| 7 | 156175 | FITTING, union, swivel | 2 | 17 | 202966 | FITTING, union, adapter | 1 |
| 8 | 552231 | HOSE, PTFE 1/4 x 12 ft 3000 psi | 1 | 18 | 100896 | FITTING, bushing, pipe | 1 |
| 9 | 500946 | HOSE, 1 in. mbe | 1 | 19 | 160032 | NIPPLE | 1 |
| | | | | 20 | 166999 | FITTING, elbow, street | 1 |

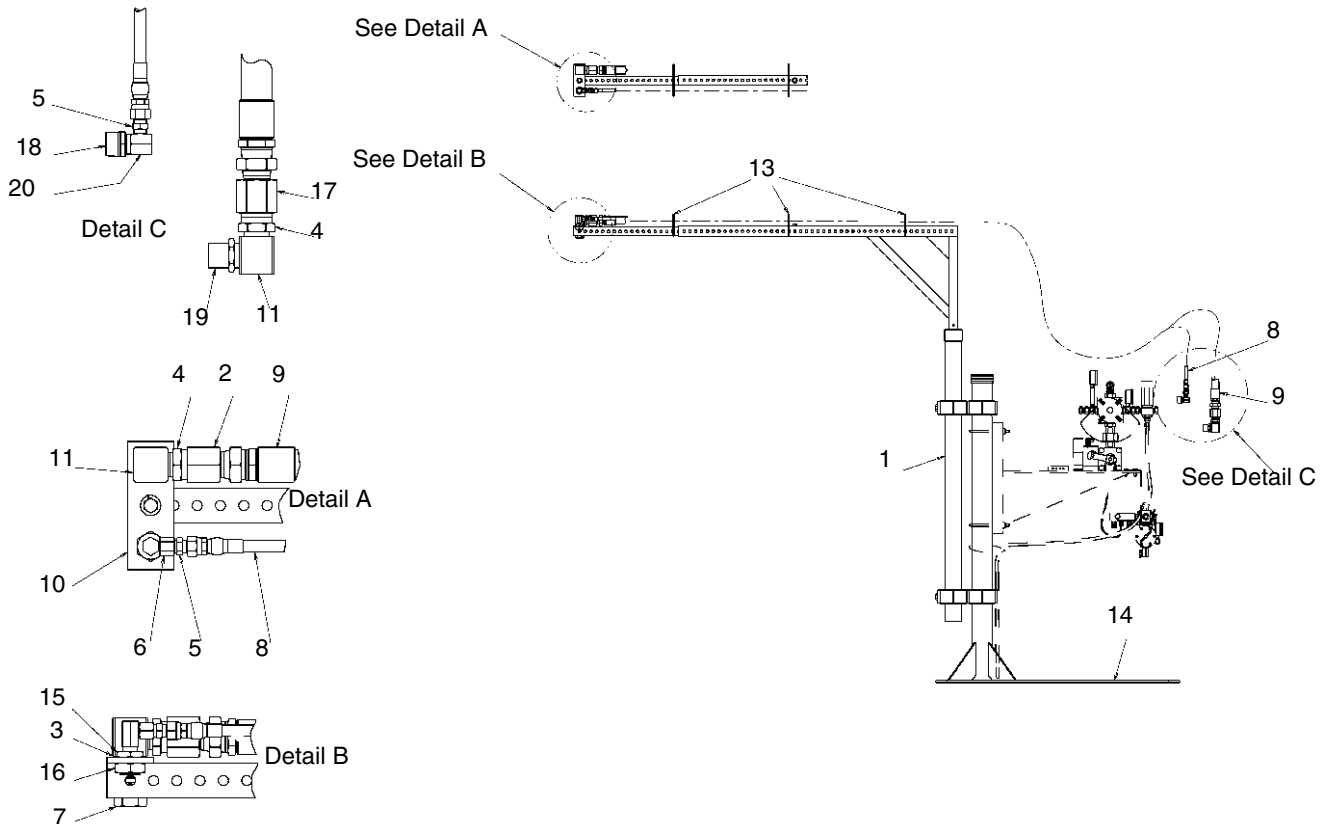

Technical Data

| | |
|---|--|
| Maximum system working pressure | 2500 psi (17 MPa, 170 bar) |
| Maximum air input pressure | 100 psi (0.7 MPa, 7 bar) |
| Main air inlet size (8900 Proportioner) | 3/4 npsm(f) |
| 8900 Proportioner outlet size | |
| Component A Pump | 3/4 npsm(f) |
| Component B Pump | 3/4 npsm(f) |
| 8900 Proportioner inlet size | |
| Component A Pump | 3/4 npsm(f) |
| Component B Pump | 3/4 npsm(f) |
| 8900 Proportioner wetted parts | Carbon steel, stainless steel, zinc, black oxide, PTFE, fluoroelastomer, electroless nickel, aluminum, nylon |



- Refer to pump Output Charts on pages 16-18 for ratio adjustment and displacement pump part number information.
- For additional wetted parts information and technical data, refer to your separate component manuals.

Accessories

570264 President 10:1 mounted on a 5 gallon (19 liter) pail.
 Used for solvent flush of mix kit assembly.

Repair Kits for A and B Metering Cylinders

| Size | Meter Repair Kit | Cup (Order 2) | Ratio Cylinder | Ratio Kit* |
|-------|---------------------|------------------|-------------------|---------------|
| #1000 | C24166 | C05032 | C23136 | C23041 |
| #500 | C24166 | C23350 | C23200 | C23087 |
| #250 | C24166 | C23318 | C23171 | C23067 |
| #111 | C24166 | 15C181 | 15C180 | |
| #100 | C24166 | C22282 | C23137 | C23042 |

Repair Kits for All Proportioners

| For Part Number | Repair Kit | Replacement Parts |
|------------------------------------|---------------|--|
| Actuator C24046 | | C24047 |
| 4-Way Valve, 3/16 in. C24039 | C07067 | C07069 Trunion 3/16 in. inside port |
| 4-Way Valve, 5/8 in. C24029 | C07067 | C07068 Trunion 5/8 in. inside port. |

Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

Graco Information

TO PLACE AN ORDER, contact your Graco distributor, or call this number to identify the distributor closest to you:

1-800-328-0211 Toll Free

612-623-6921

612-378-3505 Fax

*All written and visual data contained in this document reflects the latest product information available at the time of publication.
Graco reserves the right to make changes at any time without notice.*

This manual contains English. MM 309790

Graco Headquarters: Minneapolis

International Offices: Belgium, China, Japan, Korea

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

www.graco.com

309790K 06/2003 Revised 11/2006